

INSERTS LIST POWERKEY PRO

Customized icons are available upon request

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	TRASPARENTE CLEAR	001		COFANO CHIUSURA HOOD CLOSED	020		ACQUARIO LIVEWELL	038
	ACCENSIONE POWER ON	002		COFANO APERTURA HOOD OPEN	021		DOCCIA SHOWER	039
	ACC ACC	003		TROMBA HORN	022		STRUMENTAZIONI INSTRUMENTS	040
	ACC 1 ACC 1	004		SPEED SPEED	023		ARIA CONDIZIONATA AIR CONDITIONED	041
	ACC 2 ACC 2	005		VAPORIZZATORE WATER SPRAY	024		SATELLITE SATELLITE	042
	ACQUA WATER	007		PROIETTORE SPOT LIGHT(S)	025		ECOSCANDAGLIO DEPTH SOUNDER	043
	PARALLELO BATTERIA BATTERY PARALLEL	008		FRECCIA ARROW	026		ELETTRICITÀ 12V ELECTRICITY 12V	044
	NAVIGAZIONE NAVIGATION	009		PTO PTO	027		POMPA DI SENTINA BILGE PUMP	045
	ANCORA ANCHOR	010		PTO: VELOCITÀ DI ROTAZIONE PTO: ROTATIONAL SPEED	028		POMPA SENTINA DI POPPA AFT BILGE PUMP	046
	TRIM SU TRIM UP	011		FARO LAMPEGGIANTE BEACON	029		POMPA SENTINA DI PRUA FWD BILGE PUMP	047
	TRIM GIÙ TRIM DOWN	012		LUCE PRINCIPALE MASTER LIGHT(S)	030		TERGICRISTALLO WIPER WASH	048
	LUCI DI CORTESIA COURTESY LIGHT(S)	013		FRECCIA ANTIORARIA RADIAL ARROW COUNTERCLOCKWISE	031		RADAR RADAR	049
	TERGICRISTALLO SINISTRO LEFT WIPER	014		FRECCIA ORARIA RADIAL ARROW CLOCKWISE	032		BLOCCO LOCK	050
	TERGICRISTALLO DESTRO RIGHT WIPER	015		LUCE CABINA CABIN LIGHT(S)	033		VENTILATORE DI SENTINA BILGE BLOWER	051
	NERO LASERIZZABILE LASER ETCHABLE SOLID BLK	016		LUCE POZZETTO CABIN LIGHT COCKPIT	034		TERMOVENTILATORE HEATER FAN	052
	ANTENNA ANTENNA	017		ANCORA SU ANCHOR UP	035		MACERATORE MACERATOR	053
	FRESA CUTTER	018		ANCORA GIÙ ANCHOR DOWN	036		RIFORNIRE SERBATOIO TANK FILL	054
	AVVIAMENTO MOTORE ENGINE START	019		RADIO RADIO, STEREO	037		SCOLARE SERBATOIO TANK DRAIN	055

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	DIFFUSORI / LUCI DA LAVORO SPREADER / WORK LIGHT(S)	056		LAVACRISTALLO & LIQUIDO WINDSHIELD WASHER & FLUID	074		VERRICELLO AVVOLGERE WINCH, SPOOL IN	092
	NAVIGAZIONE / ANCORA NAVIGATION / ANCHOR	057		LAVACRISTALLO FINESTRA POST. REAR WINDOW WASHER / WIPER	075		UTENSILE TAGLIO CUTTING ELEMENT	093
	LUCE STRUMENTAZIONE INSTRUMENTS LIGHT(S)	058		SBRINATORE LUNOTTO POSTERIORE REAR WINDOW DEFROSTER	076		ALZA UTENSILE TAGLIO MOWER DECK RAISE	094
	PLAFONIERA DOME LIGHT(S)	059		PENDENZA BENNA AVANTI HEADER, TILT FORWARD	077		ABBASSA UTENSILE TAGLIO MOWER DECK LOWER	095
	ANNULLA CANCEL DISPLAY	060		PENDENZA BENNA INDIETRO HEADER, TILT REARWARD	078		ABBASSA CASSONE LOWER BED	096
	RESET RESET	061		LAMA, SOLLEVARE DOZER BLADE, RAISE	079		ALZA CASSONE RAISE BED	097
	ACCESO / SPENTO ON / OFF	062		LAMA, ABBASSARE DOZER BLADE, LOWER	080		AUTOMATICO/MANUALE (A/M) AUTO/MANUAL (A/M)	098
	IMPOSTAZIONI DI ATTIVAZIONE ACTIVATION SETTINGS	063		ESCAVATORE, BRACCIO, SOLLEVARE EXCAVATOR/BACKHOE, BOOM, RAISE	081		FINESTRINO SINISTRO GIÙ WINDOW DOWN LEFT	099
	ARRESTO MOTORE ENGINE STOP	064		ESCAVATORE, BRACCIO, ABBASSARE EXCAVATOR/BACKHOE, BOOM, LOWER	082		FINESTRINO SINISTRO SU WINDOW UP LEFT	100
	AVVIAMENTO MOTORE ENGINE RUN	065		BENNA SOLLEVARE LOADER BUCKET, RAISE	083		FINESTRINO DESTRO GIÙ RIGHT WINDOW DOWN	101
	FRIZIONE CLUTCH	066		BENNA ABBASSARE LOADER BUCKET, LOWER	084		FINESTRINO DESTRO SU RIGHT WINDOW UP	102
	FRENO A MANO PARK BRAKE	067		BENNA MORDENTE APRIRE CLAMSHELL BUCKET OPEN	085		LUCE DI SENTINA BILGE LIGHT(S)	103
	ABBAGLIANTI FASCIO ALTO HEAD LIGHT(S) / HIGH BEAM	068		BENNA MORDENTE CHIUDERE CLAMSHELL BUCKET CLOSE	086		ACQUA FRESCA FRESH WATER	104
	ANABBAGLIANTI FASCIO BASSO HEAD LIGHT(S) / LOW BEAM	069		RAGNO APERTO GRAPPLE OPEN	087		ACQUA SALATA SALT WATER	105
	LUCI DI PARCHEGGIO PARKING LIGHT(S)	070		RAGNO CHIUSO GRAPPLE CLOSE	088		LUCE SUBACQUEA UNDERWATER LIGHT(S)	106
	SPIA DI EMERGENZA / PERICOLO HAZARD WARNING LIGHT(S)	071		SEGA CIRCOLARE, FUORI CIRCULAR SAW, OUT	089		LUCE TIMONE HELM LIGHT(S)	107
	LUCI DI POSIZIONE CLEARANCE LIGHT(S) C.J006	072		SEGA CIRCOLARE, DENTRO CIRCULAR SAW, IN	090		PROIETTORE POSTERIORE AFT FLOOD LIGHT	108
	LUCE NOTTURNA STRUMENTAZIONI NIGHT TIME INSTRUMENTAL LIGHT	073		VERRICELLO SROTOLARE WINCH, SPOOL OUT	091		PROIETTORI ANTERIORI FWD FLOOD LIGHT	109

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	LUCI PONTE ANTERIORI FWD DECK LIGHT	110		SOS SOS	138		VELOCITÀ MEDIA MEDIUM SPEED	156
	BABORDO PRUA GIÙ PORT BOW DOWN	111		BABORDO TERGICRISTALLO ON PORT WIPER ON	139		ERPICE ROTANTE RIDGE CUTTER	157
	TRIBORDO PRUA GIÙ STBD BOW DOWN	112		BABORDO TERGICRISTALLO OFF PORT SIDE WIPER OFF	140		TRITURATORE SHREDDER	158
	BABORDO PRUA SU PORT BOW UP	113		DRITTA TERGICRISTALLO ON STARBOARD WIPER ON	141		MAGNETE MAGNET	159
	TRIBORDO PRUA SU STBD BOW UP	114		DRITTA TERGICRISTALLO OFF STARBOARD WIPER OFF	142		MARTELLO DEMOLIZIONE DEMOLITION HAMMER	160
	LUCE DI NAVIGAZIONE TXT NAVIGATION LIGHT(S) TXT	115		POMPA SERVIZI GENERALI GENERAL SERVICE PUMP	143		ALLARME ALARM	161
	LUCE DALAVORO WORK LIGHT(S)	116		VELOCITÀ BASSA SLOW SPEED	144		OFF OFF	162
	PANNELLO DIMMER PANEL DIMMER	117		MODALITÀ DI STERZATA STEERING MODE	145		ANTINEBBIA FOG	163
	BABORDO TERGICRISTALLO ON PORT WIPER ON	118		CONTROLLO OPERATORE OPERATOR CONTROL	146		RETRONEBBIA REAR FOG	164
	BABORDO TERGICRISTALLO OFF PORT WIPER OFF	119		MODALITÀ LAVORO/VIAGGIO WORK/TRAVEL MODE	147		RISCALDAMENTO SPECCHIO MIRROR HEATER	165
	MID TERGICRISTALLO ON MID WIPER ON	120		ASSE RILASCIO AXLE RELEASE	148		SEGNALE D'ARRESTO STOP SIGN	166
	MID TERGICRISTALLO OFF MID WIPER OFF	121		BLOCCO ASSE AXLE LOCK	149		PARCHEGGIO PARK	167
	DRITTA TERGICRISTALLO ON STBD WIPER ON	122		RIENTRO CABINA CABIN IN	150		MOTORE START/STOP ENGINE START/STOP	168
	DRITTA TERGICRISTALLO OFF STBD WIPER OFF	123		USCITA CABINA CABIN OUT	151		TERMO VENTILATORE 1 HEATER FAN 1	169
	SALA MACCHINE DI SCARICO ENGINE ROOM EXHAUST	124		STERZO ANTERIORE/POSTERIORE FRONT STEERING	152		TERMOVENTILATORE 2 HEATER FAN 2	170
	RESET RESET	125		STERZO PARALLELO PARALLEL STEERING	153		TERMOVENTILATORE 3 HEATER FAN 3	171
	MESSAGGIO MESSAGE	136		STERZO CONVERGENTE CONVERGING STEERING	154		NUMERO 1 NUMERAL 1	172
	MONITOR MONITOR	137		BASSA VELOCITÀ SLOW SPEED	155		NUMERO 2 NUMERAL 2	173

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	NUMERO 3 NUMERAL 3	174		IMPOSTAZIONE LAMA BLADE SETTING	B192		SIMULAZIONE STABILITÀ STABILITY SIMULATION	B210
	NUMERO 4 NUMERAL 4	175		DISPOSITIVI AUSILIARI AUXILIARY DEVICES	B193		DECELERA DECELERATES	B211
	NUMERO 5 NUMERAL 5	176		LAVAGGIO A UGELLI SCREW WASH SYSTEM	B194		AVVIO/ARRESTO MOTORE ENGINE START/STOP	B212
	NUMERO 6 NUMERAL 6	177		LAVAGGIO A RUOTA WHEEL WASH SYSTEM	B195		ACCELERA ACCELERATE	B213
	NUMERO 7 NUMERAL 7	178		LUCE BIDONE NEVE SNOWBIN LIGHT	B196		VIBRO VIBRATE	B214
	NUMERO 8 NUMERAL 8	179		AVANTI SECONDA VELOCITÀ FORWARD SECOND SPEED	B197		POMPAGGIO PUMPING	B215
	NUMERO 9 NUMERAL 9	180		INDIETRO SECONDA VELOCITÀ BACKWARD SECOND SPEED	B198		ARRESTO POMPAGGIO STOP PUMPING	B216
	POSIZIONE FASCIO BEAM POSITIONS	181		4WD 4WD	B199		RISUCCHIO SUCTION	B217
	BATTIPALO PILE DRIVER	182		FRECCIA (PRIMA ALTERNATIVA) ARROW (FIRST ALTERNATIVE)	B200		MESCOLATORE ORARIO MIXER CLOCKWISE	B218
	PROIETTORE POSTERIORE DX AFT FLOOD LIGHT - RIGHT	183		NEUTRO NEUTRAL	B201		ARRESTO MESCOLATORE STOP MIXER	B219
	PROIETTORE PROIETTORE SX AFT FLOOD LIGHT - LEFT	184		RPM SET RPM SET	B202		MESCOLATORE ANTIORARIO MIXER ANTICLOCKWISE	B220
	LETTERA D LETTER D	185		RALLENTATORE SLOW MOTION	B203		CONTROLLO MOTORE MOTOR CHECK	B221
	LETTERA R LETTER R	186		POMPA ACQUA WATER PUMP	B204		MOTORE DECREMENTO MOTOR DECREASE	B222
	DOSAGGIO ACQUA AUTOMATICO AUTOMATIC WATER DOSAGE	B187		CIRCOLAZIONE ARIA APERTA OPEN AIR CIRCULATION	B205		MOTORE INCREMENTO MOTOR INCREASE	B223
	RISCALDAMENTO PARABREZZA WINDSHIELD HEATING	B188		SBLOCCA FUNZIONI UNLOCK FUNCTIONS	B206		INVERSIONE REVERSE	B224
	SEDILE RISCALDATO SEAT HEATING	B189		W. FASCIO W. BEAM	B207		AVVIO/ARRESTO MOTORE MOTOR ON/OFF	B225
	LAVAGGIO BIDONE NEVE SNOWBIN WASH SYSTEM	B190		RDC LATO 1 RDC SIDE 1	B208		AVVIO, SIMBOLO - START, SYMBOL -	B226
	LAVAGGIO GHIACCIO ICE WASH SYSTEM	B191		SIMULAZIONE DI RECUPERO RECOVERY SIMULATION	B209		SPEGNIMENTO STOP	B227

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AVVIO/SPEGNIMENTO START/STOP	B228		STABILIZZATORE STABILIZER	B246		STABILIZZATORE ATTIVAZIONE SX LEFT STABILIZER ENABLE	B264
	AVVIO/SPEGNIMENTO/PAUSA START/STOP/PAUSE	B229		STABILIZZATORE SU STABILIZER UP	B247		VENTOLA FAN	B265
	RESET RESET	B230		STABILIZZATORE FUORI STABILIZER OUT	B248		STOP MOTORE ELETTRICO STOP ELECTRIC MOTOR	B266
	SCAVATRICE DIGGER	B231		STABILIZZATORE DENTRO STABILIZER IN	B249		STOP MOTORE DIESEL STOP DIESEL MOTOR	B267
	FILTRO OLIO IDRAULICO HYDRAULIC OIL FILTER	B232		STABILIZZATORE GIÙ STABILIZER DOWN	B250		ATTIVAZIONE RADIOCOMANDO START REMOTE CONTROL	B268
	EFFICIENZA FRENI PERFORMANCE BRAKES	B233		LD LD	B251		ALLONTANA SEND AWAY	B269
	ROTAIA REEL	B234		HD HD	B252		AVVICINA BRING NEAR	B270
	MOTORE MOTOR	B235		ESSICCATORE BLOW DRY	B253		AGITATORE MIXER	B271
	APERTURA UTENSILE OPEN TOOL	B236		SVM IN SVM IN	B254		RICIRCOLO RECIRCLE	B272
	MOTORE ROTAZIONE MOTOR ROTATE	B237		SVM ESTERNO SVM EXTERN	B255		STABILIZZATORE ROSSO OUTRIGGER RED	B273
	BENNA CLAMSHELL	B238		SVM 1% SVM 1%	B256		STABILIZZATORE BLU OUTRIGGER BLUE	B274
	MAGNETE START START MAGNET	B239		SVM 3% SVM 3%	B257		STABILIZZATORE GIALLO OUTRIGGER YELLOW	B275
	CESOIA CUTTER	B240		SVM ESERCIZIO SVM PRACTICE	B258		STABILIZZATORE VERDE OUTRIGGER GREEN	B276
	MAGNETE DESTRA MAGNET RIGHT	B241		MENU HOME MENU HOME	B259		AVVIO MOTORE START MOTOR	B277
	MAGNETE SINISTRA MAGNET LEFT	B242		SCALA SU LADDER RACK UP	B260		TORRE IN POSIZIONE DI RIENTRO TOWER IN CLOSING POSITION	B278
	40' 40'	B243		SCALA GIÙ LADDER RACK DOWN	B261		GO / TROMBA GO / HORN	B279
	20' 20'	B244		VUOTO BLANK	B262		PULSANTE DI EMERGENZA PREMUTO EMERGENCY BUTTON PRESSED	B280
	BLOCCO APERTURA OPEN LOCK	B245		BLOCCO TRAZIONE TRANSFER LOCK	B263		PIATTAFORMA POSIZIONE RIENTRO RETRIEVAL POSITION PLATFORM	B281

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	CONSENSO E ARRESTO TRASLAZIONE CONSENT AND STOP TRAVERSING MANEUVER	B282		CONSENSO E ARRESTO TRASLAZIONE CONSENT/STOP TRAVERSING MANEUVER	B300		RIENTRA CASSONE LOWER BED	B318
	CONSENSO MANOVRE PIATTAFORMA CONSENT PLATFORMS MANEUVERS	B283		CONSENSO MANOVRE PIATTAFORMA CONSENT PLATFORMS MANEUVERS	B301		ALZA CASSONE RAISE BED	B319
	FILTRI OLIO INTASATI OIL FILTER CLOGGED	B284		FILTRI OLIO INTASATI OIL FILTERS CLOGGED	B302		ABBASSA CASSONE DROP BED	B320
	ARRESTO TRASLAZIONE STOP TRAVERSING MANEUVER	B285		PRESENZA TENSIONE VOLTAGE TURN-OUT	B303		ABILITA COMANDI CONTROLS ENABLE	B321
	ROTAZIONE NASTRO CARICO ROTATION LOAD TAPE	B286		AVVIO/ARRESTO MOTORE START/STOP MOTOR	B304		ABILITA CASSONE ACTIVATE BED	B322
	ROTAZIONE NASTRO SCARICO ROTATION UNLOAD TAPE	B287		AVVIO/ARRESTO GENERATORE START/STOP GENERATOR	B305		SCUOTI FILTRO FILTER SHAKE	B323
	PROTEZIONE FRESA CUTTER PROTECTION	B288		AVVIO/ARRESTO MOTORE ELETTRICO START/STOP ELECTRIC ENGINE	B306		LETTERA "H" LETTER "H"	B324
	SPECCHIO IDRAULICO HYDRAULIC MIRROR	B289		INSERTO NEUTRALE (NEGATIVO) NEUTRAL INSERT (NEGATIVE)	B307		SCARICO BETONIERA MIXER UNLOADING	B325
	APRI PORTA DOOR OPEN	B290		ROTAZIONE SPAZZOLA + BRUSH ROTATION +	B308		CARICO BETONIERA MIXER LOADING	B326
	ARRESTO TRASLAZIONE STOP TRAVERSING MANEUVER	B291		ROT. SPAZZOLA - BRUSH ROT. -	B309		STOP BETONIERA DRUM MIXER STOP	B327
	USCITA TAPPETO SX EXIT OF CARPET (LEFT)	B292		SPAZZOLA SINISTRA SU GIÙ UP/DOWN LEFT BRUSH	B310		SONDA LIVELLO PROBE	B328
	USCITA TAPPETO DX EXIT OF CARPET (RIGHT)	B293		SPAZZOLA DESTRA SU GIÙ UP/DOWN RIGHT BRUSH	B311		APERTURA MORSA CLAMP OPEN	B329
	ROTAZIONE TAPPETO SX ROTATION OF CARPET (LEFT)	B294		INVERSIONE TRASPORTO TRANSPORT INVERSION	B312		CHIUSURA MORSA CLAMP CLOSE	B330
	ROTAZIONE TAPPETO DX ROTATION OF CARPET (RIGHT)	B295		LAVAGGIO TRASPORTATORE TRANSPORT WASH	B313		NUMERO 0 NUMERAL 0	B331
	TORRE IN POSIZIONE DI RIENTRO TOWER IN CLOSING POSITION	B296		SOLLEVAMENTO SOSPENSIONI DAMPER LIFT	B314		COPPIA VARIABILE - GIÙ VARIABLE TORQUE DOWN	B332
	GO / TROMBA GO / HORN	B297		ABBASSA SOSPENSIONI DAMPER LOWER	B315		COPPIA VARIABILE - SU VARIABLE TORQUE UP	B333
	PULSANTE DI EMERGENZA PREMUTO EMERGENCY BUTTON PRESSED	B298		LIVELLAMENTO AUTO AUTO LEVELLING	B316		VELOCITÀ VARIABILE - GIÙ VARIABLE SPEED DOWN	B334
	PIATTAFORMA POSIZIONE DI RIENTRO RETRIEVAL POSITION PLATFORM	B299		RIBALTA CASSONE FLIP BED	B317		VELOCITÀ VARIABILE - SU VARIABLE SPEED UP	B335

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	MAX MAX	B336		ASSE STRADALE SU ROAD AXLE UP	B354		STABILIZZATORE DESTRO GIU RIGHT STABILIZER DOWN	B372
	SPAZZOLATRICE BRUSHING TOOL	B337		INCREMENTO PESO GOMME MORE WEIGHT ON TYRES	B355		SBLOCCO - LUCCHETTO APERTO UNLOCK - OPEN LOCK	B373
	UP DOWN CENTRALE UP DOWN MID	B338		JIB ANTIORARIO JIB CCW	B356		ACCELERA SCARICAMENTO SPEED UP DISCHARGE	B374
	EASY START EASY START	B339		JIB ORARIO JIB CW	B357		RALLENTA SCARICAMENTO SLOW DOWN DISCHARGE	B375
	SIMBOLO + SYMBOL +	B340		OUTHAUL IN OUTHAUL IN	B358		ACCELERA NASTRO SPEED UP CONVEYOR	B376
	CAFS WET CAFS WET	B341		OUTHAUL OUT OUTHAUL OUT	B359		RALLENTA NASTRO SLOW DOWN CONVEYOR	B377
	CAFS DRY CAFS DRY	B342		VANG IN VANG IN	B360		APRI NASTRO INFERIORE FOLD OUT LOWER CONVEYOR	B378
	FOAM FOAM	B343		VANG FUORI VANG OUT	B361		CHIUDI NASTRO INFERIORE FOLD UP LOWER CONVEYOR	B379
	ASSE FERROVIARIO GIU RAIL AXLE DOWN	B344		PATERAZZO DENTRO BACKSTAY IN	B362		ABBASSA NASTRO SUPERIORE LOWER UPPER CONVEYOR	B380
	ASSE FERROVIARIO SU RAIL AXLE UP	B345		PATERAZZO FUORI BACKSTAY OUT	B363		ALZA NASTRO SUPERIORE LIFT UPPER CONVEYOR	B381
	RESET RESET	B346		CESOIA SHEAR	B364		AVVIO-SPEGNIMENTO START-STOP	B382
	DOS MAX DOS MAX	B347		CARRELLO ANTERIORE FRONT GEAR	B365		CAMBIO DIREZIONE ROTORE CHANGED DIRECTION OF ROTOR	B383
	STOP STOP	B348		CARRELLO POSTERIORE REAR GEAR	B366		ROTORE LENTO ORARIO ROTOR SLOW CW	B384
	ABILITA BLOCCO AVVIAMENTO SHUNT LOCK SLEWING	B349		MAGNETE SU MAGNET UP	B367		ROTORE LENTO ANTIORARIO ROTOR SLOW CCW	B385
	BLOCCO PIATTAFORMA AEREA LOCK LIFT BOOM	B350		MAGNETE GIU MAGNET DOWN	B368		FRECCIA INVIO ENTER ARROW	B386
	BLOCCO AVVIAMENTO PIATTAFORMA SHUNT LOCK LIFT BOOM	B351		ABBASSA NASTRO TRAMOGGIA HOPPER EXTENSION FOLD IN	B369		AVVOLGICAVO VERRICELLO SU CABLE REWINDER WINCH UP	B387
	SOLLEVAMENTO MACCHINA MACHINE LIFT	B352		ALZA NASTRO TRAMOGGIA HOPPER EXTENSION FOLD OUT	B370		DISCESA AVVOLGICAVO CABLE REWINDER DOWN	B388
	BLOCCO ASSE FERROVIARIO LOCK RAIL AXLE	B353		STABILIZZATORE DESTRO SU RIGHT STABILIZER UP	B371		BLOCCO TORSIONE TWIST LOCK	B389

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	SBLOCCO TORSIONE TWIST UNLOCK	B390		GRUPPO DI CARICO LOADING GROUP	B408		SCAVATRICE ALZA DIGGER RAISE	B426
	FLAP SU FLAP UP	B391		ASPIRATORE SUCTION #2	B409		TRASMISSIONE AVANTI AXLE DRIVE FORWARD	B427
	FLAP GIU FLAP DOWN	B392		SOLLEVAMENTO CASSONE RAISE BED #2	B410		TRASMISSIONE INDIETRO AXLE DRIVE REVERSE	B428
	GANCIO LEGGERO LIGHT HOOK	B393		ABBASSAMENTO CASSONE LOWER BED #2	B411		AGITATORE ON AGITATION ON	B429
	STABILIZZATORE ANTERIORE SU FRONT STABILIZER UP	B394		APERTURA CASSONE OPEN BED	B412		AGITATORE OFF AGITATION OFF	B430
	STABILIZZATORE ANTERIORE GIU FRONT STABILIZER DOWN	B395		CHIUSURA CASSONE CLOSE BED	B413		DIVISORE NASTRO ALZA WEB SPLIT RAISE	B431
	STABILIZZATORE POSTERIORE SU REAR STABILIZER UP	B396		RIBALTAMENTO CASSONE TILT BED	B414		DIVISORE NASTRO ABBASSA WEB SPLIT LOWER	B432
	STABILIZZATORE POSTERIORE GIU REAR STABILIZER DOWN	B397		RIENTRO CASSONE STRAIGHTEN BED	B415		LIVELLA MACCHINA SINISTRA MACHINE LEVEL LEFT	B433
	BLOCCO ASSALE STRADA ROAD AXLE LOCK	B398		SCUOTI FILTRO #2 FILTER SHAKE #2	B416		LIVELLA MACCHINA DESTRA MACHINE LEVEL RIGHT	B434
	COMPRESSORE COMPRESSOR	B399		BYPASS FILTRO FILTER BYPASS	B417		NASTRO TRASPORTATORE ON CONVEYOR BELT ON	B435
	LUCI SALONE SALOON LIGHTS	B400		ACQUA SEZIONE PICCOLA WATER SMALL CROSS-SECTION	B418		NASTRO TRASPORTATORE OFF CONVEYOR BELT OFF	B436
	VISTA POSTERIORE REAR SCENE	B401		ACQUA SEZIONE GRANDE WATER LARGE CROSS-SECTION	B419		ATTIVAZIONE VERRICELLO WINCH, SPOOL ON	B437
	SOSPENSIONI SU SUSPENSION UP	B402		NO ACQUA - AGENTE CHIMICO SPECIAL CHEMICAL - NO WATER	B420		RULLO TRITURATORE ON BREAKING ROLLS ON	B438
	SOSPENSIONI GIU SUSPENSION DOWN	B403		RIAVVOLGIMENTO BOBINA REEL REWIND	B421		RULLO TRITURATORE OFF BREAKING ROLLS OFF	B439
	RAMPA DENTRO RAMP IN	B404		PARCHEGGIO BOBINA REEL PARKING	B422		RULLO TRITURATORE PAUSA BREAKING ROLLS PAUSE	B440
	RAMPA FUORI RAMP OUT	B405		HEADLAND START HEADLAND START	B423		RUOTA ANTERIORE ROTAZIONE ORARIA FRONT WHEEL CW	B441
	SPAZZOLA LATERALE SX LEFT BRUSH	B406		HEADLAND STOP HEADLAND STOP	B424		RUOTA ANTERIORE ROTAZIONE ANTIORARIA FRONT WHEEL CCW	B442
	SPAZZOLA LATERALE DX RIGHT BRUSH	B407		SCAVATRICE AUTO DIGGER AUTO	B425		RUOTA POSTERIORE ROTAZIONE ORARIA REAR WHEEL CW	B443

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	RUOTA POST. ROTAZIONE ANTIORARIA REAR WHEEL CCW	B444		RUOTA GIÙ WHEEL DOWN	B462		ALTEZZA GUIDA SU HEIGHT UP	B480
	ACCENSIONE NASTRI TURN ON TAPES	B445		AVVIO C1 START C1	B463		ALTEZZA GUIDA GIÙ HEIGHT DOWN	B481
	LENTA - VELOCE SLOW - FAST	B446		AVVIO C2 START C2	B464		ALZA ASSALE LIFT AXLE	B482
	ACCENSIONE FOTOCELLULA TURN ON PHOTOCELL	B447		PASSARE DA BAGNATO AD ASCIUTTO SWITCH FROM WET TO DRY	B465		EVS EVS	B483
	TRASLA CARRELLO AUTOMATICO AUTOMATIC AUTOELEVATION	B448		LEVA DEL CAMBIO GEAR SHIFT	B466		ASSALE DI STERZO 2/3 STEERING AXLE 2/3	B484
	TRASL. ORIZZONTALE SX MOVE LEFT HORIZONTALLY	B449		ANTINCASTRO SU UNDERRUN UP	B467		ALTEZZA CONTAINER DI CARICO CONTAINER LOAD HEIGHT	B485
	TRASL. ORIZZONTALE DX MOVE RIGHT HORIZONTALLY	B450		ANTINCASTRO GIÙ UNDERRUN DOWN	B468		SISTEMA CARICO SILO SILO LOAD SYSTEM	B486
	ACCENSIONE COCLEA TURN ON COCHLEA	B451		ANTINCASTRO AVVICINA CLOSE UNDERRUN	B469		CONTROLLO ALTEZZA SINISTRA HEIGHT CONTROL LEFT	B487
	ACCENSIONE FALCETTO TURN ON SICKLE	B452		ANTINCASTRO ALLONTANA OPEN UNDERRUN	B470		CONTROLLO ALTEZZA DESTRA HEIGHT CONTROL RIGHT	B488
	SPOSTAMENTO SU ASPO WRAP-REEL UP	B453		SOSPENSIONI POSTERIORI SU REAR AXLE SUPPORT UP	B471		BLOCCO DIFF. LONGITUDINALE LONGITUDINAL DIFFERENTIAL LOCK	B489
	SPOSTAMENTO RULLO GIÙ WRAP-REEL DOWN	B454		SOSPENSIONI POSTERIORI GIÙ REAR AXLE SUPPORT DOWN	B472		BLOCCO DIFFERENZIALE LOCK STEER AXLE - FRONT	B490
	RULLO VERTICALE SU VERTICAL ROTOR UP	B455		SOSPENSIONE SX POSTERIORE SU LEFT REAR AXLE SUPPORT UP	B473		BLOCCO DIFFERENZIALE POSTERIORE DIFFERENTIAL LOCK REAR	B491
	RULLO VERTICALE GIÙ VERTICAL ROTOR DOWN	B456		SOSPENSIONE DX POSTERIORE SU RIGHT REAR AXLE SUPPORT UP	B474		BLOCCO DIFFERENZIALE LONGITUDINAL DIFFERENTIAL LOCK	B492
	SCARICO A GRAVITÀ - SA GRAVITY DISCHARGE - SA	B457		SOSPENSIONE SX POST GIÙ LEFT REAR AXLE SUPPORT DOWN	B475		TROMBA HORN	B493
	AUTO-RIEMPIMENTO - SB AUTO-FILLING - SB	B458		SOSPENSIONE DX POST GIÙ RIGHT REAR AXLE SUPPORT DOWN	B476		LOCK BLOCCO	B494
	SISTEMA POMPA GGIO JERK - RPA JERK PUMP SYSTEM - RPA	B459		FRONT-WHEEL DRIVE FRONT-WHEEL DRIVE	B477		ARROW LEFT FRECCIA SINISTRA	B495
	AZIONAM. AUX ON/OFF AUX ON/OFF SYSTEM	B460		LIVELLAMENTO LEVELING	B478		BLOCCO ROTAZIONE LOCK ROTATION	B496
	RUOTA SU WHEEL UP	B461		ALTEZZA GUIDA DRIVING HEIGHT	B479		BLOCCABRACCIO SU LOCK UP ARM	B497

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	MODALITA' DI STERZATA STEERING MODE	B498		TRIVELLA DRILL	B516		CASSONE CARGO BED	B534
	BLOCCO ASSE AXLE LOCK	B499		VELOCITA' SPEED	B517		ANGOLAZIONE CASSONE CARGO BED ANGLE	B535
	AVVIO COMPRESSORE START COMPRESSOR	B500		PARACADUTE SU PARACHUTE UP	B518		AVVICINAMENTO CASSONE MOVE CLOSE CARGO BED	B536
	AZIONA UNCINO HOOK ENGAGEMENT	B501		PARACADUTE GIU' PARACHUTE DOWN	B519		ALLONTANAMENTO CASSONE MOVE FAR CARGO BED	B537
	ASSE FRONTALE SU LIFT FRONTAL AXLE	B502		TERZO TRATTO SU THIRD STEP UP	B520		MOVIMENTO COMPATTATORE MOVE COMPACTOR	B538
	ASSE FRONTALE GIU' LOWER FRONT AXLE	B503		TERZO TRATTO GIU' THIRD STEP DOWN	B521		RISALITA COMPATTATORE COMPACTOR UP	B539
	BLOCCO ASSE SOLLEVABILE LIFT AXLE LOCKING	B504		TRINCIA GAMBI SU STEM CUT UP	B522		OPERATORE NON PRESENTE NO OPERATOR CONTROL	B540
	ASSE POSTERIORE SU LIFT REAR AXLE	B505		TRINCIA GAMBI GIU' STEM CUT DOWN	B523		FRECCIA - ARROW -	B541
	ASSE POSTERIORE GIU' LOWER REAR AXLE	B506		ACCENSIONE NASTRI TAPES ON	B524		VALVOLE IDRAULICHE HYDRAULIC VALVES	B542
	BLOCCO ASSE POSTERIORE REAR AXLE BLOCKING	B507		ACCENSIONE COLCEA- FALCETTO SICKLE ON	B525		ROTAZIONE ICR ICR ROTATION	B543
	GOMMA ANTERIORE SU FRONT TYRE LIFT	B508		POMPA BENZINA FUEL PUMP, GAS	B526		MAGNETE MAGNET	B544
	GOMMA POSTERIORE SU REAR TYRE LIFT	B509		DRINK DRINK	B527		MCL MCL	B545
	ALZA CABINA RAISE CABIN	B510		LANCIO LAUNCH	B528		RSL RSL	B546
	ABBASSA CABINA LOWER CABIN	B511		COOL SHIRT COOL SHIRT	B529		RUB RUB	B547
	POMPA RISCALDAMENTO OLIO HEAT OIL PUMP	B512		PIT PIT	B530		SSU SSU	B548
	BRUCIATORE BURNER	B513		IGNITION IGNITION	B531		FED FED	B549
	COMPRESSORE COMPRESSOR	B514		ALS ALS	B532		MONITOR RETE WEB MONITOR	B550
	PESO WEIGHT	B515		GIROFARO ROTATING BEACON	B533		MONITOR ACQUA WATER MONITOR	B551

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	MONITOR DLS RIDOTTO REDUCED DLS MONITOR	B552		CONTROCOLTELLI CASSONE BOX COUNTER KNIVES	B570		RIVESTIMENTO FUORI COVER OUT	B588
	MONITOR DLS PIENO FULL DLS MONITOR	B553		TRAMOGGIA HOPPER	B571		RIVESTIMENTO DENTRO COVER IN	B589
	DIMINUISCI POMPA REDUCE PUMPING	B554		SOSPENSIONI SU SUSPENSIONS UP	B572		MUOVI GRATADA 30X30 MOVE GRATING FROM 30X30	B590
	AUMENTA POMPA INCREASE PUMPING	B555		SOSPENSIONI GIÙ SOSPENSIONS DOWN	B573		MUOVI GRATATA VERSO 30X30 MOVE GRATING TOWARDS 30X30	B591
	PRESA DI POTENZA ON/OFF AUXILIARY DRIVE ON/OFF	B556		VENTOLA REVERSIBILE REVERSIBLE FAN	B574		INVERSIONE DI MARCIA CASSONE REVERSE CONTAINER DIRECTION	B592
	FRECCIA + ARROW +	B557		TIME MIX TIME MIX	B575		ECO ECO	B593
	OSR OSR	B558		MODE DRIVE MODE DRIVE	B576		AVAS AVAS	B594
	FCO FCO	B559		SPECCHI RISCALDATI HEATED MIRRORS	B577		RESET (CHINESE) RESET (CHINESE)	B595
	VIF VIF	B560		RIARMO LOCK OPEN	B578		DOS MAX (CHINESE) DOS MAX (CHINESE)	B596
	SCR SCR	B561		FILL FILL	B579		FOAM (CHINESE) FOAM (CHINESE)	B597
	LETTERA "N" LETTER "N"	B562		EMPTY EMPTY	B580		CAFS WET (CHINESE) CAFS WET (CHINESE)	B598
	LETTERA "P" LETTER "P"	B563		SPRAY SPRAY	B581		STOP (CHINESE) STOP (CHINESE)	B599
	LETTERA "D" LETTER "D"	B564		ALLONTANA SUPERFICI GET FAR SURFACE	B582		CAFS DRY (CHINESE) CAFS DRY (CHINESE)	B600
	LETTERA "R" LETTER "R"	B565		AVVICINA SUPERFICI GET CLOSE SURFACE	B583		LIVELLO MINIMO OLIO MIN OIL LEVEL	B601
	LETTERA "C" LETTER "C"	B566		MUOVI CASSONE DA SINISTRA MOVE CONTAINER FROM LEFT	B584		TEMPERATURA MAX OLIO MAX OIL TEMPERATURE	B602
	MUTE MUTE	B567		MUOVI CASSONE DA DESTRA MOVE CONTAINER FROM RIGHT	B585		SSU SSU	B603
	LSC LSC	B568		MUOVI CASSONE VERSO DESTRA MOVE CONTAINER TOWARDS RIGHT	B586		INVERTI VENTOLA FAN REVERSE	B604
	LENTO/VELOCE LOW/SPEED	B569		MUOVI CASSONE VERSO SINISTRA MOVE CONTAINER TOWARDS LEFT	B587		AVVIO AUTOMATICO AUTO START	B605

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	PCON/OFF PC ON/OFF	B606		AVVIA/FERMA GENERATORE START/STOP ELECT. GENERATOR	B624		RIENTRO STABILIZZATORI ANTERIORI FRONT STABILIZERS BACK	B643
	LETTERA "A" LETTER "A"	B607		AVVIA/FERMA DC MOTORE START/STOP DC MOTOR	B625		RIENTRO STABILIZZATORI POSTERIORI REAR STABILIZERS BACK	B644
	LETTERA "B" LETTER "B"	B608		CENTRA CENTERING STRUCTURE	B626		USCITA STABILIZZATORI SX LEFT STABILIZERS OUT	B645
	LETTERA "E" LETTER "E"	B609		SALVA POSIZIONE STORE POSITION	B627		USCITA STABILIZZATORI ANTERIORI FRONT STABILIZER OUT	B646
	INVERSIONE DI MARCIA CASSONE REVERSE CONTAINER DIRECTION	B610		MUOVI VERSO POSIZIONE SALVATA MOVE TO SAVED POSITION	B628		USCITA STABILIZZATORI POSTERIORI REAR STABILIZER OUT	B647
	NEXT NEXT	B611		APRI SCALA OPENING THE LADDER	B629		USCITA ESTENSIONI SX LEFT EXTENSIONS BACK	B648
	PREV PREV	B612		ALLINEA SCALA LEVELING STAIRS LADDER	B630		RIENTRO ESTENSIONI DX RIGHT EXTENSIONS BACK	B649
	SEL SEL	B613		PIATTAFORMA GIU' RECLINING PLATFORM	B631		RIENTRO STABILIZZATORI DX RIGHT STABILIZER BACK	B650
	OK OK	B614		MUOVI CONTENITORE SX LEVELING THE CAGE	B632		INCLINA TILT	B651
	RPM++ RPM++	B615		MUOVI CONTENITORE DX LEVELING THE CAGE	B633		RIENTRO STABILIZZATORI POSTERIORI REAR STABILIZERS BACK	B652
	APERTURA VALVOLA SX VALVE OPEN LEFT	B616		LENTO SLOW SPEED	B634		USCITA STABILIZZATORI DX RIGHT STABILIZERS OUT	B653
	POMPA IDRAULICA 1 HYDRAULIC PUMP 1	B617		VIDEOCAMERA CAMERA	B635		USCITA STABILIZZATORI ANTERIORI FRONT STABILIZERS OUT	B654
	CRUISE CONTROL CRUISE CONTROL	B618		ALZA ROTELLA WASHER UP	B637		USCITA STABILIZZATORI POSTERIORI REAR STABILIZERS OUT	B655
	PROTEZIONE CABINA GUIDA DRIVING CAB COLLISION GUARD	B619		ABBASSA ROTELLA WASHER DOWN	B638		USCITA ESTENSIONE DX EXIT RIGHT EXTENSIONS	B656
	CHIUSURA AUTOMATICA AUTOMATIC CLOSURE	B620		ROTELLA AVANTI WASHER FORWARD	B639		AVVIA/FERMA MOTORE CAMION START/STOP ENGINE	B657
	AVVIA/FERMA SISTEMA DI BACKUP START/STOP BACKUP ENGINE	B621		ROTELLA INDIETRO SX WASHER BACK	B640		RIENTRO STABILIZZATORI ESTENSIONI STABILIZERS EXTENSIONS BACK	B658
	AVVIA/FERMA MOTORE CAMION START/STOP TRUCK ENGINE	B622		RIENTRO ESTENSIONE SX LEFT EXTENSIONS BACK	B641		STABILIZZAZIONE AUTOMATICA AUTOMATIC STABILIZATIONS	B659
	PROTEZIONE ANTICOLLISIONE SCAGE COLLISION GUARD	B623		RIENTRO STABILIZZATORI SX LEFT STABILIZERS BACK	B642		STABILIZZAZIONE OK STABILIZATION OK	B660

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	RIENTRO STABILIZZATORI ANTERIORI FRONT STABILIZERS BACK	B661		ALZA PONTE BRIDGE UP	B680		ALZA RUOTA WHEEL UP	B698
	APRI SOPRA OPEN TOP	B663		ABBASSA PONTE BRIDGE DOWN	B681		STOP ROTAZIONE STOP ROTATION	B699
	CHIUDI SOPRA CLOSE TOP	B664		FERMA PONTE BRIDGE STOP	B682		AVVIA ROTAZIONE START ROTATION	B700
	MUOVISX MOVE LEFT	B665		TIRA SU/GIÙ TAG UP/DOWN	B683		ALBERO SU TREE UP	B701
	MUOVIDX MOVE RIGHT	B666		AUTO MIX AUTO MIX	B684		ALBERO GIÙ TREE DOWN	B702
	APRI CASSONE OPEN BED	B667		CON-SPEED CONSTANT SPEED CONSTANT SPEED	B685		LAMA DENTRO BLADE IN	B703
	CHIUDI CASSONE CLOSE BED	B668		CHUTE VIBRATE CHUTE VIBRATE	B686		LAMA FUORI BLADE OUT	B704
	SLITTASX SLIDE LEFT	B669		MENU MENU	B687		CONTROLLO ACCELERAZIONE LAUNCH CONTROL	B705
	CRU SLIDE LEFT	B670		VIDEOCAMERA CAMERA	B688		ABS OFF ABS OFF	B706
	SCS SCS	B671		AGGIUNGI ACQUA ADD WATER	B689		INCREMENTO SU TURBO BOOST UP	B707
	AUMENTA INCREASE	B672		BETONIERA SU DESTRA CONCRETE MIXER UP, RIGHT	B690		INCREMENTO GIÙ TURBO BOOST DOWN	B708
	DIMINUISCI DECREASE	B673		BETONIERA GIÙ SINISTRA CONCRETE MIXER DOWN LEFT	B691		PIT LIMIT PIT LIMIT	B709
	VERRICELLO + ASPO+	B674		BETONIERA GIÙ DESTRA CONCRETE MIXER DOWN RIGHT	B692		ABS - ABS -	B710
	VERRICELLO - ASPO-	B675		BETONIERA SU SINISTRA CONCRETE MIXER UP LEFT	B693		ABS + ABS +	B711
	VERRICELLO SU ASPO UP	B676		BENNA GIÙ BUCKET DOWN	B694		INCREMENTO BOOST BOOST REDUCTION	B712
	VERRICELLO GIÙ ASPO DOWN	B677		BENNA SU BUCKET UP	B695		INCREMENTO BOOST BOOST +	B713
	HDP HDP	B678		ABBASSA BENNA LOWER BUCKET	B696		APRI CASSONE OPEN HOOD	B714
	VP VP	B679		ABBASSA RUOTA WHEEL DOWN	B697		CHIUDI CASSONE CLOSE HOOD	B715

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	INGRANAGGIO GIÙ GEAR DOWN	B716		STABILIZZATORE RETRAIBILE STABILIZER RETRACTABLE	B734		START START	B760
	INGRANAGGIO SU GEAR UP	B717		STABILIZZATORI PROFILO MINIMO STABILIZER FOR MINIMAL PROFIL	B735		IGN IGNITION	B761
	MESCOLATORE SU MIXER UP	B718		STABILIZZATORE PROFILO SX STABILIZER PROFILE LEFT	B738		PDU/RESET PDU/RESET	B762
	MESCOLATORE GIÙ MIXER DOWN	B719		STABILIZZATORE PROFILO DX STABILIZER PROFILE RIGHT	B739		FUEL/RESET FUEL/RESET	B763
	BENNA SU BUCKET UP	B720		AUX + AUX +	B740		STOP SU STOP UP	B764
	BENNA GIÙ BUCKET DOWN	B721		AUX - AUX -	B741		STOP GIÙ STOP DOWN	B765
	LETTERA (P) LETTER (P)	B722		MODALITA' ECO - LINEA SINGOLA ECO MODE - SINGLE LINE	B742		VOLG GIÙ VOLG DOWN	B766
	PTO PTO	B723		MODALITA' COMFORT - LINEA DOPPIA COMFORT MODE DOUBLE LINE	B743		TURBO TURBO	B767
	SPARE SPARE	B724		MODALITA' SPORT - LINEA TRIPLA SPORT MODE - TRIPLE LINE	B744		TRIVELLA SINISTRA AUTO AUGER LEFT AUTO	B768
	COMPT COMPT	B725		AVVIAMENTO MOTORE ENGINE START	B745		TRIVELLA DESTRA AUTO AUGER RIGHT AUTO	B769
	STROBE STROBE	B726		TROMBA HORN	B746		TRIVELLA SINISTRA MANUALE AUGER LEFT MANUAL	B770
	CARGO GROUND CARGO GROUND	B727		POMPA DI SENTINA BILGE PUMP	B747		TRIVELLA DESTRA MANUALE AUGER RIGHT MANUAL	B771
	GROUND LIGHT GROUND LIGHT	B728		STABILIZZATORE COMPL. SCHIERATO STABILIZER FULLY DEPLOYED	B748		TRIVELLA SINISTRA INVERSO AUGER LEFT INVERSE	B772
	SPOT LIGHT SPOT LIGHT	B729		PAGE PAGE	B749		TRIVELLA DESTRA INVERSO AUGER RIGHT INVERSE	B773
	SOSPENSIONE BRACCIO HOLD JIB	B730		DIVIETO PROHIBITION	B750		VELOCITÀ TRIVELLA SINISTRA - SPEED LEFT AUGER MINUS	B774
	FLOTTANTE BRACCIO GLOATING JIB	B731		SBRINAMENTO DEFROSTING	B757		VELOCITÀ TRIVELLA DESTRA - SPEED RIGHT AUGER MIN	B775
	FLUSSO COSTANTE CONTINUOUS GLOW	B732		ARIA CONDIZIONATA A/C	B758		VELOCITÀ TRIVELLA DESTRA + SPEED RIGHT AUGER PLUS	B776
	BLOCCO ASSALE STRADA AXLE LOCK	B733		FLASH FLASH	B759		VELOCITÀ TRIVELLA SINISTRA + SPEED LEFT PLUS	B777

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	TRASPORTATORE AUTO CONVEYOR AUTO	B778		AVVISO BUZZER SILENZIO WARNING BUZZER SILENCE	B796		LETTERA "L" LETTER "L"	B814
	TRASPORTATORE MANUALE CONVEYOR MANUAL	B779		LUCI DI MARCIA DIURNA DAYTIME RUNNING LIGHTS	B797		TERGICRISTALLO SINISTRO LEFT WIPER	B815
	TROMBA HORN	B780		SCARICO BRK EXHAUST BRK	B798		TERGICRISTALLO DESTRO RIGHT WIPER	B816
	RIMORCHIO SINISTRA ALZATO TOW ARM LEFT UP	B781		FLOOD LIGHT ANTERIORE FLOOD LIGHT FRONT	B799		TERGICRISTALLO WIPER	B817
	MASSETTO SX VERSO INTERNO SCREED LEFT INWARDS	B782		FLOOD LIGHT POSTERIORE FLOOD LIGHT REAR	B800		TERGICRISTALLO WIPER WASH	B818
	MASSETTO SX VERSO L'ESTERNO SCREED LEFT OUTWARDS	B783		FLOOD LIGHT SINISTRA FLOOD LIGHT LEFT	B801		RISCALDAMENTO PARABREZZA SX WINDSHIELD HEATING LEFT	B819
	MASSETTO DX VERSO INTERNO SCREED RIGHT INWARDS	B784		FLOOD LIGHT DESTRA FLOOD LIGHT RIGHT	B802		RISCALDAMENTO PARABREZZA DX WINDSHIELD HEATING RIGHT	B820
	MASSETTO DX VERSO L'ESTERNO SCREED RIGHT OUTWARDS	B785		CABINA SUL VEICOLO CABIN ON MACHINE	B803		LUCI-W W LIGHTS	B821
	RIMORCHIO SINISTRO GIÙ TOW ARM LEFT DOWN	B786		CABINA FRONTALE CABIN IN FRONT	B804		ROOF LIGHTS ROOF LIGHTS	B822
	RIMORCHIO DESTRO GIÙ TOW ARM RIGHT DOWN	B787		TERGICRISTALLO SOTTILE WIPER SLIM	B805		VENTOLA SU HEATER UP	B823
	RIMORCHIO DESTRO SU TOW ARM RIGHT UP	B788		LUCI FARO ANTERIORI FRONT BEACON LIGHTS	B806		VENTOLA GIÙ HEATER DOWN	B824
	ROSSO RAL 3020 RED RAL 3020	B789		LUCI FARO POSTERIORI REAR BEACON LIGHTS	B807		RETRO CABINA - ACCENSIONE CABIN BACKWARD - POWER ON	B825
	BLU RAL 5017 BLUE RAL 5017	B790		BREVE SORPASSO OVERRIDE	B808		CABINA DAVANTI - ACCENSIONE CABIN FORWARD - POWER ON	B826
	VERDE (RAL6024) - OPACO GREEN (RAL6024) - MATT	B791		MODALITÀ LAVORO WORK FUNCTION	B809		AVVIO START	B827
	CREEP CREEP	B792		F1 F1	B810		TASTO DI EMERGENZA EMERGENCY BUTTON	B828
	TRIP TRIP	B793		F2 F2	B811		ULTRALIFT ULTRALIFT	B829
	BATTERIA PRINCIPALE 1 MAIN BATTERY 1	B794		F3 F3	B812		LOAD 90% LOAD 90%	B830
	BATTERIA PRINCIPALE 2 MAIN BATTERY 2	B795		STERZO STEERING	B813		MAX LOAD MAX LOAD	B831

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	GUASTO IDRAULICO FRENI HYDRAULIC BRAKE FAULT	B832		CRUISE CANCEL CRUISE CANCEL	B850		INTERRUTTORE PORTA #6 PORT PUMP #6 SWITCH	B868
	FRENO MECCANICO GUASTO MECHANICAL BRAKE FAULT	B833		START/STOP START/STOP	B851		STBD #1 STBD #1	B869
	ECSM ECSM	B834		START/STOP (SFONDO ROSSO) START/STOP (RED BACKGROUND)	B852		STBD #1 STBD #1	B870
	SWITCH OFF SWITCH OFF	B835		LC LC	B853		STBD #3 STBD #3	B871
	VOLANTE STEERING	B836		FRECCIA ARROW	B854		STBD #4 STBD #4	B872
	VELOCE SPEED	B837		FRECCIA ARROW	B855		STBD #5 STBD #5	B873
	RADIO RADIO	B838		SPIA PERICOLO (SF. ROSSO) HAZARD WARNING LIGHT(S) (RED BACKGROUND)	B856		STBD #6 STBD #6	B874
	MODE MODE	B839		ABBAGLIANTIFASCIO ALTO (SFONDO BLU) HEAD LIGHT(S) HIGH BEAM (BLU BACKGROUND)	B857		LIVELLO POMPA LIVEWELL PUMP STARBOARD	B875
	NOS NOS	B840		POMPA ACQUA FREDDA FRESH WATER PUMP	B858		LIVELLO POMPA LIVEWELL PUMP PORT	B876
	BOOST BOOST	B841		POMPA ACQUA SALATA SALT WATER PUMP	B859		MASTER ALL OFF MASTER ALL OFF	B877
	LAUNCH LAUNCH	B842		POMPA ACQUE GRIGIE GRAY WATER PUMP	B860		SISTEMA DI SOLLEVAMENTO PORT JACKING SYSTEM UP	B878
	PURGE PURGE	B843		POMPA ACQUE NERE BLACK WATER PUMP	B861		SISTEMA DI SOLLEVAMENTO STBD JACKING SYSTEM UP	B879
	LOG LOG	B844		POMPA ACQUA CALDA HOT WATER PUMP	B862		SISTEMA DI SOLLEVAMENTO PORT JACKING SYSTEM DOWN	B880
	ACCU ACCU	B845		INTERRUTTORE PORTA #1 PORT PUMP #1 SWITCH	B863		SISTEMA DI SOLLEVAMENTO STBD JACKING SYSTEM DOWN	B881
	SHIFT OUT SHIFT OUT	B846		INTERRUTTORE PORTA #2 PORT PUMP #2 SWITCH	B864		LUCI DI NAVIGAZIONE PORT NAVIGATION LIGHT	B882
	WATER INJ. WATER INJ.	B847		INTERRUTTORE PORTA #3 PORT PUMP #3 SWITCH	B865		LUCI DI NAVIGAZIONE STARBOARD NAVIGATION LIGHT	B883
	CRUISE ON/OFF CRUISE ON/OFF	B848		INTERRUTTORE PORTA #4 PORT PUMP #4 SWITCH	B866		LUCE SOFFUSA STEAMING LIGHT	B884
	CRUISE SET CRUISE SET	B849		INTERRUTTORE PORTA #5 PORT PUMP #5 SWITCH	B867		LUCE FORTE STERN LIGHT	B885

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	LUCI PONTE/BAGNO AFT DECK/TOILET LIGHT	B886		ABILITAZIONE GRU CRANE ENABLE	B904		ACQUA RETRO TERGI REAR WINDOW WASHER/WIPER	B928
	LUCI TIMONE (ROSSO/BIANCO) HELM (RED/WHITE) LIGHT	B887		FRECCIA (SFONDO GIALLO RAL 1021) ARROW (YELLOW BACKGROUND RAL 1021)	B905		SPAZZOLA RETRO TERGI REAR WINDOW WIPER	B929
	LUCI SALONE SALOON LIGHT	B888		FRECCIA (SFONDO ROSSO RAL 3020) ARROW (RED BACKGROUND RAL 3020)	B906		SPARGITORE DENTRO SPREADER IN	B930
	LUCI CAMBUSA GALLEY LIGHT	B889		FRECCIA (SFONDO BLU RAL 5017 OPACO) ARROW (BLUE BACKGROUND RAL 5017 MATT)	B907		SPARGITORE FUORI SPREADER OUT	B931
	LUCI CABINA ANT. FWD CABIN LIGHT	B890		FRECCIA (SFONDO VERDE RAL 6024 OPACO) ARROW (GREEN BACKGROUND RAL 6024 MATT)	B908		INCLINAZIONE SOTTO RIBALTABILE TILTING DOWN WARD	B932
	LUCI MASTER ALL OFF	B891		GOCCIA 1 DROP 1	B909		INCLINAZIONE SOPRA RIBALTABILE TILTING UP WARD	B933
	INTERR. GALLEGGIANTE SENTINA PORT HIGH BILGE FLOAT SWITCH	B892		GOCCIA 2 DROP 2	B910		SPAZZATRICI 1 MUNICIPALITY VEHICLE 1	B934
	INTERR. GALLEGGIANTE STIVA STBD HIGH BILGE FLOAT SWITCH	B893		GOCCIA 3 DROP 3	B911		SPAZZATRICI 2 MUNICIPALITY VEHICLE 2	B935
	SOTTOCOPERTA BELOW DECK	B894		GOCCIA 4 DROP 4	B912		MANUALE AUTOMATICO MANUAL AUTOMATIC	B936
	FRECCIA ANTIORARIA RADIAL ARROW COUNTERCLOCKWISE	B895		SPRUZZO CENTRALE CENTRE SPRAY HEAD	B913		ALTA PRESSIONE SINISTRA HIGH PRESSURE LEFT	B937
	FRECCIA ORARIA RADIAL ARROW CLOCKWISE	B896		SPRUZZO A DESTRA RIGHT SPRAY HEAD	B914		ALTA PRESSIONE DESTRA HIGH PRESSURE RIGHT	B938
	MESCOLATORE IN SCARICO EXHAUST MIXER	B897		SPRUZZO A SINISTRA LEFT SPRAY HEAD	B915		PAUSA MISURAZIONE SINISTRA MEASUREMENT PAUSE LEFT	B939
	MESCOLATORE IN PULIZIA MIXER IN CLEANING	B898		POMPA ACQUA WATER PUMP	B916		PAUSA MISURAZIONE DESTRA MEASUREMENT PAUSE RIGHT	B940
	POMPA LAVAGGIO ACQUA WATER WASHING PUMP	B899		CONTORNO NERO BLACK CONTOUR	B917		AVVIO MISURAZIONE SINISTRA MEASUREMENT START LEFT	B941
	APRI OPEN	B900		GIALLO (RAL 1021) - OPACO YELLOW (RAL 1021) - MATT	B918		AVVIO MISURAZIONE DESTRA MEASUREMENT START RIGHT	B942
	CHIUDI CLOSE	B901		SALVATAGGIO RESCUE	B919		CIRCOLAZIONE POMPA SINISTRA PUMP CIRCULATION ON THE LEFT	B943
	SEL SEL	B902		DISCESA SALITA GLIDE DOWNWARDS	B926		CIRCOLAZIONE POMPA DESTRA PUMP CIRCULATION ON THE RIGHT	B944
	DISPOSITIVO BLOCCAGGIO ATTIVO BLOCKING SYSTEM ACTIVATED	B903		SPEGNI FARI POSTERIORI REAR LIGHTS OFF	B927		LAVANDINI SOSPENSIONE SUSPENSION SKINS	B945

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	RILANCIO FRONTALE FRONT RAISE	B952		9 9	B975		STERZO VERS. 1 STEERING VERS. 1	B998
	ABBASSAMENTO FRONTALE FRONT LOWER	B953		10 10	B976		STERZO VERS. 2 STEERING VERS. 2	B999
	SOLLEVAMENTO POSTERIORE REAR RAISE	B954		11 11	B977		STERZO VERS. 3 STEERING VERS. 3	C001
	ABBASSAMENTO POSTERIORE REAR LOWER	B955		12 12	B978		STERZO VERS. 4 STEERING VERS. 4	C002
	AVVIAMENTO MOTORE ENGINE START	B960		10 10	B979		STERZO VERS. 5 STEERING VERS. 5	C003
	ALZA CABINA RAISE CABIN	B961		11 11	B980		MANUALE MANUAL	C004
	ABBASSA CABINA LOWER CABIN	B962		12 12	B981		SIFA SIFA	C005
	ATTIVAZIONE STABILIZZATORE DX RIGHT STABILIZER ENABLE	B963		ACCELERATORE ALTA VEL THROTTLE HIGH SPEED V1	B983		C/STAY ON C/STAY ON	C006
	MODE MODE	B964		MUOVI A DESTRA MOVE RIGHT	B984		C/STAY OFF C/STAY OFF	C007
	ATTIVA VELOCITÀ ACTIVATE SPEED	B965		LUCE SU PRESSA LIGHT ON THE PRESS	B985		C/HAM ON C/HAM ON	C008
	1 1	B967		PRESSA 1 PRESS 1	B986		OUTHAUL ON OUTHAUL ON	C009
	2 2	B968		PRESSA 2 PRESS 2	B987		OUTHAUL OFF OUTHAUL OFF	C010
	3 3	B969		ABBAGLIANTI 1 HEAD LIGHT (S) 1	B988		B/STAY ON B/STAY ON	C011
	4 4	B970		ABBAGLIANTI 2 HEAD LIGHT (S) 2	B989		B/STAY OFF B/STAY OFF	C012
	5 5	B971		FRECCIA SU ARROW UP	B990		TRAVEL PORT TRAVEL PORT	C013
	6 6	B972		FRECCIA GIÙ ARROW DOWN	B991		TRAVEL STBD TRAVEL STBD	C014
	7 7	B973		5,1 BAR 5,1 BAR	B992		J.C/HAM ON J.C/HAM ON	C015
	8 8	B974		WBA WBA	B993		J.C/HAM OFF J.C/HAM OFF	C016

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	C/HAM OFF C/HAM OFF	C017		USCITA ESTENSIONE ANTERIORE 1 SINISTRA LEFT FRONT EXTENSION EXIT 1	C043		FIAMMA FRECCIA SX FLAME ARROW LEFT	C069
	STOP (RAL3021) - OPACO STOP (RAL3021) - MATT	C018		USCITA ESTENSIONE ANTERIORE 1 DESTRA RIGHT FRONT EXTENSION EXIT 1	C044		FIAMMA ON/OFF FLAME ON/OFF	C070
	SALVATAGGIO (RAL1021) - OPACO RESCUER (RAL1021) - MATT	C019		USCITA ESTENSIONE POSTERIORE 1 SINISTRA LEFT BACK EXTENSION EXIT 1	C045		SENSORE DI PARCHEGGIO PARKING SENSOR	C071
	FARO LAMPEGGIANTE BEACON	C020		USCITA ESTENSIONE POSTERIORE 1 DESTRA RIGHT BACK EXTENSION EXIT 1	C046		SEDILE POSTERIORE REAR SEAT	C072
	ACCENSIONE D POWER ON D	C021		CHIAMATA CALL	C047		SEDILE ANTERIORE FRONT SEAT	C073
	TROMBA HORN	C022		FRECCIA (TRIANGOLO) ARROW (TRIANGLE)	C048		SGANCIA UNLOCK	C074
	BOX BOX	C023		FRESCA+ CUTTER +	C049		AGGANCIA LOCK	C075
	SCALA LADDER	C024		FRESCA- CUTTER -	C050		SCARICA DRAIN	C076
	PROIETTORE SPOT LIGHT	C025		MODALITÀ PALA MODE SHOVEL	C051		CHIUDI CLOSE	C077
	LUCE LAVORO WORKING LIGHT	C026		ABILITAZIONE VERRICELLO AB VERR	C052		APRI OPEN	C078
	LUCE CABINA CABIN LIGHT	C027		FRENO RIMORCHIO FRENO RIMORCHIO	C053		APRI-CHIUDI SCARICO OPEN-CLOSE EXHAUST	C079
	USCITA STABILIZZATORI STABILIZERS OUT	C028		FARI LAVORO FARI LAVORO	C054		RIEMPIMOTORE FILL ENGINE	C080
	LUCE LAVORO WORKING LIGHT	C029		STERZO CONVERGENTE CONVERGING STEERING	C063		OLIO + OIL +	C082
	PIANALE SU PLATFORM UP	C030		STERZO LATERALE SIDE STEERING	C064		OLIO - OIL -	C083
	IFS ON IFS ON	C031		STERZO 4 RUOTE 4 WHEELS STEERING	C065		ALLARME ALARM	C084
	IFS OFF IFS OFF	C032		FIAMMA FRECCIA SU FLAME ARROW UP	C066		VOCE VOICE	C125
	INSTANT NEUTRAL INSTANT NEUTRAL	C041		FIAMMA FRECCIA GIÙ FLAME ARROW DOWN	C067		PULL OVER PULL OVER	C126
	RESET PRESS RESET PRESS	C042		FIAMMA FRECCIA DX FLAME ARROW RIGHT	C068		FILL ENGINE FILL ENGINE	C127

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	EMPTY ENGINE EMPTY ENGINE	C128		APRI FINESTRA WINDOW OPEN	C146		APERTO OPEN	C174
	FILL ENGINE FILL ENGINE	C129		LUCE SCRIVANIA DESK LIGHT	C147		APERTO 2 OPEN 2	C175
	INT INT	C130		230V 230V	C148		APERTO 3 OPEN 3	C176
	EXT EXT	C131		RTA ON RTA ON	C149		APERTO 4 OPEN 4	C177
	NAVTO NAVTO	C132		RTA OFF RTA OFF	C150		SFIDA 1 SLIDE 1	C180
	HOLD HOLD	C133		PANEL ON PANEL ON	C151		SFIDA 2 SLIDE 2	C181
	AUTO AUTO	C134		PANEL OFF PANEL OFF	C152		FRESA (RAL 3020) CUTTER (RAL 3020)	C182
	PROG PROG	C135		STAYSAIL FURL STAYSAIL FURL	C153		MOTORE 1 ENGINE 1	C183
	TAKE OFF TAKE OFF	C136		STAYSAIL UNFURL STAYSAIL UNFURL	C154		MOTORE 2 ENGINE 2	C184
	LAND LAND	C137		BLADE FURL BLADE FURL	C155		BLOCCO DIFFERENZIALE DIFFERENTIAL BLOCK	C187
	THR THR	C138		BLADE UNFURL BLADE UNFURL	C156		BYPASS BYPASS	C188
	ALT ALT	C139		ATTIVA GAMBE ANTERIORI FRONT LEGS DOWN POWER ON	C167		STABILIZZATORE STABILIZER	C189
	IAS IAS	C140		ATTIVA GAMBE ANTERIORI SOPRA FRONT LEGS UP POWER ON	C168		STABILIZZATORE SINISTRA STABILIZER LEFT	C190
	HEAD HEAD	C141		PENDENZA PALO POTENZA ATTIVA POWER PILE SLOPE CW-POWER ON	C169		STABILIZZATORE SINISTRA STABILIZER LEFT	C191
	ROLL ROLL	C142		ATTIVA GAMBE POSTERIORI REAR LEGS DOWN POWER ON	C170		STABILIZZATORE DESTRA STABILIZER RIGHT	C192
	ABORT (YELLOW 1023) ABORT (YELLOW 1023)	C143		ATTIVA SU GAMBE POSTERIORI REAR LEGS UP POWER ON	C171		STABILIZZATORE DESTRA STABILIZER RIGHT	C193
	FTS (GIALLO RAL 1021) FTS (YELLOW RAL 1021)	C144		SBLOCCA/BLOCCA UNLOCK/LOCK	C172		CRANE CRANE	C194
	USB USB	C145		PENDENZA PALO POTENZA-ATTIVA POWER PILE SLOPE CW-POWER ON	C173		STABS STABS	C195

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	RET RET	C196		COMPLETATO COMPLETED	C214		SOFFIATORE-ISO BLOWER-ISO	C232
	EXT EXT	C197		SEDILE SU SEAT UP	C215		LUCI POSIZIONE ACCESO-ISO POSITION LIGHT(S)-ISO	C233
	ANABBAGLIANTI BASSO FASCIO HEAD LIGHT(S) LOW BEAM	C198		SEDILE GIÙ SEAT DOWN	C216		LUCI INTERNE ACCESO-ISO INTERIOR LIGHT(S) ON-ISO	C234
	POMPA IDRAULICA D'EMERGENZA EMERGENCY HYDRAULIC PUMP	C199		MUTO MUTE	C217		SOFFIA ARIA FREDDA-ISO BLOWS COLD AIR-ISO	C235
	LUCI MARCIA DIURNA BLU BLUE DAYTIME RUNNING LIGHTS	C200		LEVA DEL CAMBIO GEAR SHIFT	C218		POMPA DI SENTINA-ISO BILGE PUMP-ISO	C236
	PROIETTORE SPOT LIGHT(S)	C201		OFF ROAD OFF ROAD	C219		RIFORNIMENTO-ISO REFUELING-ISO	C237
	PROIETTORE DECK DECK SPOT LIGHT(S)	C202		FARO LAVORO WORK LIGHT(S)	C220		TEST LAMPADA-ISO LIGHT(S) TEST-ISO	C238
	PROIETTORE FLYER FLYER SPOT LIGHT(S)	C203		PROIETTORE SPOT LIGHT(S)	C221		VERRICELLO SU-ISO WINCH UP-ISO	C239
	PLAFONIERA TOOLBOX TOOLBOX DOME LIGHT(S)	C204		AIR COMPRESSOR AIR COMPRESSOR	C222		VERRICELLO GIÙ-ISO WINCH DOWN-ISO	C240
	LUCI DI MARCIA DIURNA AMBRA AMBER DAYTIME RUNNING LIGHTS	C205		SPINGI SLETTA SU PUSH SLED UP STATE	C223		ABBAGLIANTI-ISO LIGHT(S)-ISO	C241
	ROSSO (RAL 2004) RED (RAL 2004)	C206		ON/OFF ON/OFF	C224		RISCALDAMENTO (ISO 0637A) HEATING (ISO 0637A)	C242
	FRENO AMANO PARK BRAKE	C207		CLEAN CLEAN	C225		UNITÀ MOTORE CLIMATIZZAZ-ISO AIR CONDITIONING MOTOR UNIT-ISO	C243
	PROIETTORE REAR REAR SPOT LIGHT(S)	C208		EMERG EMERG	C226		VENTOLA CLIMATIZZAZIONE-ISO AIR CONDITIONING FAN-ISO	C244
	GIROFARO AMBRA ROTATING BEACON AMBER	C209		ROAD ROAD	C227		VENOLA CLIMATIZZAZIONE 2-ISO AIR CONDITIONING FAN 2-ISO	C245
	GIROFARO BLU ROTATING BEACON BLUE	C210		SAND SAND	C228		RADAR RADAR	C246
	LUCI DI MARCIA DIURNA STROBE STROBE DAYTIME RUNNING LIGHTS	C211		AVVIO MOTORE-ISO MOTOR START-ISO	C229		MULTI FUNZIONE MULTI FUNZIONE	C247
	SPARE SPARE	C212		ARRESTO MOTORE-ISO MOTOR STOP-ISO	C230		RADIO VHF RADIO VHF	C248
	RISCALDAMENTO HEATING	C213		AVVIO MOTORE-ISO MOTOR START-ISO	C231		USB 12V USB 12V	C249

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	PRESA DA TERRA <i>PRESA DA TERRA</i>	C250		PORTA 1 <i>DOOR 1</i>	C276		CENTRA <i>CENTRE</i>	C294
	LUCI DI VIA <i>LUCI DI VIA</i>	C251		PORTA 2 <i>DOOR 2</i>	C277		VETRO SU <i>GLASS UP</i>	C295
	LUCI GENERALE <i>LUCI GENERALE</i>	C252		PORTA 1+2 <i>DOOR 1+2</i>	C278		VETRO GIÙ <i>GLASS DOWN</i>	C296
	LUCI DI FONDA <i>LUCI DI FONDA</i>	C253		BLOCCA PORTA DX <i>LOCK RIGHT DOOR</i>	C279		PROTEZIONE ADX <i>PROTECT RIGHT</i>	C297
	LUCI STRUMENTI <i>LUCI STRUMENTI</i>	C254		BLOCCA PORTA SX <i>LOCK LEFT DOOR</i>	C280		STABILIZZA <i>STABILIZE</i>	C298
	LUCI GAVONI <i>LUCI GAVONI</i>	C255		SENSORI PARCHEGGIO <i>PARKING SENSOR</i>	C281		LETTERA "N" <i>LETTER "N"</i>	C299
	LUCI CONSOLLE <i>LUCI CONSOLLE</i>	C256		AEBS DISATTIVATO <i>STOP AEBS</i>	C282		SOLLEVAMENTO LENTO <i>LIFT SLOW</i>	C308
	FARO RICERCA <i>FARO RICERCA</i>	C257		RESET COMANDI <i>RESET FUNCTIONS</i>	C283		CAMBIO <i>GEARBOX</i>	C309
	TROMBA <i>TROMBA</i>	C258		ACCENSIONE <i>POWER ON</i>	C284		BILANCIAMENTO <i>BALANCING</i>	C310
	SIRENA <i>SIRENA</i>	C259		LUCE SOFFITTO <i>DECK LIGHT</i>	C285		CAVALLETTI FUORI <i>STANDS OUT</i>	C311
	LAMPEGGIANTI <i>LAMPEGGIANTI</i>	C260		PLAFONIERA DESTRA <i>RIGHT DECK LIGHT</i>	C286		CAVALLETTI DENTRO <i>STANDS IN</i>	C312
	LUCI COPERTA <i>LUCI COPERTA</i>	C261		LUCE NOTTURNA <i>NIGHT LIGHT</i>	C287		EXTRA 1A <i>EXTRA 1A</i>	C313
	SCARICO INFERIORE <i>BOTTOM DRAIN</i>	C262		LUCE BAGAGLIAIO <i>TRUNK LIGHT</i>	C288		EXTRA 2A <i>EXTRA 2A</i>	C314
	ASPIRAZIONE SUPERIORE <i>TOP SUCTION</i>	C263		LUCE ABITACOLO <i>COCKPIT LIGHT</i>	C289		EXTRA 3A <i>EXTRA 3A</i>	C315
	ASPIRAZIONE SUPERIORE <i>TOP SUCTION</i>	C264		LUCE AUTOMATICA <i>AUTO LIGHT</i>	C290		EXTRA 1B <i>EXTRA 1B</i>	C316
	MOTORE INCREMENTO <i>MOTOR INCREASE</i>	C270		LUCE ASSISTENTE <i>HOSTESS LIGHT</i>	C291		EXTRA 2B <i>EXTRA 2B</i>	C317
	MOTORE DECREMENTO <i>MOTOR DECREASE</i>	C271		TV <i>TV</i>	C292		EXTRA 3B <i>EXTRA 3B</i>	C318
	BQC <i>BQC</i>	C275		DISATTIVA FRENO <i>STOP BRAKE</i>	C293		GETTO ON/OFF <i>JETTING ON/OFF</i>	C321

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BRACCIO ASPIRAZIONE SOTTO SUCTION ARM DOWN	C322		MUOVI SU MOVE UP	C352		NASTRO SX TAPE LEFT	C370
	BRACCIO ASPIRAZIONE ALTO SUCTION ARM UP	C323		ESTERNO SOTTO EXTERNAL DOWN	C353		CESCOI SX CUTTER LEFT	C371
	CASSETTA DI ASPIRAZIONE SUCTION CASSETTE	C324		ESTERNO SOPRA EXTERNAL UP	C354		CESCOI DX CUTTER RIGHT	C372
	SCARICO INFERIORE BOTTOM DRAIN	C325		INTERNO SOTTO INTERNAL DOWN	C355		APRI/CHIUDI OPEN/CLOSED	C373
	ASPIRAZIONE ALTO SUCTION TOP	C326		INTERNO SOPRA INTERNAL UP	C356		FRECCHE ARROWS	C374
	TUBO DI LANCIO JETTING HOSE IN	C327		RUOTA ORARIO SOPRA ROTATE CLOCKWISE UP	C357		RICICLO RECYCLE	C375
	FUORIUSCITA TUBO JETTING HOSE OUT	C328		RUOTA ANTIORARIO SOPRA ROTATE COUNTERCLOCKWISE UP	C358		GRUPPO VAPORE STEAM GROUP	C376
	ROCCETTO DI LANCIO LIBERO JETTING REEL FREE RUN	C329		BLOCCO SOPRA BLOCK UP	C359		GRUPPO VAPORE STEAM GROUP	C377
	MEMORIA MOTORE ON/FF ENGINE MEMORY ON/OFF	C330		BLOCCO BLOCK	C360		ROTAZIONE ROTATION	C378
	REGIME MOTORE BASSO ENGINE RPM DOWN	C331		BLOCCO ROTAZIONE NASTRO CARICO BLOCK ROTATION LOAD TAPE	C361		TAMBURO DRUM	C379
	REGIME MOTORE ALTO ENGINE MOTOR UP	C332		NASTRO DI CARICO LOAD TAPE	C362		NASTRO TRASPORTATORE CONVEYOR	C380
	VUOTO ON/OFF VACUUM ON/OFF	C333		NASTRO DI CARICO SX GIÙ LOAD TAPE LEFT DOWN	C363		CASSONE AVANTI/INDIETRO CAGE FORWARD/BACKWARD	C381
	FARO LAVORO WORK LIGHT(S)	C334		NASTRO DI CARICO SX GIÙ LOAD TAPE RIGHT DOWN	C364		TRASPORTATORE SCORTE GRANDI OVERSIZE CARRIAGE	C382
	BLOCCO BRACCIO ASPIRAZIONE SUCTION ARM LOCK	C335		NO CARICO STOP LOADING	C365		MULTI-BANDA MULTI-BAND	C383
	TUBO ASPIRAZIONE VERSO BASSO SUCTION HOSE DOWN	C336		CISTERNA DENTRO TANK IN	C366		CHIUDI NASTRO TRASPORTATORE SCORTE CLOSE STOCKPILE CONVEYOR	C384
	TUBO ASPIRAZIONE VERSO ALTO SUCTION HOSE UP	C337		GRUPPO ROTAZIONE SX ROTATE LEFT GROUP	C367		APRI NASTRO TRASPORTATORE SCORTE OPEN STOCKPILE CONVEYOR	C385
	LUCE LIGHT(S)	C350		GRUPPO ROTAZIONE DX ROTATE RIGHT GROUP	C368		CHIUDI NASTRO TRASPORTATORE SCORTE GRANDE CLOSE OVERSIZE STOCKPILE CONVEYOR	C386
	MUOVI GIÙ MOVEDOWN	C351		NASTRO DX TAPE RIGHT	C369		APRI NASTRO TRASPORTATORE SCORTE GRANDE OPEN OVERSIZE STOCKPILE CONVEYOR	C387

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	STOP CASSONE STOP BULK	C388		RUOTA BRACCIO ANTIORARIO ROTATE COUNTERCLOCKWISE ARM	C408		LUCE BOX BOX LIGHT	C428
	VENTILATORE - ISO 0089 VENTILATING FAN	C389		RUOTA BRACCIO ORARIO ROTATE CLOCKWISE ARM	C409		NS NS	C429
	ARIA CONDIZIONATA - ISO 0027 AIR CONDITIONING - ISO 0027	C390		SOLLEVA BRING UP	C410		S S	C430
	VERRICELLO - ISO 1540 WINCH - ISO 1540	C391		PORTA GIÙ BRING DOWN	C411		T T	C431
	VERRICELLO SU - ISO 1538 WINCH UP - ISO 1538	C392		DIFFERENTIAL LOCK, TRANSFER CASE 4X4 - ISO 2475 DIFFERENTIAL LOCK, TRANSFER CASE 4X4 - ISO 2475	C414		LOW LOW	C432
	VERRICELLO GIÙ - ISO 1539 WINCH DOWN - ISO 1539	C393		DIFFERENTIAL LOCK, REAR AXLE 4X4 - ISO 2474 DIFFERENTIAL LOCK, REAR AXLE 4X4 - ISO 2474	C415		HIGH HIGH	C433
	GRU AUTOMONTANTE - ISO 2736 SELF-ERECTING CRANES - ISO 2736	C394		DIFFERENZIALE SU/GIÙ DIFFERENTIAL UP/DOWN	C416		SCARICA DOWNLOAD	C434
	TROMBA HORN	C395		DIFFERENZIALE DIFFERENTIAL	C417		ALZA PIANALE PLATFORM UP	C435
	STRUMENTO NS NS TOOL	C396		DIFFERENZIALE DIFFERENTIAL	C418		ABBASSA PIANALE PLATFORM DOWN	C436
	BRACCIO RETRATTO OS TOOL	C397		POWER TAKE-OK (PTO) - ISO 1572 POWER TAKEOK (PTO) - ISO 1572	C419		AVVIA MOTORE START POWER	C437
	PATROL PATROL	C399		PRESA DI FORZA FRENO POWER TAKEOFF (PTO) BRAKE	C420		CRUISE CONTROL CRUISECONTROL	C438
	BANDIERA FLAG	C400		PLUS, POSTIVE POLARITY - ISO 5005 PLUS, POSTIVE POLARITY - ISO 5005	C421		LUCI VASCA BAITWELL LIGHTS	C439
	LUOGO LOCATION	C401		MINUS, NEGATIVE POLARITY - ISO 5006 MINUS, NEGATIVE POLARITY - ISO 5006	C422		RICAMBIO ACQUA LIVERECIRCLE	C440
	CHIUDI BRACCIO CLOSE ARM	C403		ENGINE LUBRICATING OIL PRESSURE - ISO 1374 ENGINE LUBRICATING OIL PRESSURE - ISO 1374	C423		SCARICO IN MARE OVERBOARD DISCHARGE	C441
	PORTA SU BRACCIO BRING UN ARM	C404		SBLOCCA UNLOCK	C424		ACCENSIONE POWER ON/OFF	C442
	PORTA GIÙ BRACCIO BRING DOWN ARM	C405		SUSPENDE AXLE - ISO 3767 SUSPENDE AXLE - ISO 3767	C425		RICIRCOLO RECIRCULATION	C443
	PORTA GIÙ BRACCIO BRING DOWN ARM	C406		POMPA EXTREME EXTREME PUMP	C426		LUCI LIGHTS	C444
	PORTA SU BRACCIO BRING UP ARM	C407		LUCE DI EMERGENZA EMERGENCY LIGHT	C427		PAUSA STANDBY	C445

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	CONTROLLO SERBATOIO CONTROL TANK	C446		SOSTEGNO DESTRA ALTO UPPER RIGHT SUPPORT	C464		FRESA SU CUTTER UP	C492
	TIMER TIMER	C447		SOSTEGNO SINISTRA BASSO LOWER LEFT SUPPORT	C465		FRESA GIÙ CUTTER DOWN	C493
	INCREMENTO ACQUA WATER INCREASE	C448		SOSTEGNO DESTRA BASSO LOWER RIGHT SUPPORT	C466		FRESA SU CUTTER UP	C494
	INCREMENTO STOP ACQUA WATER STOP INCREASE	C449		CHIUDI CANCELLO CLOSE GATE	C467		FRESA GIÙ CUTTER DOWN	C495
	CONTROLLO VELOCITÀ SPEED CONTROL	C450		APRI CANCELLO OPEN GATE	C468		F1 F1	C496
	GENERICO GENERIC	C451		INCREMENTO BOOST	C469		ALZA STABILIZZATORI POSTERIORI UP STABILIZERS BACK	C497
	DIMINUIRE ACQUA WATER DECREASE	C452		SOSTEGNO BASSO LOWER SUPPORT	C470		ABBASSA STABILIZZATORI POSTERIORI DOWN STABILIZERS BACK	C498
	DIMINUIRE STOP ACQUA WATER STOP DECREASE	C453		SOSTEGNO ALTO UPPER SUPPORT	C471		APRI OPEN	C499
	CARICARE LOAD IN	C454		TESTA SPRUZZO PASTELLA SX BATTER LEFT SPRAY HEAD	C472		CHIUDI CLOSE ARM	C500
	SCARICARE LOAD OUT	C455		TESTA SPRUZZO PASTELLA DX BATTER RIGHT SPARY HEAD	C473		SPRUZZO "H" "H" JET	C501
	GRIGLIA GRID	C456		DRIBBLE BAR DRIBBLE BAR	C474		SPRUZZO "L" "L" JET	C502
	GETTO ORIZZONTALE HORIZONTAL JET	C457		PLAY/PAUSE PLAY/PAUSE	C475		TRAZIONE DESTRA RIGHT TRACTION	C503
	GETTO DIAGONALE DIAGONAL JET	C458		GANCIO HOOK	C476		TRAZIONE SINISTRA LEFT TRACTION	C504
	GETTO VERTICALE VERTICAL JET	C459		AVVIO MOTORE ENGINE START	C477		GIRA TRAZIONE TWIRL TRACTION	C505
	OUTRIGGER, LEFT JACK DOWN, VERTICAL EXTENSION ONLY - ISO 2080 OUTRIGGER, LEFT JACK DOWN, VERTICAL EXTENSION ONLY - ISO 2080	C460		ALZA STABILIZZATORI POSTERIORE SX UP LEFT STABILIZERS BACK	C488		APRI OPEN	C506
	OUTRIGGER, LEFT JACK UP, VERTICAL RETRACTION ONLY - ISO 2081 OUTRIGGER, LEFT JACK UP, VERTICAL RETRACTION ONLY - ISO 2081	C461		ABBASSA STABILIZZATORI POSTERIORE SX DOWN LEFT STABILIZERS BACK	C489		CHIUDI CLOSE	C507
	WINDSCREEN (WINDSHIELD), ELECTRICALLY HEATED - ISO 2575 WINDSCREEN (WINDSHIELD), ELECTRICALLY HEATED - ISO 2575	C462		ABBASSA STABILIZZATORI POSTERIORE DX UP RIGHT STABILIZERS BACK	C490		FRESA SU CUTTER UP	C508
	SOSTEGNO SINISTRA ALTO UPPER LEFT SUPPORT	C463		ABBASSA STABILIZZATORI POSTERIORE DX DOWN RIGHT STABILIZERS BACK	C491		FRESA GIÙ CUTTER DOWN	C509

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AUTO START AUTO START	C530		SFILZA PER IL TRANSITO SLEW TO TRANSIT	C613		LUCI LIGHTS	C725
	LUCI FUNNEL FUNNEL LIGHTS	C544		ABBASSA RULLI ROLLERS DOWN	C614		TRASMISSIONE A AXLE TRANSMISSION A	C726
	LETTERA "S" LETTER "S"	C545		ALZA RULLI ROLLERS UP	C615		CARICO LOAD	C727
	CAMPANA BELL	C548		TENSIONE COSTANTE CONSTANT TENSION	C616		BENNA GIÙ BUCKET DOWN	C728
	EMERGENCY BUTTON EMERGENCY BUTTON	C585		VELOCE ISO 2810 SPEED ISO 2810	C617		RUOTA BETONIERA ROTATE CONCRETE MIXER	C729
	AUTO AUTO	C597		FRENO DI TRASMISSIONE TRANSMISSION BRAKE	C642		INCREMENTO RUOTA BETONIERA INCREASE ROTATE CONCRETE MIXER	C730
	POMPA ACQUA APERTO SU WATER CANNON ON UP	C599		SPRAY RADIATORE RADIATOR SPRAY	C643		DECREMENTO RUOTA BETONIERA DECREASE ROTATE CONCRETE MIXER	C731
	POMPA ACQUA APERTO GIÙ WATER CANNON ON DOWN	C600		IGNITION IGNITION	C672		SU UP	C732
	POMPA ACQUA APERTO DESTRA WATER CANNON ON RIGHT	C601		LETTERA "M" LETTER "M"	C702		GIÙ DOWN	C733
	POMPA ACQUA APERTO SINISTRA WATER CANNON ON LEFT	C602		LUCE ROSSA RED LIGHT	C703		H2O H2O	C777
	MUOVI SINISTRA MOVE LEFT	C603		LUCE BIANCA WHITE LIGHT	C704		LAVAGGIO BETONIERA MIXER WASHER	C778
	MUOVI DESTRA MOVE RIGHT	C604		STABILIZZATORE SX SU LEFT STABILIZERS UP	C713		UBP UBP	C779
	POMPA ACQUA APERTO WATER CANNON OPEN	C605		STABILIZZATORE DX SU RIGHT STABILIZERS UP	C714		RUOTA BETONIERA ORARIO ROTATE CONCRETE MIXER CLOCKWISE	C791
	BOBINA DENTRO SPOOL IN	C607		STABILIZZATORE SX GIÙ LEFT STABILIZERS DOWN	C715		RUOTA BETONIERA ANTIORARIO ROTATE CONCRETE MIXER COUNTERCLOCKWISE	C792
	BOBINA FUORI SPOOL OUT	C608		STABILIZZATORE DESTRO GIÙ RIGHT STABILIZERS DOWN	C716		POMPA FUORI PUMP OUT	C793
	PORTAROCCETTO DENTRO SPOOL RACK SPOOL IN	C609		AUTO CROWN AUTO CROWN	C717		ACQUA DOLCE FRESH/RAW WATER	C795
	PORTAROCCETTO FUORI SPOOL RACK SPOOL OUT	C610		MAN CROWN MAN CROWN	C718		HORN HORN	C820
	SFILZA DA DISTRIBUIRE SLEW TO DEPLOY	C612		ON/OFF ON/OFF	C719		START START	C821

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	DIM DISPL DIM DISPL	C822		TERGICRISTALLO WASH WIPER	C840		GIRARAGNO ROTATE GRAPPLE	C907
	MAP LIGHT MAP LIGHT	C823		SBRINAMENTO TERGICRISTALLO DEFROST WASH WIPER	C841		STRUMENTI TOOLS	C908
	RESET POPOF RESET POPOF	C824		FUSIBILE FUSE	C842		CHIUSURA FRONTALE FRONT LOCK	C909
	RESET ERROR RESET ERROR	C825		MODO 1 MODE 1	C843		ALZA/ABBASSA GANCIO SINGOLO TIPHOOK SINGLE UP/DOWN	C910
	RESET TRIP RESET TRIP	C826		MODO 2 MODE 2	C844		ALZA/ABBASSA GANCIO DOPPIO DOUBLE TIPHOOK UP/DOWN	C911
	SETUP PAGE SETUP PAGE	C827		MODO 3 MODE 3	C845		ACCENSIONE POWER ON	C912
	HYDR BLEED HYDR BLEED	C828		AVVIO MOTORE ENGINE START	C846		PARCHEGGIO PARK	C913
	FAN RDIF FAN RDIF	C829		MOTORE ENGINE	C847		GANCIO 100% MAX LOAD HOOK 100% MAX LOAD	C914
	FAN WAT FAN WAT	C830		LANCIA ACQUA SPRAY WATER	C868		GANCIO 90%/100% HOOK 90%/100%	C915
	FAN OIL FAN OIL	C831		BLOCCO DIFFERENZIALE DIFFERENTIAL LOCK	C879		GANCIO 110% MAX LOAD HOOK 110% MAX LOAD	C916
	PUMP WAT PUMP WAT	C832		MUOVI BRACCIO ARM MOVE	C880		CLIMBING MODE CLIMBING MODE	C917
	PUMP FUEL PUMP FUEL	C833		MUOVI BRACCIO ARM MOVE	C881		BRAKE RELEASE BRAKE RELEASE	C918
	FUEL RESET FUEL RESET	C834		BLOCCO DIFFERENZIALE DIFFERENTIAL LOCK	C882		LANCIA ALTA PRESSIONE HIGH PRESSURE CLEANER	C921
	GBX EMER GBX EMER	C835		SOS POMPA PUMP SOS	C883		PERICOLO DANGER	C930
	KILL ENG KILL ENG	C836		SBLOCCO CARICO UNBLOCK LOAD	C885		LUCI W W LIGHTS	C931
	STAGE STAGE	C837		AUTO TEST AUTO TEST	C902		VELOCE SPEED	C932
	PAGE PAGE	C838		MARTELLO HAMMER	C905		LENTO SLOW	C933
	LIMITER LIMITER	C839		MARTELLO 2 HAMMER 2	C906		LAVAVETRI TETTO ROOF WASHER	C934

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	JC JC	C953		ENGINE START-STOP ENGINE START-STOP	D029		PRESOLLEVAMENTO PRELIFTING	D047
	POWER POWER	C954		F F	D030		AVVIO START	D048
	ING ING	C955		J0 J0	D031		SALVATAGGIO RESCUE	D049
	SCUOLA SCHOOL	C956		J2 J2	D032		ALIMENTAZIONE FUORI FEED OUT	D050
	LUCE LIGHT	C957		J3 J3	D033		ALIMENTAZIONE FUORI FEED OUT	D051
	FRECCIA ARROW	C999		PRESSA PRESS	D034		ALIMENTAZIONE SOPRA/SOTTO FEED UP/DOWN	D052
	SPOSTASU MOVE UP	D001		INGRANAGGIO 1/2 GEAR 1/2	D035		SEGA/COLTELLO SAW/KNIFE	D053
	HOME HOME	D002		CHIUDI LAME CLOSE BLADES	D036		SPAGO TWINE	D054
	HOME HOME	D003		APRI LAME OPEN BLADES	D037		ALIMENTATORE 3 FUORI COMPACTOR 3 FEEDER OUT	D055
	MUOVIGIÙ MOVEDOWN	D004		SALIRE SULLA TORRE CLIMB THE TOWER	D038		ALIMENTATORE 3 DENTRO COMPACTOR 3 FEEDER IN	D056
	STOP STOP	D013		SCENDERE DALLA TORRE DOWN THE TOWER	D039		COMPATTATORE 2 APERTO/CHIUSO COMPACTOR 2 OPEN/CLOSE	D057
	STEAM LIGHTS STEAM LIGHTS	D014		LEVA GIÙ LEVER DOWN	D040		COMPATTATORE 3 APERTO/CHIUSO COMPACTOR 3 OPEN/CLOSE	D058
	HD HD 4200 WATER SPRAY BAR	D015		LEVA SU LEVER UP	D041		INCLINAZIONE BASSO BUNDLER TILT DOWN	D059
	H H	D016		ESTRAILEVA LEVER EXTRACT	D042		INCLINAZIONE ALTO BUNDLER TILT UP	D060
	HS HS	D017		CHIUDI LEVA LEVER CLOSE	D043		ROTAZIONE ANTERIORE BUNDLER ROTATE CCW BUTTON	D061
	FRECCIA+ ARROW +	D018		ABILITA SKILLS	D044		ROTAZIONE POSTERIORE BUNDLER ROTATE CW BUTTON	D062
	FRECCIA- ARROW -	D019		VASCA GIÙ TANK DOWN	D045		MANUALE ON/OFF MANUAL MODE ON/OFF	D063
	TROMBA HORN	D028		VASCA SU TANK UP	D046		SEQUENZA AUTOMATICA ATTIVA ACTIVATE AUTOMATIC SEQUENCE	D064

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	LIVELLAMENTO AUTOMATICO ON/OFF BUNDLER AUTOMATIC LEVELLING ON/OFF	D065		SPAZZOLATRICE 1/2 BRUSH TOOL 1/2	D091		LIVELLO SERBATOIO 1 TANK LEVEL 1	D148
	RESET STOPS RESET STOPS	D066		SPAZZOLATRICE SINISTRA BRUSH TOOL LEFT	D092		LIVELLO SERBATOIO 2 TANK LEVEL 2	D149
	CONTENITORE CONTAINER/PALETTE	D067		SPAZZOLATRICE DESTRA BRUSH TOOL RIGHT	D093		LIVELLO SERBATOIO 3 LEVEL TANK 3	D150
	MULTIMVIMENTO MULTI MOVEMENT	D068		CHIUSURA BATTENTE SWING LATCH	D094		LIVELLO SERBATOIO 4 LEVEL TANK 4	D151
	CINGOLO AVVIO CRAWLER - START	D069		MARTELLO BATTENTE HAMMER LATCH	D095		SERBATOIO 1 ON/OFF TANK1 ON/OFF	D152
	CARICO ROTAZIONE STOP STOP ROTATING LOAD	D071		GIÙ DOWN	D096		SERBATOIO 2 ON/OFF TANK 2 ON/OFF	D153
	AREA SAFE AREA SAFE	D078		SU UP	D097		SERBATOIO 3 ON/OFF TANK 3 ON/OFF	D154
	INCLINAL TILT L	D079		APRI OPEN	D098		SERBATOIO 4 ON/OFF TANK 4 ON/OFF	D155
	INCLINAL TILT L	D080		CHIUDI CLOSED	D099		LIVELLO REFRIGERANTE COOLANT LEVEL	D156
	INCLINAR TILT R	D081		BLOCCO ASTA ORARIO ROD LOCK CW	D100		REFRIGERANTE ON/OFF COOLANT ON/OFF	D157
	INCLINAR TILT R	D082		BLOCCO ASTA ANTIORARIO ROD LOCK CCW	D101		GRASSO ALTO ON/OFF GREASE HIGH ON/OFF	D158
	MUOVISOTTO MOVEDOWN	D083		SPRING LOCKOUTS SPRING LOCKOUTS	D108		DEF LEVEL DEF LEVEL	D159
	MUOVISOPRA MOVEUP	D084		STOW STOW	D109		DEF LEVEL DEF LEVEL	D160
	RUOTA SU ROTATEUP	D085		DEPLOY DEPLOY	D110		DEF ON/OFF DEF ON/OFF	D161
	RUOTA GIÙ ROTATEDOWN	D086		CHASSIS TOOLS CHASSIS TOOLS	D111		LIVELLO PIENO FUEL LEVEL	D162
	IDRANTE HYDRANT	D088		FRECCIA - ARROW -	D139		CARBURANTE A BASSO FLUSSO ON/OFF LOW FLOW FUEL ON/OFF	D163
	PERICOLO WARNING	D089		FRECCIA + ARROW +	D140		CARBURANTE AD ALTO FLUSSO ON/OFF HIGH FLOW FUEL ON/OFF	D164
	ROTAZIONE 1/2 ROTATION 1/2	D090		ASPIRAZIONE SUCTION	D141		CARICA ON/OFF ONLOAD ON/OFF	D165

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	LUCE 1 LIGHT 1	D166		RIDUCI BRACCIO ARM REDUCE	D206		CHIUSURA BRANDEGGIO ASPO ASPO SWING CLOSING	D224
	LUCE 2 LIGHT 2	D167		RUOTA ANTIORARIO BRACCIO ARM CCW WHEEL	D207		AVVOLGI ASPO ASPO LOADING	D225
	LUCE 3 LIGHT 3	D168		RUOTA ORARIO BRACCIO ARM CW WHEEL	D208		SROTOLA ASPO ASPO UNLOADING	D226
	CARRELLO AVANTI CARRIAGE FORWARD	D172		VALVOLA PROBOSCI VALVE	D209		AUMENTO VELOCITÀ ASPO ASPO SPEED INCREASE	D227
	CARRELLO INDIETRO CARRIAGE BACK	D173		MODALITÀ LANCIA LAUNCH MODE	D210		RIDUCI VELOCITÀ ASPO ASPO SPEED DECREASE	D228
	PALA APERTA OPEN SHOVEL	D174		ABBASSA CISTERNA LOWER TANK	D211		BLOCCO ASPO ASPO LOCK	D229
	PALA CHIUSA CLOSE SHOVEL	D175		ALZA CISTERNA RAISE TANK	D212		SBLOCCO ASPO ASPO UNLOCK	D230
	TRASPORTATORE FUORI CARICO OFFLOAD CONVEYOR	D183		APRI FONDO OPEN BOTTOM	D213		VELOCITÀ ASPO ASPO SPEED	D231
	CARICA ON/OFF ONLOAD ON/OFF	D186		CHIUDI FONDO CLOSE BOTTOM	D214		PRESSA PRESS	D232
	CARICA ON/OFF ONLOAD ON/OFF	D187		AUMENTO PRESSIONE CISTERNA INCREASE TANK PRESSURE	D215		START/STOP MOTORE ENGINE START/STOP	D233
	UP UP	D194		RIDUZIONE PRESSIONE CISTERNA DECREASE TANK PRESSURE	D216		CCCELERA MOTORE ENGINE INCREASE	D234
	DN DN	D195		VALVOLA DI CARICO LOADING VALVE	D217		DECELLERA MOTORE ENGINE DECREASE	D235
	ON ON	D198		VALVOLA DI SCARICO UNLOADING VALVE	D218		INSERIMENTO POMPA AP AP PUMP INSERT	D236
	OFF OFF	D199		VALVOLA DI CARICO LOADING VALVE	D219		AUMENTO PRESSIONE POMPA AP AP INCREASE PRESSURE PUMP	D237
	RICARICA TELEFONO SMARTPHONE CHARGE	D202		VUOTO EMPTY	D220		DIMINUIZIONE PRESSIONE POMPA AP AP DECREASE PUMP	D238
	ALZA BRACCIO ARM RAISE	D203		PRESSIONE PRESSURE	D221		RICICLO RECYCLE	D239
	ABBASSA BRACCIO ARM LOWER	D204		SCARICO UNLOAD	D222		CICLONE INTASATO CLOGGED CYCLONE	D240
	ESTENDI BRACCIO ARM EXTEND	D205		APERTURA BRANDEGGIO ASPO ASPO SWING OPENING	D223		VALVOLA ASPO SUPERIORE ASPO VALVE UP	D241

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AVVOLGI ASPO SUPERIORE ASPO LOADING UP	D242		DEFLECT IN DEFLECT IN	D266		BRACCIO SU ARM UP	D322
	SROTOLA ASPO SUPERIORE ASPO UNLOADING UP	D243		PINZA FRENI BRAKE DISK	D267		BRACCIO GIÙ ARM DOWN	D323
	ERRORE ERROR	D244		BATTERIA BATTERY	D268		GENERIC GENERIC	D324
	FARO LAVORO WORK LIGHT	D245		VOLANTE STEERING	D269		STOP STOP	D325
	FARO ROTANTE ROTATION LIGHT	D246		RUOTA CAR WHEEL	D270		REV UP REV UP	D328
	MODALITÀ UGELLO NOZZLE MODE	D247		EVENT EVENT	D279		REV DOWN REV DOWN	D329
	FAN WAT 1 FAN WAT 1	D248		BLOCCO BRACCIO ASPIRAZIONE SUCTION ARM BLOCK	D287		VENTOLA AUX AIR 1 FAN AUX AIR 1	D330
	FAN WAT 2 FAN WAT 2	D249		LUCE LIGHT	D288		VENTOLA AUX AIR 2 FAN AUX AIR 2	D331
	FAN GEARBOX FAN GEARBOX	D250		SPOSTA DESTRA MOVE RIGHT	D304		TASTO DI EMERGENZA DMG DMG EMERGENCY BUTTON	D332
	LP LP	D251		SOLLEVA RAISE	D305		POMPA IDRAULICA AUX HYD 1 AUX HYD 1 HYDRAULIC PUMP	D333
	BRIGHTNESS BRIGHTNESS	D252		SOLLEVA RAISE	D306		POMPA IDRAULICA AUX HYD 2 AUX HYD 2 HYDRAULIC PUMP	D334
	JIB LEAD UP JIB LEAD UP	D259		ABBASSA LOWER	D307		VENTOLA SU FAN UP	D335
	JIB LEAD DOWN JIB LEAD DOWN	D260		RUOTA ROTATE	D308		VENTOLA GIÙ FAN DOWN	D336
	FURL OUT FURL OUT	D261		RUOTA ROTATE	D310		AVVIO MOTORE START ENGINE	D337
	FURL IN FURL IN	D262		PERICOLO DANGER	D315		AVVIO START	D338
	VANG OFF VANG OFF	D263		EV EV	D316		SPOSTA MOVE	D339
	VANG ON VANG ON	D264		AVVIAMENTO MOTORE ENGINE START	D319		SPOSTA MOVE	D340
	DEFLECT OUT DEFLECT OUT	D265		FRECCIA SINISTRA ARROW LEFT	D320		SPOSTA MOVE	D341

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	SPOSTA MOVE	D342		COMPRESSORE SU COMPRESSOR UP	D360		PLAYBACK PLAYBACK	D420
	SCORRI LOAD	D343		COMPRESSORE GIÙ COMPRESSOR DOWN	D361		MARTELLO/CHIAVE INGLESE HAMMER/SPANNER	D421
	CARICO LOAD	D344		RICIRCOLO CIRCULATING AIR	D379		MID MID	D422
	SCORRI LOAD	D345		ARIA FRESCA FRESH AIR	D380		VERRICELLO WINCH	D441
	SCORRI TRIVELLA LOAD AUGER	D346		ENGINE CRANK ENGINE CRANK	D383		LEFT REAR LEFT REAR	D444
	SCORRI TRIVELLA LOAD AUGER	D347		NORMAL NORMAL	D384		RIGHT FRONT RIGHT FRONT	D445
	SCORRI RULLO LOAD	D348		REVERSE REVERSE	D385		RIGHT REAR RIGHT REAR	D446
	SCORRI RULLO LOAD	D349		CONFERMA CONFIRM	D404		TOILET TOILET	D448
	SCORRI RULLO LOAD	D350		BRUSH ROTATION BRUSH ROTATION	D410		FLUSSO SU FLOW UP	D454
	SCORRI LOAD DOWN	D351		TOE IN TOE IN	D411		FLUSSO GIÙ FLOW DOWN	D455
	SCORRI LOAD	D352		TOE OUT TOE OUT	D412		SISTEMA IN FUNZIONE SYSTEM RUN	D456
	SCORRI LOAD	D353		REVERSE DIRECTION REVERSE DIRECTION	D413		FUNZIONE PRINCIPALE PRIME FUNCTION	D457
	SCORRI LOAD	D354		H H	D414		PULSICI CANCELLI CLEAR GATES	D458
	SCORRI LOAD	D355		LOGO LOGO	D415		MH MH	D459
	SCORRI LOAD	D356		PANEL SU PANEL UP	D416		DL+ DL+	D460
	L L	D357		PANEL GIÙ PANEL DOWN	D417		DL- DL-	D461
	R R	D358		TRACK TRACK	D418		SHIFT + SHIFT +	D462
	SPOSTA MOVE	D359		RECORD RECORD	D419		SHIFT - SHIFT -	D463

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	VERRICELLO SU WINCH UP	D464		BOARD UP BOARD UP	D496		AVVIAMENTO MOTORE GEN ENGINE START	D514
	VERRICELLO GIÙ WINCH DOWN	D465		BOARD DOWN BOARD DOWN	D497		MOTORE STOP ENGINE STOP GEN	D515
	VERRICELLO STOP WINCH STOP	D466		ON OFF ON OFF	D498		AVVIAMENTO MOTORE GEN1 ENGINE START	D516
	GENERIC GENERIC	D467		DOCK MODE DOCK MODE	D499		MOTORE STOP ENGINE STOP GEN1	D517
	AVVIAMENTO MOTORE ENGINE START	D468		CANT SAILING CANT SAILING	D500		AVVIAMENTO MOTORE GEN2 ENGINE START	D518
	CABINA SGANCIATA CABIN UNHOOKED	D483		CANT DOCK CANT DOCK	D501		MOTORE STOP ENGINE STOP GEN2	D519
	LSD DIFF. PUMP LSD DIFF. PUMP	D484		CUNN EASE CUNN EASE	D502		AVVIA/ARRESTO MOTORE START/STOP ENGINE	D520
	TYRE SELECT TYRE SELECT	D485		CUNN PUMP CUNN PUMP	D503		MOLTO LENTO - ISO 2812 VERY SLOW SPEED - ISO 2812	D521
	HEIGHT + HEIGHT +	D486		CLEW FWD CLEW FWD	D504		ROCKSHAFT UP - ISO 1567 ROCKSHAFT UP - ISO 1567	D522
	HEIGHT - HEIGHT -	D487		CLEW AFT CLEW AFT	D505		ROCKSHAFT DOWN - ISO 1568 ROCKSHAFT DOWN - ISO 1568	D523
	TRIM + TRIM +	D488		ROT STBD ROT STBD	D506		IDRAULIC EXTEND - ISO 1570 IDRAULIC EXTEND - ISO 1570	D524
	TRIM - TRIM -	D489		ROT PORT ROT PORT	D507		IDRAULIC RETRACT - ISO 1571 IDRAULIC RETRACT - ISO 1571	D525
	CANT + CANT +	D490		MAIN JIB MAIN JIB	D508		BIDIRECTIONAL - ISO 0002 BIDIRECTIONAL - ISO 0002	D526
	CANT - CANT -	D491		POMPA SENTINA MID BILGE PUMP	D509		CASSETTA OSCILLANTE IN CASSETTE SWING IN	D529
	FOIL AUTO FOIL AUTO	D492		AVVIAMENTO MOTORE PORT ENGINE START	D510		CASSETTA OSCILLANTE FUORI CASSETTE SWING OUT	D530
	RUD AUTO RUD AUTO	D493		MOTORE STOP ENGINE STOP PORT	D511		GRU GIÙ CRANE DOWN	D531
	UW DW UW DW	D494		AVVIAMENTO MOTORE STBD ENGINE START	D512		GRU SU CRANE UP	D532
	PORT STBD PORT STBD	D495		MOTORE STOP ENGINE STOP STBD	D513		CICLO PULIZIA CYCLONE CLEANING	D533

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	SERBATOIO DISIDRATAZIONE POST DEWATER TANK BACK	D534		DECREMENTA DECREASE	D552		SPRAY DESTRA RIGHT DELUGESPRAY	D583
	FILTRO PULIZIA FILTER COARSE CLEAN	D535		INCREMENTA INCREASE	D553		TRIVELLA GIÙ AUGER DOWN	D585
	PULIZIA PISTONE PISTON CLEAN	D536		MUOVISI SU MOVEUP	D554		TRIVELLA SU AUGER UP	D586
	ASPIRAZIONE DENTRO SUCTION ARM IN	D537		MUOVISI GIÙ MOVEDOWN	D555		LIVELLO SERBATOIO 5 TANK LEVEL 5	D587
	ASPIRAZIONE FUORI SUCTION ARM OUT	D538		MUOVISI SU MUVEUP	D556		SERBATOIO 5 ON/OFF TANK 5 ON/OFF	D588
	STUFA HEATER	D539		MUOVI GIÙ MUVEDOWN	D557		SCALDA CACCAPPATOIO COUPLING HEATER	D592
	LANCIA LANS	D540		TROMBA HORN	D558		VAPORIERA STEAM GENERATOR	D593
	POMPA PUMP	D541		SOFFIATORE BLOWER	D559		CESTINO SOTTO BASKET DOWN	D594
	POMPA DENTRO PUMP IN	D542		SENTINA BILGE	D560		CESTINO SOPRA BASKET UP	D595
	BRACCIO HARM	D543		NAV/ANC NAV/ANC	D561		CASTINO DENTRO BASKET IN	D596
	SPREMERE SQUEEZE	D544		RISCALDAMENTO HEATER	D562		CESTINO FUORI BASKET OUT	D597
	LAVAGGIO WASH	D545		NOTTE NIGHT	D563		H2O H2O	D598
	CONTRAI CONTRACT	D546		INVISIBILE STEALTH	D564		DRENAGGIO DRAIN	D599
	ESPANDI EXPAND	D547		VARIATORE DIMMER	D565		CRUISE RESUME CRUISERESUME	D600
	MUOVISI SU MOVEUP	D548		RICICLO RECYCLE	D566		CONTROLLO TRAZIONE TRACTION CONTROL	D607
	MUOVISI GIÙ MOVEDOWN	D549		APRI OPEN	D567		BLOCCO COPERCHIO END COVER BLOCK	D608
	MUOVISI SU MUVEUP	D550		CHIUDI CLOSE	D568		SBLOCCO COPERCHIO END COVER UNBLOCK	D609
	MUOVISI GIÙ MUVEDOWN	D551		SPRAY SINISTRA LEFT DELUGESPRAY	D582		LUCI LAVORO POSTERIORI LIGHTS WORK REAR	D610

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BRACCIO ASPIRAZIONE RUOTA SUCTION ARM SWIM	D611		SROTOLA ASPO AP 1 UNROLLS ASPO AP 1	D650		SPOSTA LOAD	D670
	CIPERCHIO CISTERNA GIÙ TANK COVER DOWN	D613		SROTOLA ASPO AP 3 UNROLLS ASPO AP 3	D651		RESET ALARM RESET ALARM	D671
	CIPERCHIO CISTERNA SU TANK COVER UP	D614		SROTOLA ASPO AP 4 UNROLLS ASPO AP 4	D652		UNITÀ 2C 2C UNIT	D672
	CISTERNA GIÙ TANK TILT DOWN	D615		VALVOLA DI SFILATO VENT VALVE	D653		TERGICRISTALLO MINIMO WIPER MIN	D673
	CISTERNA SU TANK TILT UP	D616		SCALE SU STAIRS UP	D654		TERGICRISTALLO MAX WIPER MAX	D674
	RAM RAM	D626		SCALE GIÙ STAIRS DOWN	D655		TERGICRISTALLO MINIMO WIPER MIN	D675
	NUC NUC	D627		SCALE GIÙ STAIRS DOWN	D656		TERGICRISTALLO MAX WIPER MAX	D676
	RHU RHU	D628		SCALE SINISTRA STAIRS LEFT	D657		TIMBRO SINISTRA LEFT STAMP	D677
	BRA BRA	D629		LUCE SCALE STAIRS LIGHT	D658		TIMBRO DESTRA RIGHT STAMP	D678
	APERTURA VETRINO SLIDE OPENING	D630		METTIDENTRO PUT IN	D659		SCHIENALE SU BACK OF THE CHAIR UP	D679
	MULINO MILL	D631		METTI FUORI PUT OUT	D660		SCHIENALE GIÙ BACK OF THE CHAIR DOWN	D680
	BLOCCO DIFFERENZIALE DIFFERENTIAL LOCK	D643		ASPIRAZIONE ALTO SUNCTION TOP	D663		VENTOLA - FAN -	D681
	BLOCCO DIFFERENZIALE DIFFERENTIAL LOCK	D644		ASPIRAZIONE ALTO SUNCTION TOP	D664		FAN + FAN +	D682
	AVVOLGI ASPO AP 1 WRAP ASPO AP 1	D645		SPOSTA LOAD	D665		LUCE LAVORO 1 WORK LIGHT 1	D683
	AVVOLGI ASPO AP 2 WRAP ASPO AP 2	D646		C- C-	D666		LUCE LAVORO 2 WORK LIGHT 2	D684
	AVVOLGI ASPO AP 3 WRAP ASPO AP 3	D647		C+ C+	D667		C C	D690
	AVVOLGI ASPO AP 4 WRAP ASPO AP 4	D648		COMPRESSORE COMPRESSOR	D668		INDICATORE INDICATOR	D691
	SROTOLA ASPO AP 1 UNROLL ASPO AP 1	D649		ALTA PULIZIA HIGH CLEAN	D669		IGN ON/OFF ING ON/OFF	D692

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	CRANCK CRANCK	D693		ASPIRAZIONE ASPIRATION	D711		ENGINE HATCH ENGINEHATCH	D730
	RPM+ RPM+	D694		LP/LH LP/LH	D712		ENGINE HATCH OPEN ENGINEHATCH OPEN	D737
	RPM- RPM-	D695		FRESCO COLD	D713		ENGINE HATCH CLOSED ENGINEHATCH CLOSED	D738
	AC MODE AC MODE	D696		POMPA ACQUA WATER PUMP	D714		OVERRIDE OVERRIDE	D739
	AFS RESET AFS RESET	D697		DOCCIA SHOWER	D715		ACQUA POTABILE DRINK WATER	D740
	FRONT FAN FRONT FAN	D698		INSERISCI LAMA SINISTRA BLADE RETRACT LH DRIVE	D716		VENTOLA MOTORE ENGINE FAN OVERRIDE	D741
	RADIO 1 RADIO 1	D699		ESTRAI LAMA SINISTRA BLADE EXTENDED LH DRIVE	D717		FARO LAVORO ESTERNO EXTERIOR WORKINGLIGHT BO	D742
	RADIO 2 RADIO 2	D700		ABILITARE ANABLE	D718		FARO LAVORO ESTERNO EXTERIOR WORKINGLIGHT	D743
	RADIO 3 RADIO 3	D701		SHED MODE SHED MODE	D719		FRONT LUCE FRONTALE MAP LIGHTS FRONT	D744
	FAN REAR FAN REAR	D702		CANCEL CANCEL	D720		REAR LEFT LUCE RETRO SINISTRA MAP LIGHTS REAR LEFT	D745
	SILENT WATCH SILENT WATCH	D703		TRASPORTATORE SU CONVEYOR UP	D722		REAR RIGHT LUCE RETRO DESTRA MAP LIGHTS REAR RIGHT	D746
	STOP STOP	D704		TRASPORTATORE GIU CONVEYOR DOWN	D723		SPECCHIO RISCALDATO MIRROR HEATING	D747
	ENG FAN ENG FAN	D705		ESTENSIONE SINISTRA IN ALTO LEFT EXTENSION UP	D724		PTO PTO	D748
	ALLARME ALARM	D706		ESTENSIONE SINISTRA IN BASSO LEFT EXTENSION DOWN	D725		PISTOLA FUMOGENA SMOKE GRENADE	D749
	GIROFARO ROTATING BEACON	D707		ESTENSIONE DESTRA IN ALTO RIGHT EXTENSION UP	D726		ALIMENTAZIONE AUX RIMORCHIO TRAILER AUX POWER	D750
	SPIA PERICOLO HAZARD WARNING LIGHTS	D708		ESTENSIONE DESTRA IN BASSO RIGHT EXTENSION DOWN	D727		CC-BOLT 2B CC-BOLT 2B	D751
	TROMBA HORN	D709		ESTENSIONE RETRO IN ALTO BACK EXTENSION UP	D728		STOP STOP	D752
	ACQUA WATER	D710		ESTENSIONE RETRO BASSO BACK EXTENSION DOWN	D729		VALORE RILEVATO DETECTED VALUE	D753

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AUTO AUTO	D754		TACK LINE IN TACK LINE IN	D772		QUANTITY SCATTERING - ISO 1232 QUANTITY SCATTERING - ISO 1232	D790
	CANCEL CANCEL	D755		TACK LINE OUT TACK LINE OUT	D773		ARATRO DA NEVE SNOW PLOUGH	D791
	TRANSIT TRANSIT	D756		MAST ROTATE PORT MAST ROTATE PORT	D774		ARATRO DA NEVE SNOW PLOUGH	D792
	LOCKDOWN LOCKDOWN	D757		MAST ROTATE STBD MAST ROTATE STBD	D775		LOAD TIPPING - ISO 1557 LOAD TIPPING - ISO 1557	D793
	TRANSFER TRANSFER	D758		MAST ROTATE CENTER MAST ROTATE CENTER	D776		ROPE REEVE - ISO 2757 ROPE REEVE - ISO 2757	D794
	TRANSFER LOW TRANSFER LOW	D759		MAST ROTATE FLOAT MAST ROTATE FLOAT	D777		AVVIAMENTO POWER	D795
	DAC DAC	D760		MAIN SHEET IN MAIN SHEET IN	D778		LIVELLO ACQUA LEVEL WATER	D796
	BHC BHC	D761		MAIN SHEET OUT MAIN SHEET OUT	D779		ALZA/ABBASSA UP/DOWN	D797
	RDAC RDAC	D762		MAIN SHEET FAST IN MAIN SHEET FAST IN	D780		SINISTRA/DESTRA LEFT/RIGHT	D798
	ACK ACK	D763		MAIN SHEET FAST OUT MAIN SHEET FAST OUT	D781		CAR OUT CAR OUT	D799
	ROLL RESET ROLL RESET	D764		TRAVELLER PORT TRAVELLER PORT	D782		CAR DOWN CAR DOWN	D800
	ROLL PORT ROLL PORT	D765		TRAVELLER STBD TRAVELLER STBD	D783		CUNNO DUMP CUNNO DUMP	D801
	ROLL STBD ROLL STBD	D766		VA. VA. VA.	D784		CUNNO PUMP CUNNO PUMP	D802
	TRIM RESET TRIM RESET	D767		ENGINE STOP ENGINE STOP	D785		CAR IN CAR IN	D803
	BOW UP BOW UP	D768		AVVIAMENTO POWER	D786		CAR UP CAR UP	D804
	BOW DOWN BOW DOWN	D769		SNOW PLOUGH - ISO 1234 SNOW PLOUGH - ISO 1234	D787		TRAV PORT TRAV PORT	D805
	CUNNINGHAM IN CUNNINGHAM IN	D770		LOAD TIPPING, TRAILER - ISO 2467 LOAD TIPPING, TRAILER - ISO 2467	D788		ROTATE PORT ROTATE PORT	D806
	CUNNINGHAM OUT CUNNINGHAM OUT	D771		ROTARY BRUSH - ISO 0307 ROTARY BRUSH - ISO 0307	D789		MAIN F PUMP MAIN F PUMP	D807

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	TRAV STB TRAV STB	D809		MAIN F DUMP MAIN F DUMP	D827		GIÙ DOWN	D858
	ROTATE STB ROTATE STB	D810		TIMBRO SINISTRO LEFT STAMP	D828		S. DECK S. DECK	D875
	MAIN S PUMP MAIN S PUMP	D811		TIMBRO DESTRO RIGHT STAMP	D829		FFLOOD FFLOOD	D876
	MAIN S DUMP MAIN S DUMP	D812		TIMBRO SINISTRO FUORI LEFT STAMP OUT	D830		PULPIT PULPIT	D877
	OUT PUMP OUT PUMP	D813		TIMBRO DESTRO FUORI RIGHT STAMP OUT	D831		PORT A FRAME PORT A FRAME	D878
	OUT DUMP OUT DUMP	D814		ATTIVA SPRAY ON/OFF SPRAY	D845		STBD A FRAME STBD A FRAME	D879
	0 0	D815		SU UP	D846		BLUE LT BLUE LT	D880
	25 25	D816		GIÙ DOWN	D847		USP FLOOD USP FLOOD	D881
	50 50	D817		BLOCCO LOCK	D848		A. FLOOD A. FLOOD	D882
	75 75	D818		SU UP	D849		A. DECK A. DECK	D883
	100 100	D819		GIÙ DOWN	D850		MD BOW ON MD BOW ON	D884
	TRACK FWD TRACL FWD	D820		SINISTRA DESTRA LEFT RIGHT	D851		MD BOW UP MD BOW UP	D885
	TRACK AFT TRACL AFT	D821		BLOCCO LOCK	D852		WH FWD ON/OFF WH FWD ON/OFF	D886
	POMPA PUMP	D822		P1 P1	D853		WH FWD RD-WH WH FWD RD-WH	D887
	CONNO CONNO	D823		P2 P2	D854		WH AFT ON/OFF WH AFT ON/OFF	D888
	DUMP DUMP	D824		P3 P3	D855		WH AFT RD WH WH AFT RD WH	D889
	STOP OFF STOP OFF	D825		P4 P4	D856		DRAG BACK DRAG BACK	D892
	OFF OFF	D826		SU UP	D857		AUTO UP AUTO UP	D893

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	SET RETURN SET RETURN	D894		HEAD 1 HEAD 1	D927		SCARICO ARIA AIR DUMP	D946
	AUTO DOWN AUTO DOWN	D895		MAIN 1 MAIN 1	D928		LEVIGATRICE SANDERS	D947
	SEDILE GIREVOLE SEAT SWIVEL	D896		MAIN 2 MAIN 2	D929		FRENO INDIPENDENT BRAKE	D948
	DOOR LOCK CONTROL DOOR LOCK CONTROL	D911		HEAD 2 HEAD 2	D930		ACCIUGATURA TRACK DRY FORWARD	D949
	ALL-WHEEL DRIVE 4X4 ALL-WHEEL DRIVE 4X4	D912		MASTER MASTER	D931		SCIUGATURA POSTERIORE TRACK DRY REAR	D950
	TRACTION LOCK TRACTION LOCK	D914		FLUSH FLUSH	D932		ACCENSIONE GRU CRANE ENABLE	D951
	ROAD VEHICLE ENGINE ROAD VEHICLE ENGINE	D915		START START	D933		ABILITA MAGNETE MAGNET ENABLE	D952
	J2 UNFURL J2 UNFURL	D916		STOP STOP	D934		STACCARSI HITCH UP	D953
	J2 FURL J2 FURL	D917		LUCI LAVORO FRONTALE FRONT WORK LIGHTS	D935		ATTACCARSI HITCH DOWN	D954
	FLATTEN FLATTEN	D918		LUCI LAVORO POSTERIORI REAR WORK LIGHTS	D936		ABILITA FUNZIONI IDRAULICHE HYDRAULIC FUNCTIONS ENABLE	D955
	ENTER ENTER	D919		ATTIVA COMPRESSORE COMPRESSOR ACTIVATION	D937		POMPA OLIO IDRAULICO HYDRAULIC OIL FILL PUMP	D956
	CLR CLR	D920		RILASCIO ACCOPIATORE COUPLER RELEASE ENABLE	D939		GONFIA AIR BAG ANTERIORE FRONT HIRAIL AIR BAG INFLATE	D957
	MODE MODE	D921		RILASCIO ATTACCO ANTERIORE FRONT COUPLER RELEASE	D940		GONFIA AIR BAG POSTERIORE REAR HIRAIL AIR BAG INFLATE	D958
	VANG DUMP VANG DUMP	D922		RILASCIO POSTERIORE REAR COUPLER RELEASE	D941		ALZA ANTERIORI FRONT HIRAIL RAISE	D959
	VANG EASE VANG EASE	D923		RIPIANO ALTO SHELF COUPLER UP	D942		ABBASSA ANTERIORI FRONT HIRAIL LOWER	D960
	VANG ON VANG ON	D924		RIPIANO BASSO SHELF COUPLER DOWN	D943		ALZA POSTERIORE REAR HIRAIL RAISE	D961
	STAY ON STAY ON	D925		AUMENTA TRAZIONE MORE TRACTION	D944		ABBASSA POSTERIORE REAR HIRAIL LOWER	D962
	STAY EASE STAY EASE	D926		DIMINUISCI TRAZIONE LESS TRACTION	D945		ALZA BILANCERE RAISE OUTRIGGER	D963

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	ABBASSA BILANCERE LOWER OUTRIGGER	D964		CAB HEATER CAB HEATER	D983		EXIT RAMP EXIT RAMP	E002
	STABILIZZATORE ANTERIORE SX LEFT FRONT OUTRIGGER	D965		REVERSE OVERRIDE REVERSE OVERRIDE	D984		ETRAPEZE ETRAPEZE	E003
	STABILIZZATORE POSTERIORE SX LEFT REAR OUTRIGGER	D966		HEATED MIRRORS HEATED MIRRORS	D985		TAIT RADIO TAIT RADIO	E004
	STABILIZZATORE ANTERIORE DX RIGHT FRONT OUTRIGGER	D967		FIRE SUPPRESSION TEST FIRE SUPPRESSION TEST	D986		LIGHT LIGHT	E005
	STABILIZZATORE POSTERIORE DX RIGHT REAR OUTRIGGER	D968		FC FREEZE PREP FC FREEZE PREP	D987		DANGER DANGER	E006
	POMPA CARBURANTE FUEL TRANSFER PUMP	D969		SCV RESET SCV RESET	D988		DIM+ DIM+	E007
	ALZA PONTE RAISED DECK	D970		FOG MAKER TEST FOG MAKER TEST	D989		DIM- DIM-	E008
	ABBASSA PONTR LOWER DECK	D971		WIG WAG WIG WAG	D990		FM SAFETY FM SAFETY	E009
	MASTER LIGHT MASTER LIGHT	D972		I TALK TEST I TALK TEST	D991		FM TRACK FM TRACK	E010
	SCORRI RULLO LOAD	D973		BPS RESET BPS RESET	D992		FM PATH FM PATH	E011
	SCORRI RULLO LOAD	D974		FLANK CAMS FLANK CAMS	D993		FM REV FM REV	E012
	CAB LIGHT CAB LIGHT	D975		HEATED SCREEN HEATED SCREEN	D994		REC REC	E013
	EXTERNAL LIGHT TEST EXTERNAL LIGHT TEST	D976		PA RADIO PA RADIO	D995		AUTO AUTO	E014
	TICKET MACHINE TICKET MACHINE	D977		MIC MIC	D996		HOME HOME	E015
	N/S & O/S OVERRIDE N/S & O/S OVERRIDE	D978		DEMIST MAX DEMIST MAX	D997		END END	E016
	FAN FAN	D980		RAMP OUT RAMP OUT	D998		O/S TIP UP O/S TIP UP	E017
	FRESH AIR FRESH AIR	D981		RAMP IN RAMP IN	D999		SCARICO INFERIORE BOTTOM DRAIN	E018
	SALOON HEAT SALOON HEAT	D982		N/S TIP UP N/S TIP UP	E001		PRESSIONE SCARICO PRESSURE DRAIN	E019

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	CASSETTA DI ASPIRAZIONE SUCTION CASSETTE	E020		LETTERA K LETTER K	E038		ENGINE HEATING - ISO 2575 ENGINE HEATING - ISO 2575	E057
	CASSETTA DI ASPIRAZIONE SUCTION CASSETTE	E021		NUMERO 13 NUMERAL 13	E039		POWER TAKE OFF NO.1 POWER TAKE OFF NO.1	E058
	BOBINA STOP STOP COIL	E022		NUMERO 14 NUMERAL 14	E040		SCORRIULLO LOAD	E059
	STABILIZZATORE ANTERIORE SU FRONT STABILIZER UP	E023		NUMERO 15 NUMERAL 15	E041		SCORRIULLO LOAD	E060
	STABILIZZATORE ANTERIORE GIÙ FRONT STABILIZER DOWN	E024		NUMERO 16 NUMERAL 16	E042		SCORRIULLO LOAD	E061
	STABILIZZATORE POSTERIORE SU BACK STABILIZER UP	E025		NUMERO 17 NUMERAL 17	E043		SCORRIULLO LOAD	E062
	STABILIZZATORE POSTERIORE GIÙ BACK STABILIZER DOWN	E026		NUMERO 18 NUMERAL 18	E044		SCORRIULLO LOAD	E063
	DISABILITA FRENO DISABLE BRAKE	E027		NUMERO 19 NUMERAL 19	E045		SCORRIULLO LOAD	E064
	LETTERA F LETTER F	E028		NUMERO 20 NUMERAL 20	E046		PORT NAV LT PORT NAV LT	E065
	LETTERA H LETTER H	E029		FRECCIA + ARROW +	E047		STBD NAV LT STBD NAV LT	E066
	LETTERA I LETTER I	E030		FRECCIA - ARROW -	E048		STERN LIGHT STERN LIGHT	E067
	LETTERA O LETTER O	E031		TEST LUCE TEST LIGHT	E049		FWD MAST NO.1 FWD MAST NO.1	E068
	LETTERA Q Q	E032		PARTY PARTY	E050		FWD MAST NO.2 FWD MAST NO.2	E069
	LETTERA T LETTER T	E033		CMS CMS	E051		N.U.C. NO.1 N.U.C. NO.1	E070
	LETTERA V LETTER V	E034		N/S N/S	E053		FWD ANCHOR LIGHT FWD ANCHOR LIGHT	E071
	LETTERA Z LETTERA Z	E035		OVERRIDE OVERRIDE	E054		TOW LIGHT TOW LIGHT	E072
	LETTERA Y LETTER Y	E036		O/S O/S	E055		AFT MAST NO.1 AFT MAST NO.1	E073
	LETTERA J J	E037		CAB CAB	E056		AFT MAST NO.2 AFT MAST NO.2	E074

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AFT ANCHOR LIGHT AFT ANCHOR LIGHT	E075		HILL HOLDER HILL HOLDER	E097		SCALA D'ACCESSO ACCESS LADDER	E126
	MAIN SUPPLY MAIN SUPPLY	E076		SPK EXT SPK EXT	E098		N/S SALOON LIGHT N/S SALOON LIGHT	E127
	B/U SUPPLY B/U SUPPLY	E077		PERICOLO DANGER	E099		O/S SALOON LIGHT O/S SALOON LIGHT	E128
	MUTE MUTE	E078		HVAC SU HVAC UP	E100		PUMP PUMP	E129
	UNDER WAY UNDER WAY	E079		HVAC GIÙ HVAC DOWN	E101		EASE EASE	E130
	AT ANCHOR AT ANCHOR	E080		MIRROR HEAT MIRROR HEAT	E102		JIB IN/OUT JIB IN/OUT	E131
	TOWING TOWING	E081		AUTO START AUTO START	E103		JIB UP/DOWN JIB UP/DOWN	E132
	N.U.C. N.U.C.	E082		AUTO STOP AUTO STOP	E104		HI/LOW HI/LOW	E133
	N.U.C. NO.2 N.U.C. NO.2	E087		J2 CUNNO IN J2 CUNNO IN	E105		SLOW SLOW	E134
	TERGICRISTALLO WIPER WASH	E088		J2 CUNNO OUT J2 CUNNO OUT	E106		JIB TACK JIB TACK	E136
	TERGICRISTALLO WIPER WASH	E089		CONVEYOR OUT CONVEYOR OUT	E118		INNER FORE STAY INNER FORE STAY	E137
	HVAC ON/OFF HVAC ON/OFF	E090		CONVEYOR IN CONVEYOR IN	E119		STAYSAIL STAYSAIL	E138
	DRIVER'S BLOWER DRIVER'S BLOWER	E091		TIP TIP	E120		PORT SPRIT PORT SPRIT	E139
	DRIVER'S LAMP DRIVER'S LAMP	E092		HOOK LATCH HOOK LATCH	E121		STBD SPRIT STBD SPRIT	E140
	INT LTS OFF INT LTS OFF	E093		SLIDE SYLINDER SLIDE SYLINDER	E122		SPRIT SPRIT	E141
	DRIVER'S FAN DRIVER'S FAN	E094		TILT CYLINDER TILT CYLINDER	E123		CUNNO CUNNO	E142
	FLOOR HEAT FLOOR HEAT	E095		MAIN CYLINDER MAIN CYLINDER	E124		VANG VANG	E143
	INT LTS ALL INT LTS ALL	E096		INVERT INVERT	E125		OUTHAUL OUTHAUL	E144

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	STAYSAIL TACK STAYSAIL TACK	E145		SPLIT DOWN SPLIT DOWN	E166		PORTELLONE LATERALE SIDEDOOR	E184
	CHECK STAY CHECK STAY	E146		SPLIT UP SPLIT UP	E167		PORTELLONE LATERALE SIDEDOOR	E185
	UPPER DEFLECT UPPER DEFLECT	E147		DMS DMS	E168		RISCALDAMENTO FINESTRA FAN WINDOW	E186
	LOWER DEFLECT LOWER DEFLECT	E148		LETTERA "R" (SFONDO GIALLO RAL1021) LETTER "R" (YELLOW BACKGROUND RAL1021)	E169		DISABILI DIASABLED	E188
	JPRESET JPRESET	E149		NEUTRO NEUTRAL	E170		ANCORA ANCHOR	E189
	APRESET APRESET	E150		F F	E171		VENT OPEN VENT OPEN	E190
	MID MID	E151		ESTENSIONE LEFT OUT LEFT OUT	E172		VENT CLOSE VENT CLOSE	E191
	ENABLE ENABLE	E152		ESTENSIONE RIGHT OUT RIGHT OUT	E173		DIM UP DIM UP	E192
	STOP STOP	E153		MONITOR POWER MONITOR POWER	E174		DIM DOWN DIM DOWN	E193
	TRAVELER TRAVELER	E154		SBLOCCO BRACCIO UNLOCK ARM	E175		SENSORE DI PARCHEGGIO PARKING SENSOR	E195
	TRAVELER TRAVELER	E155		BLOCCO AVANTRENO LOCK FRONTHAND	E176		PLA SIM PLA SIM	E196
	CENTRE CENTRE	E156		SBLOCCO AVANTRENO UNLOCK FRONTHAND	E177		TRAILER TOWING MODE TRAILER TOWING MODE	E197
	TACK TACK	E157		CABINA SU CABIN UP	E178		AMOB AMOB	E198
	POLO POSITIVO POSITIVE POLARITY	E160		CABINA GIÙ CABIN DOWN	E179		FRESA F FCUTTER	E199
	POLO NEGATIVO NEGATIVE POLARITY	E161		ALZA UP	E180		FRESAR CUTTER R	E200
	STABILIZZATORE DENTRO STABILIZER IN	E163		ABBASSA DOWN	E181		WINCH AUTO WINCH AUTO	E201
	DOOR OPEN DOOR OPEN	E164		BRAKE TEST BRAKE TEST	E182		AUX 1 AUX 1	E501
	DOOR CLOSED DOOR CLOSED	E165		FRONT/REAR FRONT/REAR	E183		AUX 2 AUX 2	E502

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	CONSOLE LIGHT CONSOLE LIGHT	E503		STBD RECIRC STBD RECIRC	E521		PADS PADS	E551
	FRESH WATER PUMP FRESH WATER PUMP	E504		STBD FILL STBD FILL	E522		LEFT BATTER LEFT BATTER	E552
	BOW SPOT LIGHT BOW SPOT LIGHT	E505		REWIND A REWIND A	E523		RIGHT BATTER RIGHT BATTER	E553
	VACUUM VACUUM	E506		REWIND B REWIND B	E524		LEFT FRONT BATTER LEFT FRONT BATTER	E554
	DISCHARGE DISCHARGE	E507		VENT A/B VENT A/B	E525		RIGHT FRONT BATTER RIGHT FRONT BATTER	E555
	GERNI GERNI	E508		DEAD MAN DEAD MAN	E526		DRIBBLE BAR DRIBBLE BAR	E556
	VENT VENT	E509		SPEAKER BOTH SPEAKER BOTH	E527		PRESSURE BAR PRESSURE BAR	E557
	SNORKEL SNORKEL	E510		RILASCIA FRENO BRAKE RELEASE	E528		CANN CANN	E558
	FUEL PORT/STBD FUEL PORT/STBD	E511		APPLICA FRENO BRAKE APPLY	E529		FRONT LEFT FRONT LEFT	E559
	1 2 12	E512		RIENTRO STABILIZZATORI ANT FRONT STABILIZERS BACK	E530		FRONT RIGHT FRONT RIGHT	E560
	3 4 34	E513		FRECCE DENTRO ARROW IN	E543		REAR LEFT REAR LEFT	E561
	5 6 56	E514		FRECCE FUORI ARROWS OUT	E544		REAR RIGHT REAR RIGHT	E562
	7 8 78	E515		SB/- SB/-	E545		REAR CENTRE REAR CENTRE	E563
	9 0 90	E516		PS/+ PS/+	E546		HIGH PRESSURE OUT HIGH PRESSURE OUT	E564
	BILGE PUMP BILGE PUMP	E517		FRONT FRONT	E547		PRESSURE WASHER PRESSURE WASHER	E565
	PORT RECIRC PORT RECIRC	E518		REAR REAR	E548		FOG IN FOG IN	E566
	PORT FILL PORT FILL	E519		WIDTH WIDTH	E549		FOG OUT FOG OUT	E567
	AERATOR TIMER AERATOR TIMER	E520		LENGTH LENGTH	E550		PUMP ON/OFF PUMP ON/OFF	E568

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BARRA LUMINOSA LIGHT BAR	E569		TANK 6 TANK 6	E587		LOWER DEFLECT ON LOWER DEFLECT ON	E606
	BARRA LUMINOSA LIGHT BAR	E570		TANK 7 TANK 7	E588		UPPER DEFLECT OFF UPPER DEFLECT OFF	E607
	BARRA LUMINOSA LIGHT BAR	E571		TANK 8 TANK 8	E589		LOWER DEFLECT OFF LOWER DEFLECT OFF	E608
	BARRA LUMINOSA LIGHT BAR	E572		TANK 9 TANK 9	E590		CHOKE CHOKE	E610
	GIROFARO LIGHT BEACON	E573		TANK 10 TANK 10	E591		S/L S/L	E611
	RADIO RADIO	E574		TANK 11 TANK 11	E592		LUCI LIGHTS	E612
	USB USB	E575		TANK 12 TANK 12	E593		REEL RELEASE REEL RELEASE	E613
	USB-C USB-C	E576		WASH WASH	E594		BULK FILL BULK FILL	E614
	CONNETTORE CONNECTOR	E577		TRANS COOL TRANS COOL	E595		REWIND REWIND	E615
	FILL FILL	E578		DEWATER HOSE DEWATER HOSE	E596		SYSTEM SYSTEM	E616
	FLUSH FLUSH	E579		DEWATER OVBD DEWATER OVBD	E597		MUTE MUTE	E617
	CIRC CIRC	E580		PUMP PUMP	E598		IDLE UP IDLE UP	E618
	EVAC EVAC	E581		REV MATCH REV MATCH	E599		OPEN OPEN	E619
	TANK 1 TANK 1	E582		FLAT SHIFT FLAT SHIFT	E600		CLOSE CLOSE	E620
	TANK 2 TANK 2	E583		FILTRO FILTER	E602		GEAR PORT GEAR PORT	E621
	TANK 3 TANK 3	E584		PIENO EMPTY	E603		GEAR STBD GEAR STBD	E622
	TANK 4 TANK 4	E585		ARIA COMPRESSA COMPRESSOR AIR	E604		STATION STATION	E623
	TANK 5 TANK 5	E586		UPPER DEFLECT ON UPPER DEFLECT ON	E605		LEFT FRONT LEFT FRONT	E624

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	240V 240V	E625		SOLLEVA ISO7000-1184 FORKS UP ISO7000-1184	E649		NUOVA POSIZIONE CLEANING POSITION	E669
	PULSE PULSE	E626		ABBASSA ISO7000-1183 FORKS DOWN ISO7000-1183	E650		SPOSTA POSIZIONE TRANSPORT POSITION	E670
	PULSE PULSE	E627		INCLINA ALTO ISO7000-1186 FORKS TILT UP ISO7000-1186	E651		ESTENSIONE BRACCIO ARM EXTENTION	E671
	DRS DRS	E628		INCLINA BASSO ISO7000-1185 FORKS TILT DOWN ISO7000-1185	E652		RIPRISTINA POSIZIONE RESET POSITION	E672
	STEPS NOT STOWED STEPS NOT STOWED	E629		J1 J1	E654		ROTAZIONE SPAZZOLA BRUSH ROTATION	E673
	VICE NOT STOWED VICE NOT STOWED	E630		CHIUDI PORTA DOOR CLOSE	E655		MAIN OUT FAST MAIN OUT FAST	E675
	PRES FILTER PRES FILTER	E631		BRACCIO DI ASPIRAZIONE SUCTION ARM	E656		MAIN IN FAST MAIN IN FAST	E676
	RET FILTER RET FILTER	E632		BRACCIO DI ASPIRAZIONE SX SUCTION ARM LEFT	E657		MAIN IN SLOW MAIN IN SLOW	E677
	SCORRI FINESTRINO POST REAR WINDOW LIFT	E633		BRACCIO ASPIRAZIONE DENTRO SUCTION ARM IN	E658		MAIN OUT SLOW MAIN OUT SLOW	E678
	SIRENA AVVISO SERENA AVVISO	E635		BRACCIO ASPIRAZIONE FUORI SUCTION ARM OUT	E659		TRAV STBD TRAV STBD	E679
	MOVIMENTO BRACCIO MOVE ARM	E636		RPM1 RPM1	E660		RIG RIG	E680
	ATTIVA TRIVELLA ACTIVE AUGER	E637		FRECCIA SU ARROW UP	E662		RCH RCH	E681
	ATTIVA BRACCIO ACTIVE ARM	E638		FRECCIA GIÙ ARROW DOWN	E663		RICIRCOLO RECYCLE	E682
	MUOVI TRIVELLA MOVE AUGER	E639		SBLOCCO ISO 3305 UNLOCK ISO 3305	E664		PEDANE/SERRANDE APERTO SHUTTER/PLATFORM OPEN	E683
	VERRICELLO SU WINCH UP	E640		OTTURATORE CHIUSO SHUTTER CLOSE	E665		LUCE SINISTRA LEFT LIGHT	E684
	IMPOSTAZIONI TRIVELLA AUGER SETTINGS	E641		OTTURATORE APERTO SHUTTER OPEN	E666		LUCE DESTRA RIGHT LIGHT	E685
	RUOTA ROTATE	E643		TEMPERATURA TEMPERATURE	E667		LUCE FRONTALE FRONTAL LIGHT	E686
	WHITE LIGHT WHITE LIGHT	E648		ACK ALARM ACK ALARM	E668		REWIND REWIND	E687

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	RETRACT REWIND RETRACT REWIND	E688		FRESCO FRESH	E706		EXTN. FR EXTN. FR	E724
	PRESSURE REWIND PRESSURE REWIND	E689		FRESCO SOPRA FRESH UP	E707		EXTN. RR EXTN. RR	E725
	RETURN REWIND RETURN REWIND	E690		FRESCO SOTTO FRESH DOWN	E708		JACK DEADMAN JACK DEADMAN	E726
	DRAIN REWIND DRAIN REWIND	E691		ABS ABS	E709		BOOM SELECT BOOM SELECT	E727
	START START	E692		INVERTED INVERTED	E710		EMERG. PUMP EMERG. PUMP	E728
	STOP STOP	E693		FRESA STOP CUTTER STOP	E711		E-STOP RESET ESTOP RESET	E729
	A/C START A/C START	E694		PORTA PALI FUORI POLE CARRIER OUT	E712		JACK SELECT JACK SELECT	E730
	A/C STOP A/C STOP	E695		PORTA PALI DENTRO POLE CARRIER IN	E713		SPRING EN. SPRING EN.	E731
	HYD AUX HYD AUX	E696		BOLSTER WINCHES BOLSTER WINCHES	E714		SPRING STOWED SPRING STOWED	E732
	LIGHT LIGHT	E697		PORTA PALI POLE CARRIER	E715		JACK FL UP JACK FL UP	E733
	EXTERNAL LIGHT EXTERNAL LIGHT	E698		AUTOPARLANTE SPEAKING	E716		JACK RL UP JACK RL UP	E734
	FAST FAST	E699		ACCENSIONE MONITOR MONITOR POWER	E717		JACK FL DOWN JACK FL DOWN	E735
	EXTEND EXTEND	E700		JACK FL JACK FL	E718		JACK RL DOWN JACK RL DOWN	E736
	RETRACT RETRACT	E701		JACK RL JACK RL	E719		BOOM ACTIVE BOOM ACTIVE	E737
	WORK LIGHT WORK LIGHT	E702		JACK FR JACK FR	E720		JACK RR UP JACK RR UP	E738
	CABINET LIGHT CABINET LIGHT	E703		JACK RR JACK RR	E721		JACK FR UP JACK FR UP	E739
	DIESEL DIESEL	E704		EXTN. FL EXTN. FL	E722		JACK RR DOWN JACK RR DOWN	E740
	AIR AIR	E705		EXTN. RL EXTN. RL	E723		JACK FR DOWN JACK FR DOWN	E741

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BASE/REMOTE BASE/REMOTE	E742		MOTORE ENGINE	E760		DISCHARGE VALVE DISCHARGE VALVE	E791
	OBSERV. REMOTE OBSERV. REMOTE	E743		RICICLO RECYCLE	E761		PRESSURE DISCHARGE PRESSURE DISCHARGE	E792
	EWP FULL EWP FULL	E744		RBS RBS	E762		PRESSURE PRESSURE	E793
	EWP LHS EWP LHS	E745		RICICLO VENTILAZIONE FAN RECYCLE	E768		HANDRAIL HANDRAIL	E794
	EWP RHS EWP RHS	E746		ABS ABS	E769		POMPA PUMP	E795
	START START	E747		PTO ON/OFF PTO ON/OFF	E770		SERBATOIO TANK	E796
	RPM 3 RPM 3	E748		SPAZZOLA DESTRA RAISE RH SIDE SLIDE BRUSH	E779		LUCE LIGHT	E797
	SIDE LIGHTS SIDE LIGHTS	E749		SPAZZOLA SINISTRA RAISE LH SIDE SLIDE BRUSH	E780		RAIL RAISE RAIL RAISE	E798
	CANT CANT	E750		SPRAY DESTRO SRY RIGHT	E781		RAIL LOWER RAIL LOWER	E799
	TRIM TRIM	E751		SPRAY SINISTRO SPRAY LEFT	E782		RAIL DOWN RAIL DOWN	E800
	CANT CANT	E752		UGELLO NOZZLE SPRAY	E783		RAIL UP RAIL UP	E801
	TRIM TRIM	E753		DIMINUIRE PRESSIONE DECREASE SPRAY PRESSURE	E784		LIVELLO SERBATOIO 6 TANK LEVEL 6	E802
	ALTA TEMPERATURA HIGH TEMPERATURE	E754		ALIMENTARE PRESSIONE INCREASE SPRAY PRESSURE	E785		SERBATOIO 6 ON/OFF ON/OFF TANK 6	E803
	BASSA TEMPERATURA LOW TEMPERATURE	E755		UGELLO GETTO ROTANTE NOZZLE ROTATIONAL SPRAY JETS	E786		START START	E804
	GENERICO GENERIC	E756		SPRAY BAR SPRAY BAR	E787		STAIR RAISE STAIR RAISE	E805
	RBS RBS	E757		SPAZZOLA DESTRA BRUSH RIGHT	E788		STAIR LOWER STAIR LOWER	E806
	ABS ABS	E758		SPAZZOLA SINISTRA BRUSH LEFT	E789		DISPLAY PILOT DISPLAY PILOT	E807
	ABS ABS	E759		LAVAGGIO SPAZZOLA BRUSH WASH	E790		DISPLAY COPILOT DISPLAY COPILOT	E808

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	HARRIS 24V HARRIS 24V	E809		CUNNO IN CUNNO IN	E827		TACK MHO IN TACK MHO IN	E845
	ASSE FERROVIARIO GIÙ RAIL AXLE DOWN	E810		CUNNO OUT CUNNO OUT	E828		TACK MHO OUT TACK MHO OUT	E846
	ASSE FERROVIARIO GIÙ R RAIL AXLE DOWN R	E811		PORT D/B UP PORT D/B UP	E829		RADAR RADAR	E847
	ASSE FERROVIARIO SU F RAIL AXLE UP F	E812		PORT D/B DOWN PORT D/B DOWN	E830		RESET RESET	E848
	ASSE FERROVIARIO SUR RAIL AXLE UP R	E813		STBD D/B UP STBD D/B UP	E831		ACM ACM	E849
	FRONT RAIL RAISE FRONT RAIL RAISE	E814		STBD D/B DOWN STBD D/B DOWN	E832		INNO INNO	E850
	REAR RAIL RAISE REAR RAIL RAISE	E815		S/T JIB IN S/T JIB IN	E833		HESAI HESAI	E851
	FRONT RAIL LOWER FRONT RAIL LOWER	E816		S/T JIB OUT S/T JIB OUT	E834		COM COM	E852
	REAR RAIL LOWER REAR RAIL LOWER	E817		MAST R PORT MASTER R PORT	E835		BACK BONE BACK BONE	E853
	S/L S/L	E818		MAST R STBD MASTER R STBD	E836		COOL COOL	E854
	ANTI LAG ANTI LAG	E819		LEAD IN LEAD IN	E837		STEERING 6 STEERING 6	E855
	TURBO BOOST 1 TURBO BOOST 1	E820		LEAD OUT LEAD OUT	E838		STEERING 7 STEERING 7	E856
	TURNO BOOST 2 TURNO BOOST 2	E821		LEAD UP LEAD UP	E839		STEERING 8 STEERING 8	E857
	LANCIA SPRAY WATER	E822		LEAD DOWN LEAD DOWN	E840		STEERING 10 STEERING 10	E858
	BACK FLUSH BACK FLUSH	E823		LEAD IN LEAD IN	E841		STEERING 11 STEERING 11	E859
	GEAR GEAR	E824		BOOM IN BOOM IN	E842		LIFTING 1 LIFTING 1	E860
	MAIN IN MAIN IN	E825		TACK J4/J1 OUT TACK J4/J1 OUT	E843		LIFTING 2 LIFTING 2	E861
	MAIN OUT MAIN OUT	E826		TACK J4/J1 IN TACK J4/J1 IN	E844		LIFTING 3 LIFTING 3	E862

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	LIFTING4 LIFTING 4	E863		MID EASE MID EASE	E882		20% 20%	E900
	LIFTING5 LIFTING 5	E864		LOWER PUMP LOWER PUMP	E883		100% 100%	E901
	LIFTING6 LIFTING 6	E865		LOWER EASE LOWER EASE	E884		LPW LPW	E902
	LIFTING7 LIFTING 7	E866		PRESET 1 PRESET 1	E885		HPW HPW	E903
	LIFTING8 LIFTING 8	E867		PRESET 2 PRESET 2	E886		PRESET 1 PRESET 1	E911
	LIFTING9 LIFTING 9	E868		PRESET 3 PRESET 3	E887		SOS SOS	E912
	TRANS BRAKE TRANS BRAKE	E869		PRESET 4 PRESET 4	E888		TIPPER BODY UP TIPPER BODY UP	E913
	BURNOUT BURNOUT	E870		PRESET 5 PRESET 5	E889		TIPPER BODY DOWN TIPPER BODY DOWN	E914
	ROAD VEHICLE ENGINE ROAD VEHICLEENGINE	E871		PRESET 6 PRESET 6	E890		TAILGATE LOCK TAILGATE LOCK	E915
	J1 TACK J1 TACK	E873		MAIN 2 MAIN 2	E891		TAILGATE CHUTE L TAILGATE CHUTE L	E916
	J2 TACK J2 TACK	E874		PRIM 1/3 PRIM 1/3	E892		TAILGATE CHUTE R TAILGATE CHUTE R	E917
	J3 TACK J3 TACK	E875		PRIM 2 PRIM 2	E893		TAILGATE CHUTE MIDDLE TAILGATE CHUTE MIDDLE	E918
	J4 TACK J4 TACK	E876		MAIN 1/3 MAIN 1/3	E894		BEACONS BEACONS	E919
	J6 TACK J6 TACK	E877		LEG UP LEG UP	E895		WORKLIGHT WORKLIGHT	E920
	STORM TACK STORM TACK	E878		LEG DOWN LEG DOWN	E896		WORK BUTTON WORK BUTTON	E921
	UPPER PUMP UPPER PUMP	E879		5% 5%	E897		MOVIMENTO BENNA BUCKET MUVEMENT	E922
	UPPER EASE UPPER EASE	E880		10% 10%	E898		GENERIC GENERIC	E923
	MID PUMP MID PUMP	E881		15% 15%	E899		SBLOCCO BRACCIO UNLOCK ARM	E924

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	MUOVI DESTRA MOVE RIGHT	E925		ENGINE START STOP ENGINE START STOP	E954		INTERLOCK INTERLOCK	E972
	FRENO A MANO PARK BRAKE	E937		WATER PUMP WATER PUMP	E955		DISCHARGE VALVE DISCHARGE VALVE	E973
	TANK DOWN TANK DOWN	E938		RPM UP RPM UP	E956		DOOR LOCK DOOR LOCK	E974
	TANK UP TANK UP	E939		RPM DOWN RPM DOWN	E957		DOOR UNLOCK DOOR UNLOCK	E975
	BEACON BEACON	E940		CLAMP CLAMP	E958		DOOR OPEN DOOR OPEN	E976
	INTERLOCK INTERLOCK	E941		200 200	E959		DOOR CLOSE DOOR CLOSE	E977
	FOG LIGHT FOG LIGHT	E942		20 20	E960		TANK UP TANK UP	E978
	LIGHT BAR LIGHT BAR	E943		2 2	E961		TANK DOWN TANK DOWN	E979
	REAR LIGHT REAR LIGHT	E944		AUX A AUX A	E962		WORK LIGHTS WORK LIGHTS	E980
	LUCE LIGHT	E945		AUX B AUX B	E963		VACUUM VACUUM	E982
	LUCE LIGHT	E946		BOOM VALVE OPEN BOOM VALVE OPEN	E964		REMOTE REMOTE	E983
	LUCE LIGHT	E947		BOOM VALVE CLOSE BOOM VALVE CLOSE	E965		PITCH UP PITCH UP	E984
	LUCE LIGHT	E948		BOOM UP BOOM UP	E966		BUTTON RESET BUTTON RESET	E985
	DC PUMP DC PUMP	E949		BOOM DOWN BOOM DOWN	E967		FLIGHT MAP INC FLIGHT MAP INC	E986
	EWP RAISE EWP RAISE	E950		BOOM LEFT BOOM LEFT	E968		FLIGHT MAP DEC FLIGHT MAP DEC	E987
	EWP LOWER EWP LOWER	E951		BOOM RIGHT BOOM RIGHT	E969		FCS PORT OUT FCS PORT OUT	E988
	EWP RIGHT EWP RIGHT	E952		BOOM IN BOOM IN	E970		FCS PORT IN FCS PORT IN	E989
	EWP LEFT EWP LEFT	E953		BOOM OUT BOOM OUT	E971		AERO HMI MAP INC AERO HMI MAP INC	E990

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	AERO HMI MAP DEC AERO HMI MAP DEC	E991		AERO MAP INC AERO MAP INC	F009		LOCK LOCK	F027
	RAKE HMI MAP INC RAKE HMI MAP INC	E992		AERO MAP DEC AERO MAP DEC	F010		UNLOCK UNLOCK	F028
	RAKE HMI MAP DEC RAKE HMI MAP DEC	E993		LINK JIB SHEET LINK JIB SHEET	F011		MOVE UP MOVE UP	F029
	FCS STBD IN FCS STBD IN	E994		LINK MAST ROT LINK MAST ROT	F012		MOVE DOWN MOVE DOWN	F030
	FCS STBD OUT FCS STBD OUT	E995		LINK JIB CAR LINK JIB CAR	F013		LOCK LOCK	F031
	UP WIND UP WIND	E996		JIB OUT PORT JIB OUT PORT	F014		LOCK LOCK	F032
	DOWN WIND DOWN WIND	E997		JIB OUT STBD JIB OUT STBD	F015		MOVE UP MOVE UP	F033
	HAVE AP HAVE AP	E998		ON ON	F016		UNLOCK UNLOCK	F034
	TOW MODE TOW MODE	E999		DOWN DOWN	F017		MOVE RIGHT MOVE RIGHT	F035
	SHED MODE SHED MODE	F000		UP UP	F018		UNLOCK UNLOCK	F036
	MAIN SAIL MAIN SAIL	F001		TILT DOWN TILT DOWN	F019		MOVE UP MOVE UP	F037
	HEAD SAIL HEAD SAIL	F002		TILT UP TILT UP	F020		15W40 15W40	F038
	ALARM RESET ALARM RESET	F003		SLEW RIGHT SLEW RIGHT	F021		SAE30 SAE30	F039
	BUTTON RESET BUTTON RESET	F004		SLEW LEFT SLEW LEFT	F022		SAE60 SAE60	F040
	MARKER MARKER	F005		SOS SOS	F023		WASTE COOLANT WASTE COOLANT	F041
	FCS DOCK POS FCS DOCK POS	F006		COMMUNICATION COMMUNICATION	F024		NEW COOLANT NEW COOLANT	F042
	FCS MAP INC FCS MAP INC	F007		NO COMMUNICATION NO COMMUNICATION	F025		HPG HPG	F043
	FCS MAP DEC FCS MAP DEC	F008		CONSOLE CONSOLE	F026		HVG HVG	F044

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	WASTE OIL WASTE OIL	F045		E/V CASSA PP E/V CASSA PP	F077		BERTH BERTH	F095
	L L	F046		TEST CAPSIZE TEST CAPSIZE	F078		CABIN CABIN	F096
	AGRI AGRI	F047		RIMORCHIO RIMORCHIO	F079		DECK DECK	F097
	SPRINKLERS MODE SPRINKLERS MODE	F048		ABS ABS	F080		ROOF1 ROOF1	F098
	LEFT SPRINKLERS LEFT SPRINKLERS	F049		24V 24V	F081		ROOF2 ROOF2	F099
	RIGHT SPRINKLERS RIGHT SPRINKLERS	F050		C C	F082		DOCK DOCK	F100
	LUCI LIGHT	F051		R R	F083		ANCHOR ANCHOR	F101
	RAISE RAISE	F066		FRESH FRESH	F084		FANS FANS	F102
	LOWER LOWER	F067		SALT SALT	F085		OVEN OVEN	F103
	GIROFARO/BANDIERA BEACON/FLAG	F068		BILGE 1 BILGE1	F086		FLOOR FLOOR	F104
	CAMPANA BELL	F069		BILGE 2 BILGE2	F087		LOGO STABI LOGO STABI	F105
	F1 F1	F070		SOUNDER SOUNDER	F088		PISTONE ESPULSORE EJECTOR PISTON	F106
	F2 F2	F071		FRIDGE FRIDGE	F089		FILTRO ROTANTE ROTATING FILTER	F107
	F3 F3	F072		FREEZER FREEZER	F090		POMPA VUOTO VACUUM PUMP	F108
	F4 F4	F073		VHF VHF	F091		SERBATOIO ACQUA WATER PUMP	F109
	RESET RESET	F074		MUSIC MUSIC	F092		RICICLO RECYCLE	F112
	MENU MENU	F075		BAIT BAIT	F093		BRACCIO GIÙ ARM LOWER	F115
	E/V CASSA AM EV CASSA AM	F076		NAV NAV	F094		BRACCIO SU ARM RAISE	F116

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	DOWN DOWN	F117		FAST OUT FAST OUT	F151		L TILT DOWN L TILT DOWN	F170
	LOGO STABI STABI LOGO	F118		SLOW IN SLOW IN	F152		R TILT UP R TILT UP	F171
	REIMPOSTA CONTATORE RESET COUNTER	F119		SLOW OUT SLOW OUT	F153		R TILT DOWN R TILT DOWN	F172
	INTERRUTTORE BOBINA REEL SWITCH	F120		ABS ABS	F155		DRIVING LIGHTS DRIVING LIGHTS	F173
	AVVOLGI LOAD IN	F125		ABS ABS	F156		LOCKER LIGHTS LOCKER LIGHTS	F174
	SROTOLA LOAD OUT	F126		MAP MAP	F157		FRONT BEACONS FRONT BEACON	F175
	AVVOLGI/SROTOLA LOAD IN/OUT	F127		TURBO +/- TURBO +/-	F158		POWER DIVIDER POWER DIVIDER	F176
	FRECCIA ARROW	F128		ENGINE ON/OFF AUTO ENGINE ON/OFF AUTO	F159		ENGINE ENGINE	F177
	RESET RESET	F129		SIDE DECKLIGHT SIDE DECKLIGHT	F160		OIL PRESSURE OIL PRESSURE	F178
	WASH HAND WASH HAND	F130		TRIFOLD IN TRIFOLD IN	F161		JIB ALARM JIB ALARM	F179
	POMPA FUORI PUMP OUT	F131		TRIFOLD OUT TRIFOLD OUT	F162		STABILISER ALARM STABILISER ALARM	F180
	POMPA RICIRCOLO RECYCLE PUMP	F132		BIFOLD IN BIFOLD IN	F163		STEP POLE ALARM STEP POLE ALARM	F181
	STOP STOP	F145		BIFOLD OUT BIFOLD OUT	F164		CROSS LOCKS CROSS LOCKS	F182
	SCARICARE UNLOAD	F146		FOLD IN FOLD IN	F165		PORT DUMP PORT DUMP	F185
	CARICARE LOAD	F147		FOLD OUT FOLD OUT	F166		TACK TACK	F186
	ACCELERATORE ACCELERATOR	F148		LIFT UP LIFT UP	F167		STBD FILL STBD FILL	F187
	SMART BAR SMART BAR	F149		LIFT DOWN LIFT DOWN	F168		STBD DUMP STBD DUMP	F188
	FAST IN FAST IN	F150		L TILT UP L TILT UP	F169		CANNON CANNON	F189

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	HV DIESEL HV DIESEL	F190		PRESSIONE OLIO OIL PRESSURE	F230		HOIST UP HOIST UP	F248
	LV DIESEL LV DIESEL	F191		HYD LEVEL HYD LEVEL	F231		HOIST DOWN HOIST DOWN	F249
	HYD OIL HYD OIL	F192		ENGINE START STOP ENGINE START STOP	F232		BLOCCO PIANO SUPERIORE UPPER DECK BLOCK	F250
	15W40 OIL 15W40 OIL	F193		RESET AUTO RESET AUTO	F233		SBLOCCO PIANO SUPERIORE UPPER DECK UNLOCK	F251
	FREEWHEEL FREEWHEEL	F194		PUMP ON/OFF PUMP ON/OFF	F234		WASH PUMP WASH PUMP	F252
	DEMOLITORE APERTO WRECKER OPEN	F197		PUMP 10L TEST PUMP 10L TEST	F235		CABINET LIGHTS CABINET LIGHTS	F253
	DEMOLITORE CHIUSO WRECKER CLOSE	F198		VALVE SELECTOR VALVE SELECTOR	F236		CARRELLO CART	F254
	RICICLO RECYCLE	F211		OPEN VALVE OPEN VALVE	F237		BRACCIO ARM	F255
	DEADMAN DEADMAN	F215		CLOSE VALVE CLOSE VALVE	F238		CABINET HEATER CABINET HEATER	F256
	COMPRESSORE/TEMPERATURA COMPRESSOR/TEMPERATURE	F220		SHUT DOWN SHUT DOWN	F239		BOOM LIGHTS BOOM LIGHTS	F257
	G G	F222		REEL A RELEASE REEL A RELEASE	F240		WIRELESS WIRELESS	F258
	HP HP	F223		REEL B RELEASE REEL B RELEASE	F241		DUMP/BOOM ENABLE DUMP/BOOM ENABLE	F259
	GENERICO GENERIC	F224		SPEED SLOW SPEED SLOW	F242		MUD DOOR CLOSED MUD DOOR CLOSED	F260
	MOTORE ENGINE	F225		SPEED FAST SPEED FAST	F243		MUD DOOR OPEN MUD DOOR OPEN	F261
	AUMENTA INCREASE	F226		PRESSURE VENT PRESSURE VENT	F244		WATER PRESS DOWN WATER PRESS DOWN	F262
	DIMINUISCI DECREASE	F227		REEL A REWIND REEL A REWIND	F245		WATER PRESS UP WATER PRESS UP	F263
	VENTOLA FAN	F228		REEL B REWIND REEL B REWIND	F246		WATER TEMP DOWN WATER TEMP DOWN	F264
	VENTOLA FAN	F229		PIATTAFORMA PLATFORM	F247		WATER TEMP UP WATER TEMP UP	F265

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BOOM LIMITER DOWN BOOM LIMITER DOWN	F266		BRUSH LEFT BRUSH LEFT	F288		DISCHARGE VALVE CLOSE DISCHARGE VALVE CLOSE	F308
	BOOM LIMITER UP BOOM LIMITER UP	F267		BRUSH RIGHT BRUSH RIGHT	F289		SUCTION VALVE OPEN SUCTION VALVE OPEN	F309
	BURNER BURNER	F268		WIDESWEEP WIDESWEEP	F290		SUCTION VALVE CLOSE SUCTION VALVE CLOSE	F310
	VIBRATOR VIBRATOR	F269		AUX BRUSH AUX BRUSH	F291		SUCTION VALVE SUCTION VALVE	F311
	WIRED WIRED	F270		BRUSH MASTER BRUSH MASTER	F292		VERRICELLO 1 WINCH 1	F312
	RPM RPM	F271		FRECCIA ARROW	F293		VERRICELLO 2 WINCH 2	F313
	SUCTION SLAVE SUCTION SLAVE	F272		SIDE BRUSH UP PRESSURE SIDE BRUSH UP PRESSURE	F294		FARO SU LIGHT UP	F314
	INJECTION 10L TEST INJECTION 10L TEST	F277		SIDE BRUSH DOWN PRESSURE SIDE BRUSH DOWN PRESSURE	F295		FARO GIU LIGHT DOWN	F315
	ENCODER LEFT ENCODER LEFT	F278		WS UP PRESSURE QWS UP PRESSURE	F296		F4 F4	F316
	ENCODER RIGHT ENCODER RIGHT	F279		WS DOWN PRESSURE WS DOWN PRESSURE	F297		F5 F5	F317
	SWEEP MODE SWEEP MODE	F280		LUCE LIGHT	F298		ESC ESC	F318
	LP WATER LP WATER	F281		VACUUM ON VACUUM ON	F301		SPRAY O/I SPRAY O/I	F319
	HP WATER HP WATER	F282		VACUUM OFF VACUUM OFF	F302		AGITATOR O/I AGITATOR O/I	F320
	LH SIDE WATER LH SIDE WATER	F283		PRESSURE ON PRESSURE ON	F303		AIR O/I AIR O/I	F321
	RH SIDE WATER RH SIDE WATER	F284		PRESSURE OFF PRESSURE OFF	F304		CHEMICALS O/I CHEMICALS O/I	F322
	WS WATER WS WATER	F285		PURGE ON PURGE ON	F305		CHEMICALS + CHEMICALS +	F323
	FAN SUPERBOOST FAN SUPERBOOST	F286		PURGE OFF PURGE OFF	F306		CHEMICALS - CHEMICALS -	F324
	FAN FAN	F287		DISCHARGE VALVE OPE DISCHARGE VALVE OPE	F307		BACK-CONVEYING O/I BACK-CONVEYING O/I	F325

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BACK-CONVEYING+ BACK-CONVEYING+	F326		FILL FILL	F344		COMP LT COMP LT	F362
	BACK-CONVEYING- BACK-CONVEYING-	F327		TACK TACK	F345		BOOM LTS BOOM LTS	F363
	BACK-CONVEYING O/I BACK-CONVEYING O/I	F328		DUMP DUMP	F346		BBQ LTS BBQ LTS	F364
	LUBRICATION UNIT O/I LUBRICATION UNIT O/I	F329		HATCH OPEN HATCH OPEN	F347		SPRD LTS SPRD LTS	F365
	SHAKER O/I SHAKER O/I	F330		HATCH CLOSED HATCH CLOSED	F348		STBD TABLE STBD TABLE	F366
	F F	F331		SUCTION HOSE IN TUBA ASIRAZIONE DENTRO	F349		J2 TACK J2 TACK	F367
	M M	F332		SUCTION HOSE OUT TUBO ASPIRAZIONE FUORI	F350		J3 TACK J3 TACK	F368
	R R	F333		RUOTA BRACCIO ANTIORARIO ROTATE COUNTERLOCKWISE ARM	F351		MAIN FURL MAIN FURL	F369
	COMPRESSOR COMPRESSOR	F334		RUOTA BRACCIO ORARIO ROTATE CLOCKWISE ARM	F352		MAIN HOIST MAIN HOIST	F370
	RECYCLE RECYCLE	F335		LOAD UP LOAD UP	F353		ANCHOR ANCHOR	F371
	ON ON	F336		LOAD DOWN LOAD DOWN	F354		THRST THRST	F372
	OFF OFF	F337		DOOR OPEN DOOR OPEN	F355		MAIN MAIN	F373
	OPEN OPEN	F338		DOOR CLOSED DOOR CLOSED	F356		VANG VANG	F374
	CLOSE CLOSE	F339		NAV LTS NAV LTS	F357		J1 FURL J1 FURL	F375
	UP UP	F340		M/HD LT M/HD LT	F358		MAST WINCH MAST WINCH	F376
	DOWN DOWN	F341		TRI LT TRI LT	F359		PORT TWK PORT TWK	F377
	1/3 1/3	F342		WINDEX WINDEX	F360		OB WINCH OB WINCH	F378
	2 2	F343		STEAM LT STEAM LT	F361		IB WINCH IB WINCH	F379

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	OB WINCH OB WINCH	F380		MENU MENU	F398		LOAD LOAD	F416
	IB WINCH IB WINCH	F381		LOWER DEFL IN LOWER DEFL IN	F399		AUTO ICE AUTO ICE	F417
	MAST WINCH MAST WINCH	F382		LOWER DEFL OUT LOWER DEFL OUT	F400		LOAD LOAD	F418
	STBD TWK STBD TWK	F383		UPPER DEFL IN UPPER DEFL IN	F401		LOAD UP LOAD UP	F419
	JO TACK JO TACK	F384		UPPER DEFL OUT UPPER DEFL OUT	F402		LOAD DOWN LOAD DOWN	F420
	JO FLAT JO FLAT	F385		JIB TACK IN JIB TACK IN	F403		GENERIC GENERIC	F421
	IN IN	F386		JIB TACK OUT JIB TACK OUT	F404		GENERIC GENERIC	F422
	OUT OUT	F387		GS TACK IN GS TACK IN	F405		WATER+ WATER +	F423
	A2/A3 TACK A2/A3 TACK	F388		GS TACK OUT GS TACK OUT	F406		WATER - WATER -	F424
	A2/A3 FLAT A2/A3 FLAT	F389		JIB U/D UP JIB U/D UP	F407		WATER WATER	F425
	LH TUNNEL OUT LH TUNNEL OUT	F390		JIB U/D DOWN JIB U/D DOWN	F408		BRUSH BRUSH	F426
	LH TUNNEL IN LH TUNNEL IN	F391		JIB I/O IN JIB I/O IN	F409		FAN FAN	F427
	RH TUNNEL OUT RH TUNNEL OUT	F392		JIB I/O OUT JIB I/O OUT	F410		SNORKEL UP SNORKEL UP	F430
	RH TUNNEL IN RH TUNNEL IN	F393		VANG DUMP VANG DUMP	F411		SNORKEL DOWN SNORKEL DOWN	F431
	CROWN ADJ CROWN ADJ	F394		PROP UP PROP UP	F412		2ND BEACON 2ND BEACON	F432
	LH EXT SLOPE LH EXT SLOPE	F395		PROP DOWN PROP DOWN	F413		HAZARD HAZARD	F433
	RH EXT SLOPE RH EXT SLOPE	F396		IGCM IGCM	F414		AIR CON AIR CON	F434
	ARROW ARROW	F397		WORK LIGHT WORK LIGHT	F415		SIBS SIBS	F435

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	COOLANT LEVEL COOLANT LEVEL	F436		MASSETTO SINISTRA SCREED LEFT	F454		MULTI FUNCTION COW OUT MULTI FUNCTION COW OUT	F478
	REAR LIGHTS REAR LIGHTS	F437		MASSETTO DESTRA SCREED RIGHT	F455		HEAD GATE CLOSE HEAD GATE CLOSE	F479
	EXP BEACON EXP BEACON	F438		MASSETTO DESTRA SCREED RIGHT	F456		HEAD GATE OPEN HEAD GATE OPEN	F480
	TLC TLC	F439		MASSETTO SINISTRA SCREED LEFT	F457		CHUTE LIFT UP CHUTE LIFT UP	F481
	EXT WORK LIGHTS EXT WORK LIGHTS	F440		MASSETTO SU GIÙ SCREED UP DOWN	F458		CHUTE LIFT DOWN CHUTE LIFT DOWN	F482
	INT ACCENT LIGHTS INT ACCENT LIGHTS	F441		MASSETTO SU GIÙ SCREED UP DOWN	F459		TEAR DROP IN TEAR DROP IN	F485
	EXT ACCENT LIGHTS EXT ACCENT LIGHTS	F442		MASSETTO SU GIÙ SCREED UP DOWN	F460		TEAR DROP OUT TEAR DROP OUT	F486
	COLOR COLOR	F443		MASSETTO SU GIÙ SCREED UP DOWN	F461		BELLY BAND UP BELLY BAND UP	F487
	COLOR COLOR	F444		MASSETTO SU GIÙ SCREED UP DOWN	F462		BELLY BAND DOWN BELLY BAND DOWN	F488
	RAIN LIGHT RAIN LIGHT	F445		MASSETTO SU GIÙ SCREED UP DOWN	F463		COME ALONG DOWN COME ALONG DOWN	F489
	O/H O/H	F446		MASSETTO SINISTRA SCREED LEFT	F464		COME ALONG UP COME ALONG UP	F490
	F/S F/S	F447		MASSETTO DESTRA SCREED RIGHT	F465		SIDE GATE OPEN SIDE GATE OPEN	F491
	TACK TACK	F448		MASSETTO DESTRA SCREED RIGHT	F466		SIDE GATE CLOSE SIDE GATE CLOSE	F492
	TRIVELLA SINISTRA MANUALE AUGER LEFT MANUAL	F449		MASSETTO SINISTRA SCREED LEFT	F467		SPORT GATE CLOSE SPORT GATE CLOSE	F493
	TRASPORTATORE MANUALE CONVEYOR MAN	F450		HOSE REEL HOSE REEL	F470		SPORT GATE OPEN SPORT GATE OPEN	F494
	TRIVELLA STOP AUGER STOP	F451		CT CT	F471		STBD BOARD STBD BOARD	F495
	TRASPORTATORE STOP CONVEYOR	F452		MOTORE M ENGINE M	F472		STBD SPRIT STBD SPRIT	F496
	MASSETTO +/- SCREED +/-	F453		MULTI FUNCTION COW IN MULTI FUNCTION COW IN	F477		TURBO TURBO	F497

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	PORT SPRIT PORT SPRIT	F498		AUGER FAST AUGER FAST	F553		RUOTA ROTATE	F571
	PORT BOARD PORT BOARD	F499		AUGER SLOW AUGER SLOW	F554		ALLONTANA MOVEAWAY	F572
	AUTO EASE AUTO EASE	F500		SCORRI RULLO LOAD	F555		AVVICINA MOVEIN	F573
	CRAWLER CRAWLER	F501		SCORRI RULLO LOAD	F556		GENERICO GENERIC	F574
	MS GEAR MS GEAR	F502		DROP LEFT DROP LEFT	F557		FRECCIA ARROW	F575
	SHUTTLE FWD SHUTTLE FWD	F503		DROP RIGHT DROP RIGHT	F558		SPRAY SINISTRA LEFT DELUGE SPRAY	F576
	SHUTTLE RVS SHUTTLE RVS	F504		CANNON VALVE CANNON VALVE	F559		SPRAY DESTRA RIGHT DELUGE SPRAY	F577
	TAILGATE TAILGATE	F505		CANNON POWER CANNON POWER	F560		AFT PORT AFT PORT	F578
	LEFT GATE LEFT GATE	F506		SOLLEVAMENTO CESTINO SMALL BIN RAISE	F561		FWD PORT FWD PORT	F579
	RIGHT GATE RIGHT GATE	F507		SOLLEVA LOAD UP	F562		AFT STBD AFT STBD	F580
	VERRICELLO WINCH	F508		ABBASSA LOAD DOWN	F563		FWD STBD FWD STBD	F581
	FUSE FAULT FUSE FAULT	F509		SPOSTA MOVE	F564		CUNNO IN CUNNO IN	F582
	ROT IDLE ROT IDLE	F544		SPOSTA LOAD	F565		CAR IN CAR IN	F583
	SPRAY SPRAY	F545		SOLLEVA LOAD UP	F566		CLW DOWN CLW DOWN	F584
	ENGINE START STOP ENGINE START STOP	F549		ABBASSA LOAD DOWN	F567		CUNNO OUT CUNNO OUT	F585
	AUGER START STOP AUGER START STOP	F550		SPOSTA MOVE	F568		CAR OUT CAR OUT	F586
	AERATION START STOP AERATION START STOP	F551		SPOSTA LOAD	F569		CLW UP CLW UP	F587
	DUST COLLECTOR START STOP DUST COLLECTOR START STOP	F552		RUOTA ROTATE	F570		DEFLECT IN DEFLECT IN	F588

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	TRAVEL STBD TRAVEL STBD	F589		ENGINE SPEED ENGINE SPEED	F607		ARM IN ARM IN	F625
	DEFLECT OUT DEFLECT OUT	F590		ENGINE SLOW ENGINE SLOW	F608		ARM OUT ARM OUT	F626
	TRAVEL PORT TRAVEL PORT	F591		FAN FAN	F609		LEFT AIRBAG SU LEFT AIRBAG UP	F627
	STBD STBD	F592		FAN + FAN +	F610		RIGHT AIRBAG SU RIGHT AIRBAG UP	F628
	PORT PORT	F593		FAN - FAN -	F611		LEFT AIRBAG GIÙ LEFT AIRBAG DOWN	F629
	TRIM + TRIM +	F594		FAN FAN	F612		RIGHT AIRBAG GIÙ RIGHT AIRBAG DOWN	F630
	TRIM - TRIM -	F595		IGNITION IGNITION	F613		240V ON/OFF 240V ON/OFF	F631
	MOTORE ENGINE	F596		EXT SPOT LIGHTS EXT SPOT LIGHTS	F614		CAMP MODE CAMP MODE	F632
	RPM UP RPM UP	F597		LOCKER LOCK LOCKER LOCK	F615		ROOF ROOF	F633
	RPM DOWN RPM DOWN	F598		CABIN DOOR ALARM CABIN DOOR ALARM	F616		PUMPS PUMPS	F634
	MISCELATORE AGITATOR	F599		LOCKER DOOR ALARM LOCKER DOOR ALARM	F617		REAR UP REAR UP	F635
	POMPA PUMP	F600		HAZARDS HAZARDS	F618		REAR DOWN REAR DOWN	F636
	ASPIRATORE SUCTION	F601		LOCKER UNLOCK LOCKER UNLOCK	F619		DUAL LIGHTS DUAL LIGHTS	F637
	VALVOLA VALVE	F602		NOT STOWED ALARM NOT STOWED ALARM	F620		CAN CAN	F638
	REMOTE CONTROL REMOTE CONTROL	F603		GRIPPER OPEN GRIPPER OPEN	F621		PGM PGM	F642
	TOOL LOCK TOOL LOCK	F604		GRIPPER CLOSE GRIPPER CLOSE	F622		FUEL PUMP FUEL PUMP	F644
	FAN 1 FAN 1	F605		ARM UP ARM UP	F623		UNMANNED UNMANNED	F670
	FAN 2 FAN 2	F606		ARM DOWN ARM DOWN	F624		MANNED MANNED	F671

SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER	SYMBOL	NAME (symbol meaning)	NUMBER
	BUMPER IN BUMPER IN	F672		STBD BOARD STBD BOARD	F690		CAM IP CAM IP	F720
	BUMPER OUT BUMPER OUT	F673		MAIN 1/3 MAIN 1/3	F691		FLIR FLIR	F721
	UHP LOW UHP LOW	F674		MAIN 2 MAIN 2	F692		FLIR FLIR	F722
	UHP ON UHP ON	F675		TURBO TURBO	F693		CARICA BATTERIE CARICA BATTERIE	F723
	FREE WHEEL FREE WHEEL	F676		STOP STOP	F694		ADMIX #1 ADMIX #1	F724
	SUCTION SUCTION	F677		STERZO CONVERGENTE CONVERTING STEERING	F695		S.W.T. DRAIN S.W.T. DRAIN	F725
	BODY DROP BODY DROP	F678		VANG ON VANG ON	F697		JET DRAIN JET DRAIN	F726
	TRAV UP TRAV UP	F679		VANG OFF VANG OFF	F698		JET WATER DRAIN JET WATER DRAIN	F727
	AFT STBD AFT STBD	F680		OUTHAUL ON OUTHAUL ON	F699		ADMIX #2 ADMIX #2	F728
	MAIN HI/LOW MAIN HI/LOW	F681		OUTHAUL OFF OUTHAUL OFF	F700		ADMIX #3 ADMIX #3	F729
	MAIN MID MAIN MID	F682		TRAVEL PORT TRAVEL PORT	F701		ADMIX #4 ADMIX #4	F730
	X-OVER 1/3 X-OVER 1/3	F683		TRAVEL STBD TRAVEL STBD	F702		WASHDOWN WASHDOWN	F731
	X-OVER 2 X-OVER 2	F684		J.C/HAM ON J.C/HAM ON	F703		COLOR COLOR	F732
	MAIN 1 MAIN 1	F685		J.C/HAM OFF J.C/HAM OFF	F704		FIBER FIBER	F733
	PRIM 1 PRIM 1	F686		SEAL WATER DRAIN SEAL WATER DRAIN	F716		AUX AUX	F734
	MAIN 1/3 MAIN 1/3	F687		ALTERNATOR CHARGE ALTERNATOR CHARGE	F717		BOOM CLOSE BOOM CLOSE	F735
	MAIN 2 MAIN 2	F688		ENGINE ROOM LIGHT ENGINE ROOM LIGHT	F718		BOOM OPEN BOOM OPEN	F736
	STBD SPRIT STBD SPRIT	F689		MULTIFUNZIONE MULTIFUNZIONE	F719		VIGILANCE VIGILANCE	F737

SYMBOL	NAME (symbol meaning)	NUMBER
	ARRESTO MESCOLATORE <i>STOP MIXER</i>	F738
	STOP BETONIERA <i>DRUM MIXER STOP</i>	F739
	ARRESTO POMPAGGIO <i>STOP PUMPING</i>	F740
	BOOM ANTILOCK <i>BOOM ANTILOCK</i>	F741
	BOOM CLOCKWISE <i>BOOM CLOCKWISE</i>	F742
	HOSE IN <i>HOSE IN</i>	F743
	HOSE OUT <i>HOSE OUT</i>	F744
	AXLE LOCKING <i>AXLE LOCKING</i>	F745
	ENABLE BATTER SPRAY <i>ENABLE BATTER SPRAY</i>	F746
	HYD TAMPER <i>HYD TAMPER</i>	F753
	DOWN <i>DOWN</i>	F754
	UP <i>UP</i>	F755
	SPI DROP <i>SPI DROP</i>	F756
	PRINT <i>PRINT</i>	F757
	END JOB <i>END JOB</i>	F758
	BOOM RETRACTED <i>BOOM RETRACTED</i>	F759
	BOOM EXPANDED <i>BOOM EXPANDED</i>	F760