



## X138 MID STROKE SLIM-LINE LINEAR POSITION SENSOR INTRINSICALLY SAFE FOR HAZARDOUS GAS/VAPOUR ATMOSPHERES

- Intrinsically safe for Gas to: Ex II 1G
- Non-contacting inductive technology to eliminate wear
- Travel set to customer's requirement
- Compact 19 mm diameter body
- High durability and reliability
- High accuracy and stability
- Sealing to IP67

As a leading designer and manufacturer of linear, rotary, tilt and intrinsically safe position sensors, Positek<sup>®</sup> has the expertise to supply a sensor to suit a wide variety of applications.

incorporates intrinsically safe X138 Our electronics system EX07 which is ATEX / IECEx / UKEX approved for use in potentially explosive The X138 is gas/vapour atmospheres. designed for a wide range of industrial applications and is ideal for OEMs seeking good sensor performance in situations where a small diameter, short-bodied sensor is required for operation in hazardous areas. The unit is compact and space-efficient, being responsive along almost its entire length, and like all Positek<sup>®</sup> sensors provides a linear output proportional to travel. Each unit is supplied with the output calibrated to the travel required by the customer, from 51 to 100mm and with full EMC protection built in.

Overall performance, repeatability and stability are outstanding over a wide temperature range.

The sensor has a compact 19 mm diameter stainless steel body, is easy to install and set up. Mounting options include flange, M5 rod eye bearings and body clamps. The plunger can be supplied free or captive, with a female M4 thread, an M5 rod eye, magnetic tip, or spring-loaded with a dome end. The X138 also offers a range of mechanical options, environmental sealing is to IP67.



#### SPECIFICATION

SPECIFICATION								
<b>Dimensions</b> Body diameter: Body length dependant on sele orientation and mounting optio								
Body Length (Axial version): Calibrated Travel 51 mm to 70 mm 71 mm to 100 mm		lard 5 mm 5 mm	Flange mounted 143 mm 173 mm					
Body Length (Radial version): Calibrated Travel 51 mm to 70 mm 71 mm to 100 mm	156.5	lard 5mm 5 mm	Flange mounted 162 mm 192 mm					
Plunger: For full mechanical details see of Power Supply Output Signal Independent Linearity Temperature Coefficients Frequency Response Resolution Noise Intrinsic Safety Approval only applies to the specific conditions in the range 0.80 to 1.10 Sensor Input Parameters (connector option/s) (cable option/s) Environmental Temperature Operating Storage Sealing EMC Performance Vibration Shock MTBF	+5V dc nom. 0.5-4.5V dc r $\leq \pm 0.25\%$ F $\leq \pm 0.1\%$ FS $< \pm 0.01\%$ C $< \pm 0.01\%$ C $< \pm 0.01\%$ C < 10 kHz (-3) Infinite < 0.02% FSC Ex II 1G Ex ia IIC T4 ( ambient temp Bar, oxygen $\leq$ Ui: 11.4V, II: Ci: 1.36µF, LI Ci: 1.36µF, LI	± 0.5V, 1 atiometric SO @ 20°C O @ 20°C C Gain & 5/°C Offse dB) Ga (Ta= berature ran 21% 0.20A, Pi: 50μH : 50μH : 50μH : 860μH w °C 2, EN 6100 10 g 40 g	2 available upon request. 40°C to 80°C) ige and atmospheric : 0.51W. vith 1km max. cable					
Drawing List X138-11 Drawings, in AutoCAD <sup>®</sup> dwg or d.	Sensor Outlin	ie	est.					

Do you need a position sensor made to order to suit a particular installation requirement or specification? We'll be happy to modify any of our designs to suit your needs - please contact us with your requirements.





## X138 mid stroke slim-line linear position sensor INTRINSICALLY SAFE FOR HAZARDOUS GAS/VAPOUR ATMOSPHERES

Intrinsically safe equipment is defined as "equipment which is incapable of releasing sufficient electrical or thermal energy under normal or abnormal conditions to cause ignition of a specific hazardous atmosphere mixture in its most easily ignited concentration.

ATEX / IECEx / UKEX approved to;

Ex II 1G Ex ia IIC T4 Ga (Ta= -40°C to 80°C)

Designates the sensor as belonging to; Group II: suitable for all areas **except mining**, Category 1 G: can be used in areas with continuous, long or frequent periods of exposure to hazardous gas / vapour (Zones 2 to 0).

Gas / Vapour:

Protection class ia, denotes intrinsically safe for all zones Apparatus group IIC: suitable for IIA, IIB and IIC explosive gas / vapour.

Temperature class T4: maximum sensor surface temperature under fault conditions 135°C.

Ambient temperature range extended to -40°C to +80°C. It is imperative Positek<sup>®</sup> intrinsically safe sensors be used in conjunction with a galvanic barrier to meet the requirements of the product certification. The Positek X005 Galvanic Isolation Amplifier is purpose made for Positek IS sensors making it the perfect choice. Refer to the X005 datasheet for product specification and output configuration options.

Safety Parameters:-

Ui: 11.4V, Ii: 0.20A, Pi: 0.51W Ci =  $1.36\mu$ F\* Li =  $860\mu$ H\* (cable option/s) Ci =  $1.16\mu$ F Li =  $50\mu$ H (connector option/s)

\*Figures for 1km cable where: Ci = 200pF/m & Li = 810nH/m

Sensors can be installed with a maximum of 1000m of cable. Cable characteristics must not exceed:-

Capacitance:  $\leq 200 \text{ pF/m}$  for max. total of: Inductance:  $\leq 810 \text{ nH/m}$  for max. total of: 200 nF. 810 µH. For cable lengths exceeding 10 metres a five wire connection is recommended to eliminate errors introduced by cable resistance and associated temperature coefficients. ATEX / IECEx / UKEX approved sensors suitable for dust (E

series) and mining (M series) applications, are also available from Positek.

#### **TABLE OF OPTIONS**

Factory set to any length from 0-51mm to 0-CALIBRATED TRAVEL: 100mm (e.g. 76mm).

#### ELECTRICAL INTERFACE OPTIONS

The Positek<sup>®</sup> **X005** Galvanic Isolation Amplifier is available with the

following output options; Standard: 0.5 - 9.5V or 4 - 20mA. Reverse: 9.5 - 0.5V or 20 - 4mA.

#### **CONNECTOR/CABLE OPTIONS**

Connector - 4-pole M8 IEC 61067-2-104 Cable<sup>†</sup> with M8 gland


Axial/ Radial, IP67 Axial/Radial, IP67

<sup>†</sup>Three core (black jacket) or five core (blue jacket) cable options available. Cable length >50 cm – please specify length in cm up to 15000 cm max. We recommend all customers refer to the 3 or 5-Wire Mode Connection page.

#### **MOUNTING OPTIONS**

Flange, Body Tube Clamp (axial or radial versions), M5 rod eye bearings (radial versions only).

PUSH ROD OPTIONS – Retained<sup>†</sup> or Free with M4x0.7 female thread, M5 rod eye bearing or Magnetic tip, Spring loaded with or without<sup>#</sup> Dome end. standard, retained with female thread. \* spring supplied loose.

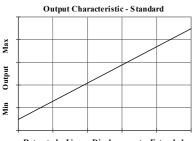

Retracted Linear Displacement Extended





## Three or Five-Wire Mode Connection FOR INTRINSICALLY SAFE SENSORS IN HAZARDOUS ATMOSPHERES

The aim of this document is to help readers who do not understand what is meant by three or five wire modes of connection between the galvanic isolation amplifier and sensor, and the factors behind them. It is by no means an in-depth technical analysis of the subject.

Whether opting for a pre-wired Positek<sup>®</sup> Intrinsically Safe sensor or one with a connector, choosing the right mode of connection and cable to suit the application requires careful consideration.

Interconnecting cables are not perfect conductors and offer resistance to current flow, the magnitude of resistance<sup>†</sup> depends on conductors resistivity, which changes with temperature, cross sectional area<sup>‡</sup> and length. If the voltage were to be measured at both ends of a length of wire it would be found they are different, this is known as volts drop. Volts drop changes with current flow and can be calculated using Ohm's law, it should be noted that volts drop occurs in both positive and negative conductors. The effects of volts drop can be reduced by increasing the conductors cross sectional area, this does not however eliminate the effects due to temperature variation. There are instances where large cross-section cables are not practical; for example most standard industrial connectors of the type used for sensors have a maximum conductor capacity of 0.75mm<sup>2</sup>, copper prices and ease of installation are other considerations.


This is important because the effects of volts drop can significantly alter the perceived accuracy of the sensor which is ratiometric i.e. the output signal is directly affected by the voltage across the sensor. Changes in temperature will also be seen as gain variation in the sensor output.

**Three wire mode** connections are common and are suitable in most cases with short or moderate cable runs. Applications that do not require a high degree of accuracy but have cable runs, say in excess of 10m, volts drop can reduced by introducing a terminal box close to the sensor and using a larger cross-section cable for a majority of the cable run. Sensors supplied with three core cable are calibrated with the cable fitted which largely eliminates errors due to conductor resistance at room temperature however, as mentioned above, small gain errors due to temperature fluctuations should be expected.

**Five wire mode** connections have significant benefits as losses in the positive and negative conductors are compensated for by the galvanic isolation amplifier which can 'sense' the voltage across the sensor and dynamically adjust the output voltage so that the voltage across the sensor is correct. The effects of cable resistance and associated temperature coefficients are eliminated allowing for smaller conductors than a three wire connection for the same cable run. The amplifier can compensate for up to  $15\Omega$  per conductor with a current flow of 15mA, which is more than adequate for 150m of 0.25 mm<sup>2</sup> cable, longer lengths will require larger conductors.

For this reason Positek<sup>®</sup> recommends five wire connections for cable lengths exceeding 10 metres in 0.25 mm<sup>2</sup> cable to preserve the full accuracy of the sensor.

See illustrations below for examples of connecting a sensor to the galvanic isolation amplifier.

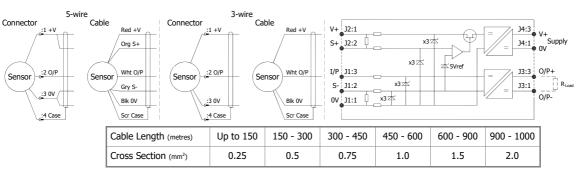

The table above shows recommended conductor sizes with respect to cable length for both three and five wire connections, based on copper conductors. Three wire connections will introduce a gain reduction of 5% and a  $\pm 1\%$  temperature dependence of gain over the range -40°C to +80°C for the cable temperature. (i.e. about -150 ppm/°C for the maximum lengths shown and less pro rata for shorter lengths.)

It should be noted that the maximum cable length, as specified in the sensor certification, takes **precedence** and **must not** be exceeded.

Positek<sup>®</sup> sensors are supplied with three core 0.25 mm<sup>2</sup> cable as standard, however five core 0.25 mm<sup>2</sup> cable can be supplied on request. The galvanic isolation amplifier is available as;

G005-\*\*\* for `G' and `H' prefix sensors X005-\*\*\* for `E', `M' and `X' prefix sensors

 $\frac{1}{2}$  R =  $\rho$ L/A  $\rho$  is the resistivity of the conductor ( $\Omega$ m) L is the length of conductor (m) A is the conductor cross-sectional area (m<sup>2</sup>).


<sup>\*</sup>It is presumed that **d**irect **c**urrent flow is uniform across the cross-section of the wire, the galvanic isolation amplifier and sensor are a dc system.



# **Intrinsically Safe - Gas/Vapour Atmospheres** X138 Mid Stroke Slim-Line Position Sensor

		а	b		С	c d	c d e	c d e f	c d e f g	c d e f g h
	X138 .	Displacement	Α	Со	nnections	nnections Option	nnections Option Option	nnections Option Option Option	nnections Option Option Option Option	nnections Option Option Option Option
a <b>Displacement</b> (mm)			Va	alue						
Displacement in mm	e.g. 0 - 66 mm	n		66						
b <b>Output</b>										
Supply V dc V <sub>s</sub> (tolerance)	c	Dutput	C	ode						
+5V (4.5 - 5.5V)	0.5 - 4.5V (ratio	ometric with supply)		A						
C Connections Cable or	Connector		C	ode						
Cable Gland - Radial	IP67 metal - 3	-core cable	I	хx						
	IP67 metal - 5			Qxx						
Connector - Axial		0176-2-104 nylon		J						
	pre-wired - 3-0			xx						
Connector - Radial		0176-2-104 nylon		K						
	pre-wired - 3-0 IP67 metal - 3			(xx						
Cable Gland - Axial	IP67 metal - 5			.xx Qxx						
Specify required cable length <b>'xx</b> 50 cm supplied as standard.				-						
	5-core cable not availa	ble.								
N.b.! M8 connector option with	5-core cable not availa	ble.	Co	ode						
N.b.! M8 connector option with	5-core cable not availa	ble.		ode lank						
N.b.! M8 connector option with d Housing	5-core cable not availa	ble.	bl							
N.b.! M8 connector option with d Housing Standard - default	5-core cable not availa Radial body st		bl	lank						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> </ul>			Ы	lank N						
N.b.! M8 connector option with d Housing Standard - default Flange Mount M5 Rod-eye Bearing			bi Ce	lank N S						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> </ul>			bi Ca bi	lank N S ode						
N.b.! M8 connector option with d <b>Housing</b> Standard - default Flange Mount M5 Rod-eye Bearing e <b>Body Fittings</b> None - default			bi Ca bi	lank N S ode lank						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>None - default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> </ul>	Radial body st	yle only	bl Ca bl	lank S ode lank P ode						
N.b.! M8 connector option with d <b>Housing</b> Standard - default Flange Mount M5 Rod-eye Bearing e <b>Body Fittings</b> None - default Body Clamps - 1 pair		yle only	bl Ca bl	lank N S ode lank P ode						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>None - default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>None - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> </ul>	Radial body st	yle only er only.	bl Ca bl Ca	lank N S ode lank P ode lank R						
N.b.! M8 connector option with d Housing Standard - default Flange Mount M5 Rod-eye Bearing e Body Fittings None - default Body Clamps - 1 pair f Sprung Plunger None - default Spring Extend g Plunger Fittings None - default	Radial body st	yle only er only. d M4x0.7x7 deep	bl Ca bl Ca bl	lank N S ode lank P ode lank R						
N.b.! M8 connector option with d Housing Standard - default Flange Mount M5 Rod-eye Bearing e Body Fittings None - default Body Clamps - 1 pair f Sprung Plunger None - default Spring Extend g Plunger Fittings None - default Dome end	Radial body st	yle only er only. d M4x0.7x7 deep	bi Ca bi Ca bi	lank S ode lank P ode lank R ode lank T						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>e default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>None - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> </ul>	Radial body st	yle only er only. d M4x0.7x7 deep	bl Ca bl Ca bl	lank N S ode lank P ode lank R ode lank T U						
N.b.! M8 connector option with d Housing Standard - default Flange Mount M5 Rod-eye Bearing e Body Fittings None - default Body Clamps - 1 pair f Sprung Plunger None - default Spring Extend g Plunger Fittings None - default Dome end	Radial body st	yle only er only. d M4x0.7x7 deep	bl Ca bl Ca bl	lank S ode lank P ode lank R ode lank T						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>e Gody Fittings</li> <li>e default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>Mone - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> <li>Magnetic Tip</li> <li>h Plunger Options</li> </ul>	Radial body st	yle only er only. 1 M4x0.7x7 deep n `R'	bi Ca bi Ca V	lank N S ode ank P ode lank R ank R dank T U VA						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>None - default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>Mone - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> <li>Magnetic Tip</li> <li>h Plunger Options</li> <li>Captive - default</li> </ul>	Radial body st	yle only er only. d M4x0.7x7 deep n `R'	bi Ca bi Ca bi V Ca bi	lank S S ode lank P ode lank R ode lank T U WA						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>e Gody Fittings</li> <li>e default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>Mone - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> <li>Magnetic Tip</li> <li>h Plunger Options</li> </ul>	Radial body st	yle only er only. d M4x0.7x7 deep n `R'	bi Ca bi Ca bi V Ca bi	lank N S ode ank P ode lank R ank R dank T U VA						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>None - default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>Mone - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> <li>Magnetic Tip</li> <li>h Plunger Options</li> <li>Captive - default</li> </ul>	Radial body st	yle only er only. d M4x0.7x7 deep n `R'	bi Ca bi Ca bi V Ca bi	lank N S ode ank P ode lank R ode lank V V						
<ul> <li>N.b.! M8 connector option with</li> <li>d Housing</li> <li>Standard - default</li> <li>Flange Mount</li> <li>M5 Rod-eye Bearing</li> <li>e Body Fittings</li> <li>None - default</li> <li>Body Clamps - 1 pair</li> <li>f Sprung Plunger</li> <li>Mone - default</li> <li>Spring Extend</li> <li>g Plunger Fittings</li> <li>None - default</li> <li>Dome end</li> <li>M5 Rod-eye Bearing</li> <li>Magnetic Tip</li> <li>h Plunger Options</li> <li>Captive - default</li> <li>Non-captive</li> </ul>	Radial body st	yle only er only. d M4x0.7x7 deep n `R'	bi Ca bi Ca bi V Ca bi	lank N S ode ank P ode ank R ode ank T U NA						

### Installation Information Positek X138 MID STROKE SLIM-LINE LINEAR POSITION SENSOR INTRINSICALLY SAFE FOR HAZARDOUS GAS/VAPOUR ATMOSPHERES

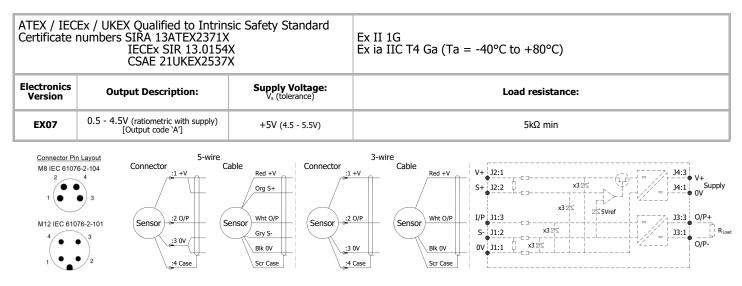

Putting Into Service: The sensor must be used with a galvanic isolation barrier designed to supply the sensor with a nominal 5V and to transmit the sensor output to a safe area. The barrier parameters must not exceed:-

Ui = 11.4V	Ii = 0.20A	Pi = 0.51W	
Ci = 1.36µF*	Li = 860µH*	(Options: IAxx, IAQxx, IBxx, IBQxx, Lxx, LQxx)	*Figures for 1km cable
Ci = 1.16µF	Li = 50µH	(Options: J, K, KA)	

The sensor is certified to be used with up to **1000m** of cable, cable characteristics must not exceed:-Capacitance: ≤ 200 pF/m or max. total of: 200 nF

≤ 200 pF/m or max. total of: Inductance: ≤ 810 nH/m or max. total of: 810 µH

Approval only applies to specified ambient temperature range and atmospheric conditions in the range: 0.80 to 1.10 Bar, oxygen  $\leq$  21%.

The performance of the sensor may be affected by voltage drops associated with long cable lengths; For cable lengths exceeding 10 metres a five wire connection is recommended to eliminate errors introduced by cable resistance and associated temperature coefficients.

#### Special Condition for Safe Use:

The apparatus does not meet the 500 V r.m.s dielectric strength test between circuit and frame, in accordance with clause 6.3.13 of IEC 60079-11:2011. This must be taken into consideration on installation.

When using a Sensor that has an integral cable in a dust application, the free end of the cable shall be appropriately terminated for the zone of use. Under certain extreme circumstances, the non-metallic and isolated metal parts incorporated in the enclosure of this equipment may generate an ignition-capable level of electrostatic charge. Therefore the equipment shall not be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces. This is particularly important if the equipment is installed in a zone 0 location. In addition, the equipment shall only be cleaned with a damp cloth.

**Use:** The sensor is designed to measure linear displacement and provide an analogue output signal.


Assembly and Dismantling: The unit is not to be serviced or dismantled and re-assembled by the user.

Maintenance: No maintenance is required.

**Mechanical Mounting Options:** Depending on options, body can be mounted by flange, rod eye bearings or clamping the sensor body - body clamps are available, if not already ordered. Plunger mounted by M4x0.7 female thread, rod-eye bearing or magnetic tip.

Output Characteristic: Plunger extended, at start of normal travel, from mounting face by: Standard body : 36.5 mm<sup>\*</sup> Flanged body : 34 mm<sup>\*</sup> \*Note: where dome end option is fitted add 5 mm.

The output increases as the plunger extends from the sensor body, the calibrated stroke is between 51 mm and 100 mm.

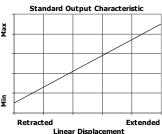

Output

Incorrect Connection Protection levels: Not protected – the sensor is not protected against either reverse polarity or over-voltage. The risk of damage should be minimal where the supply current is limited to less than 50mA.

