

LUMEL

4-CHANNEL MODULE OF ANALOG INPUTS SM2 TYPE



USER'S MANUAL

CE

CONTENTS

1. APPLICATION.....	5
2. MODULE SET	6
3. BASIC REQUIREMENTS AND OPERATIONAL SAFETY	6
4. INSTALLATION	9
4.1. Way of fixing	9
4.2. Diagrams of external connections	9
5. HANDLING.....	12
5.1. Description of the MODBUS protocol implementation	12
5.2. Description of the MODBUS protocol function	13
5.3. Map of registers.....	16
5.4. Registers only for readout	17
5.5. Registers for write and readout	21
6. TECHNICAL DATA.....	33
7. BEFORE A DAMAGE WILL BE DECLARED.....	35
8. EXAMPLES OF THE SM2 MODULE PROGRAMMING.....	36
9. ORDERING CODES.....	40
10. MAINTENANCE AND WARRANTY.....	41

1. APPLICATION

the SM2 4-channel module of analog inputs is destined to convert standard signals, resistance or temperature signals into numerical data accessible through the RS-485 or RS-232 port by means of the MODBUS protocol.

The measurement is carried out independently on four, galvanically insulated between them channels. RS-485 and RS-232 output ports are galvanically insulated from input signals and the supply. The module programming is possible by means of the RS-485 or RS-232 port. In the set of SM2 module there is a connecting cable, to connect with the PC computer (RS-232).

The SM2 module realises following functions:

- mathematical operations on channels and between measuring channels,
- conversion of measured or calculated quantities basing on the individual linear characteristic,
- storage of maximal and minimal values for each channel,
- programmable digital filter for measurement, independently for each channel,
- handling of RS-485 and RS-232 interfaces in MODBUS protocol, in RTU mode,
- change of the OC type output state basing on set alarm values.

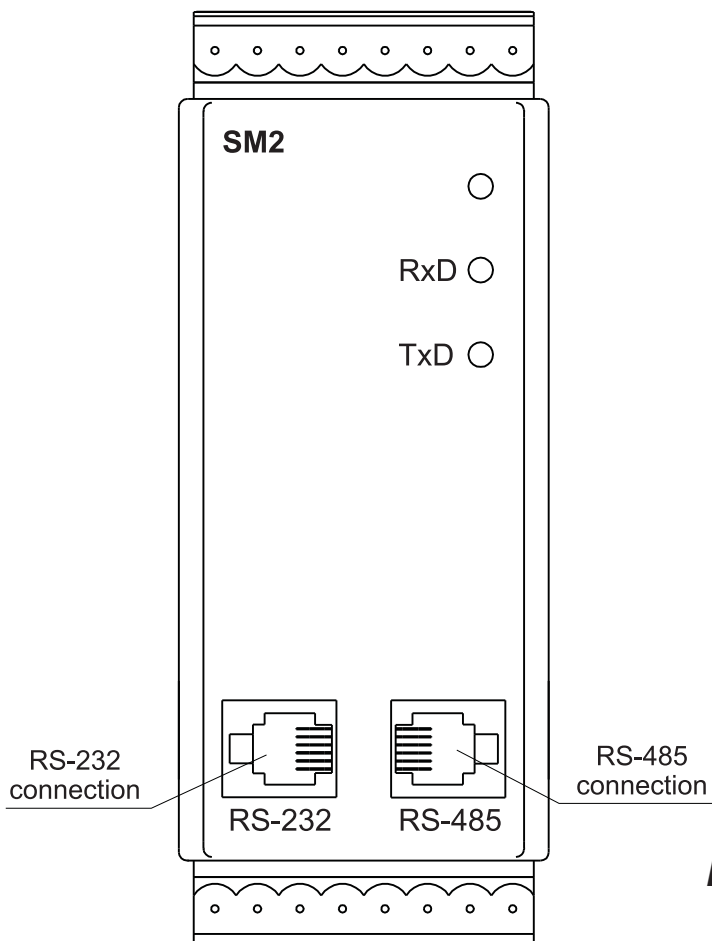


Fig. 1. View of the SM2 module

2. SET OF THE SM2 MODULE

The set consists of:

- SM2 module 1 pc.
- user's manual 1 pc.
- warranty card 1 pc.
- plug with screw terminals 4 pcs
- hole plug of the RS-485 and RS-232 sockets 2 pc
- RS-232 cable to connect to the computer (1.5 m.) 1 pc

When unpacking the module, please check whether the type and execution code on the data plate correspond to the order.

3. BASIC REQUIREMENTS, SAFETY INFORMATION

Symbols located in this service manual mean:

WARNING!



Warning of potential, hazardous situations. Especially important.

One must acquaint with this before connecting the module.

The non-observance of notices marked by these symbols can occasion severe injuries of the personnel and the damage of the module.

CAUTION!



Designates a general useful note. If you observe it, handling of the module is made easier. One must take note of this, when the module is working inconsistently to the expectations. Possible consequences if disregarded!

In the security scope the module meets the requirements of the EN 61010-1 standard.

Remarks concerning the operator safety:



1. General

- The SM2 module is destined to be installed in measuring systems.
- Non-authorized removal of the required housing, inappropriate use, incorrect installation or operation create the risk of injury to personnel or damage to equipment. For more detailed information please study the user's manual.

- All operations concerning transport, installation, and commissioning as well as maintenance must be carried out by qualified, skilled personnel and national regulations for the prevention of accidents must be observed.
- According to this basic safety information, qualified, skilled personnel are persons who are familiar with the installation, assembly, commissioning, and operation of the product and who have qualifications necessary for their occupation.

2. Transport, storage

Please observe the notes on transport, storage and appropriate handling. Observe the climatic conditions given in Technical Data.

3. Installation

- The module must be installed according to the regulation and instructions given in this user's manual.
- Ensure proper handling and avoid mechanical stress.
- Do not bend any components and do not change any insulation distances.
- Do not touch any electronic components and contacts.
- Modules may contain electrostatically sensitive components, which can easily be damaged by inappropriate handling.
- **Do not damage or destroy any electrical components since this might endanger your health!**

4. Electrical connection

- Before switching the module on, one must check the correctness of connection to the network.
- In case of the protection terminal connection with a separate lead one must remember to connect it before the connection of the module to the mains.
- When working on live modules, the applicable national regulations for the prevention of accidents must be observed.
- The electrical installation must be carried out according to the appropriate regulations (cable cross-sections, fuses, PE connection). Additional information can be obtained from the user's manual.
- Apply a two-wire cable for the connection to the network acc. to the EN 61010-1 standard.
- Do not connect the module to the network through an autotransformer.
- In the building installation, a cut-out or a circuit-breaker should exist, situated near the device and easy accessible to the operator. It should be marked as the element switching the device out.

- The documentation contains information about installation in compliance with EMC (shielding, grounding, filters and cables). These notes must be observed for all CE-marked products.
- The manufacturer of the measuring system or installed devices is responsible for the compliance with the required limit values demanded by the EMC legislation.

5. Operation

- Measuring systems including SM1 modules must be equipped with protection devices according to the corresponding standard and regulations for prevention of accidents.
- After the instrument has been disconnected from the supply voltage, live components and power connections must not be touched immediately because capacitors can be charged.
- The housing must be closed during operation.
- The RS-232 socket serves only to connect the device (Fig.5) working with the MODBUS protocol. When the module is not used place the hole plug in the RS-232 socket of the module.

6. Maintenance and servicing.

Please observe the manufacturer's documentation.

Read all product-specific safety and application notes in this user's manual.

- Before taking the module out, one must turn the supply off.
- The removal of the module housing during the warranty contract period may cause its cancellation.

4. INSTALLATION

4.1 Way of fixing

The SM2 module is fixed on a 35 mm rail in accordance with EN 60715. The module housing is made of a self-extinguishing plastic. Overall dimensions of the housing: 45 × 120 × 100 mm. One must connect to the module, external wires with cross-section up to 2.5 mm²

Overall dimensions and the fixing way are presented on the fig. 2.

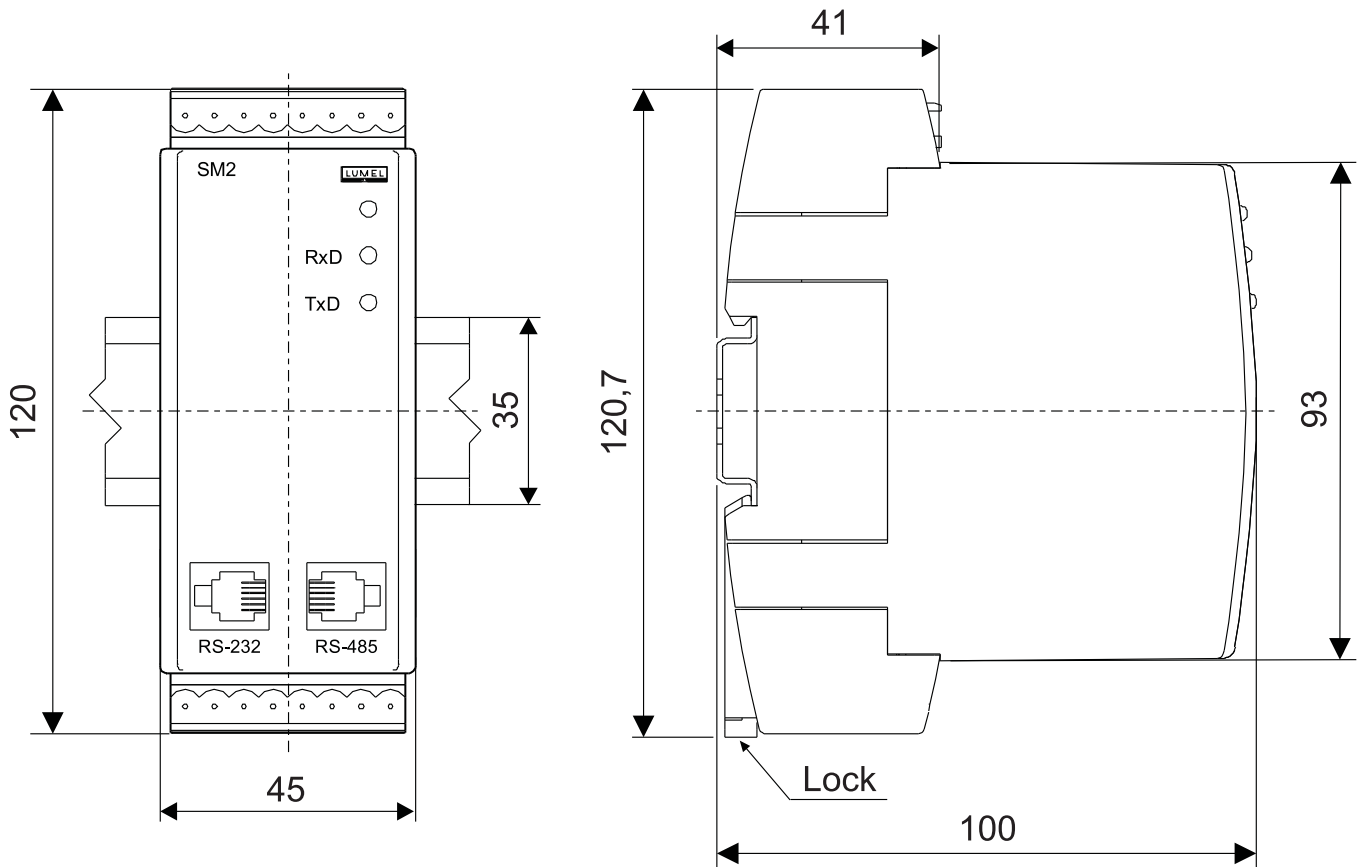


Fig. 2. Overall dimensions and way of fixing the module

4.2. External connection diagrams

Make the connection of input signals, supply and interface acc. to the fig. 3, 4 and 5

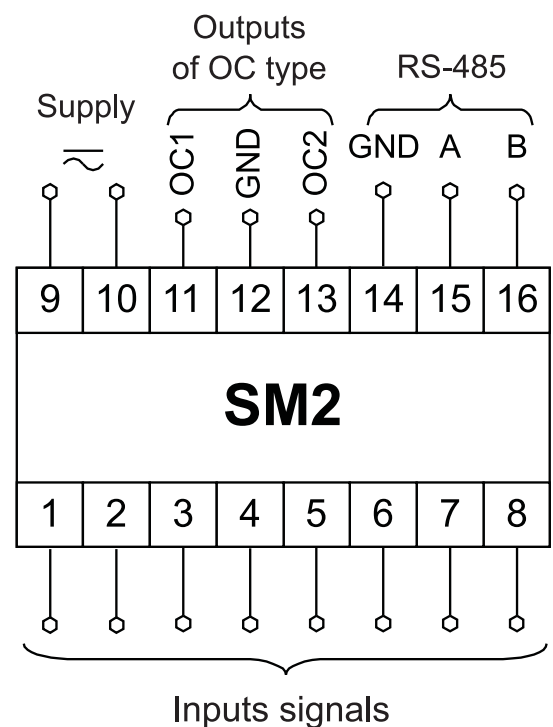


Fig. 3
Connection way of external signals. The connection diagram is also placed on the module housing

The polarization is optional when supplying by d.c. voltage.

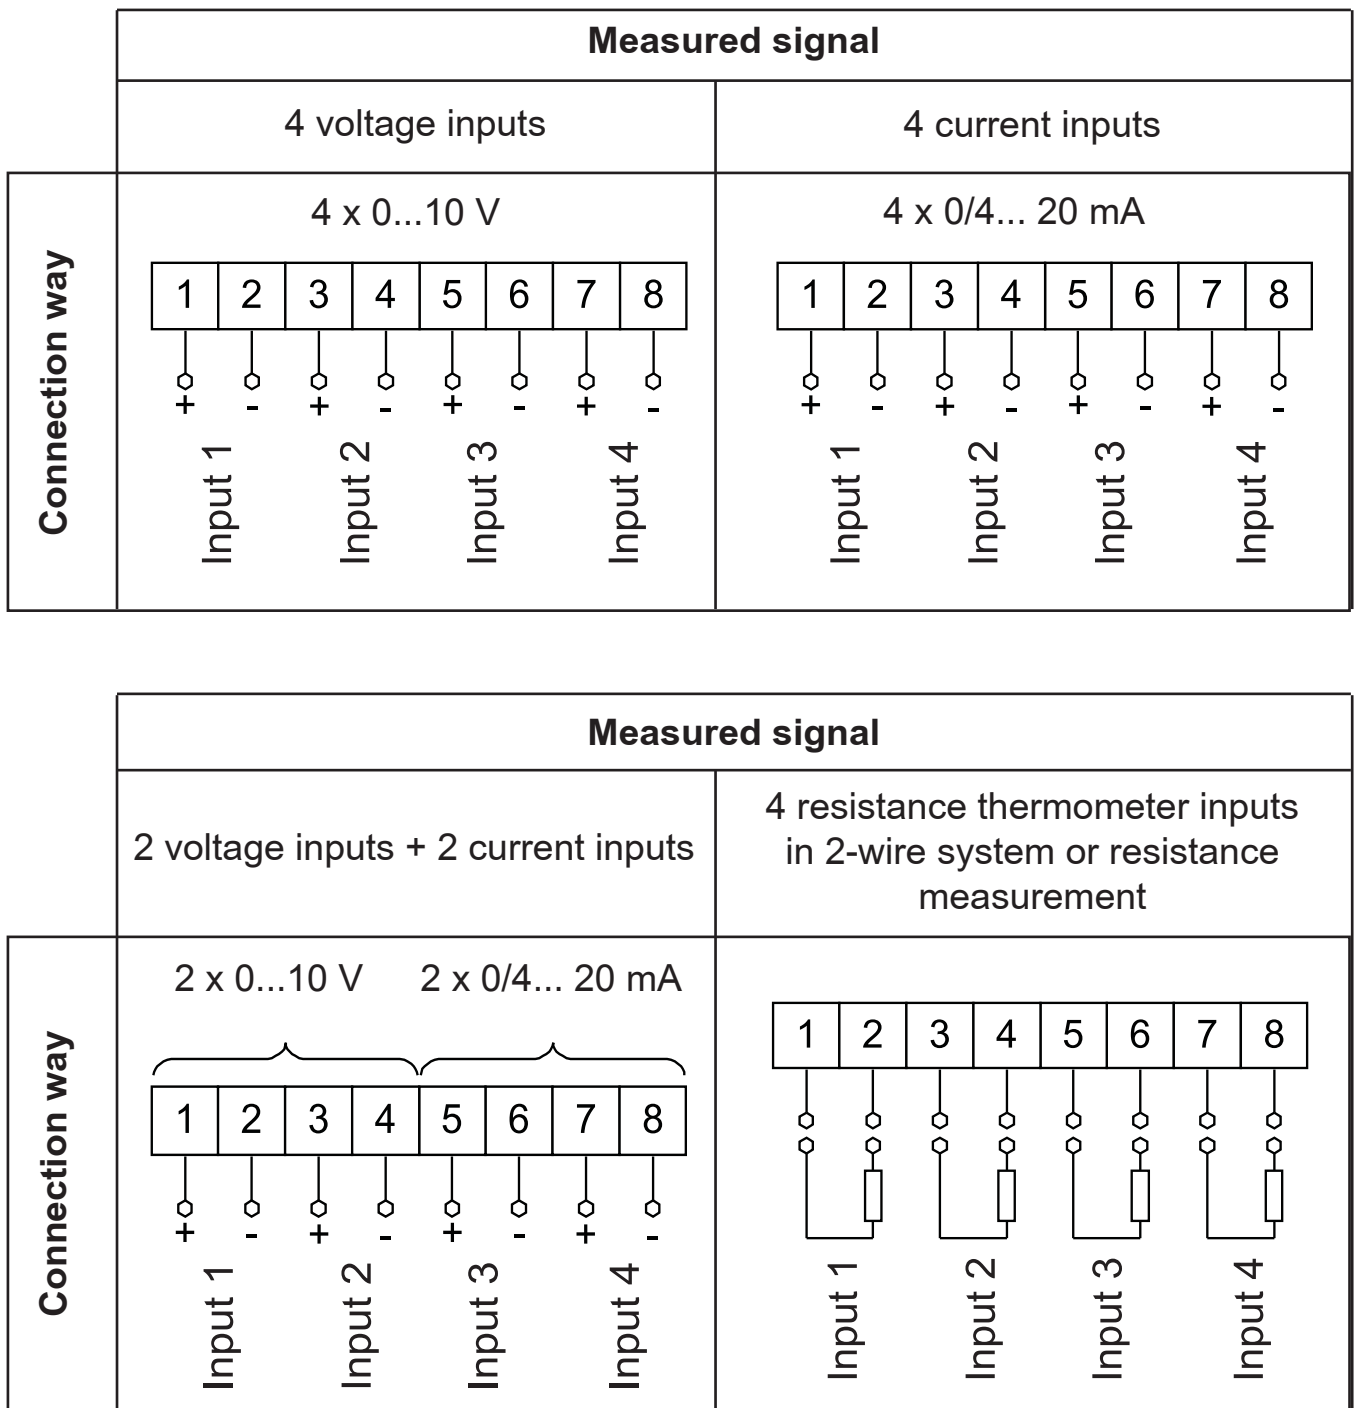


Fig. 4 connection way of input signals

Taking in consideration electromagnetic interference one must use shielded wires to connect input signals and output signals. The supply must be connected by a two-wire cable, with the appropriate wire diameter ensuring its protection by means of a safety fuse.

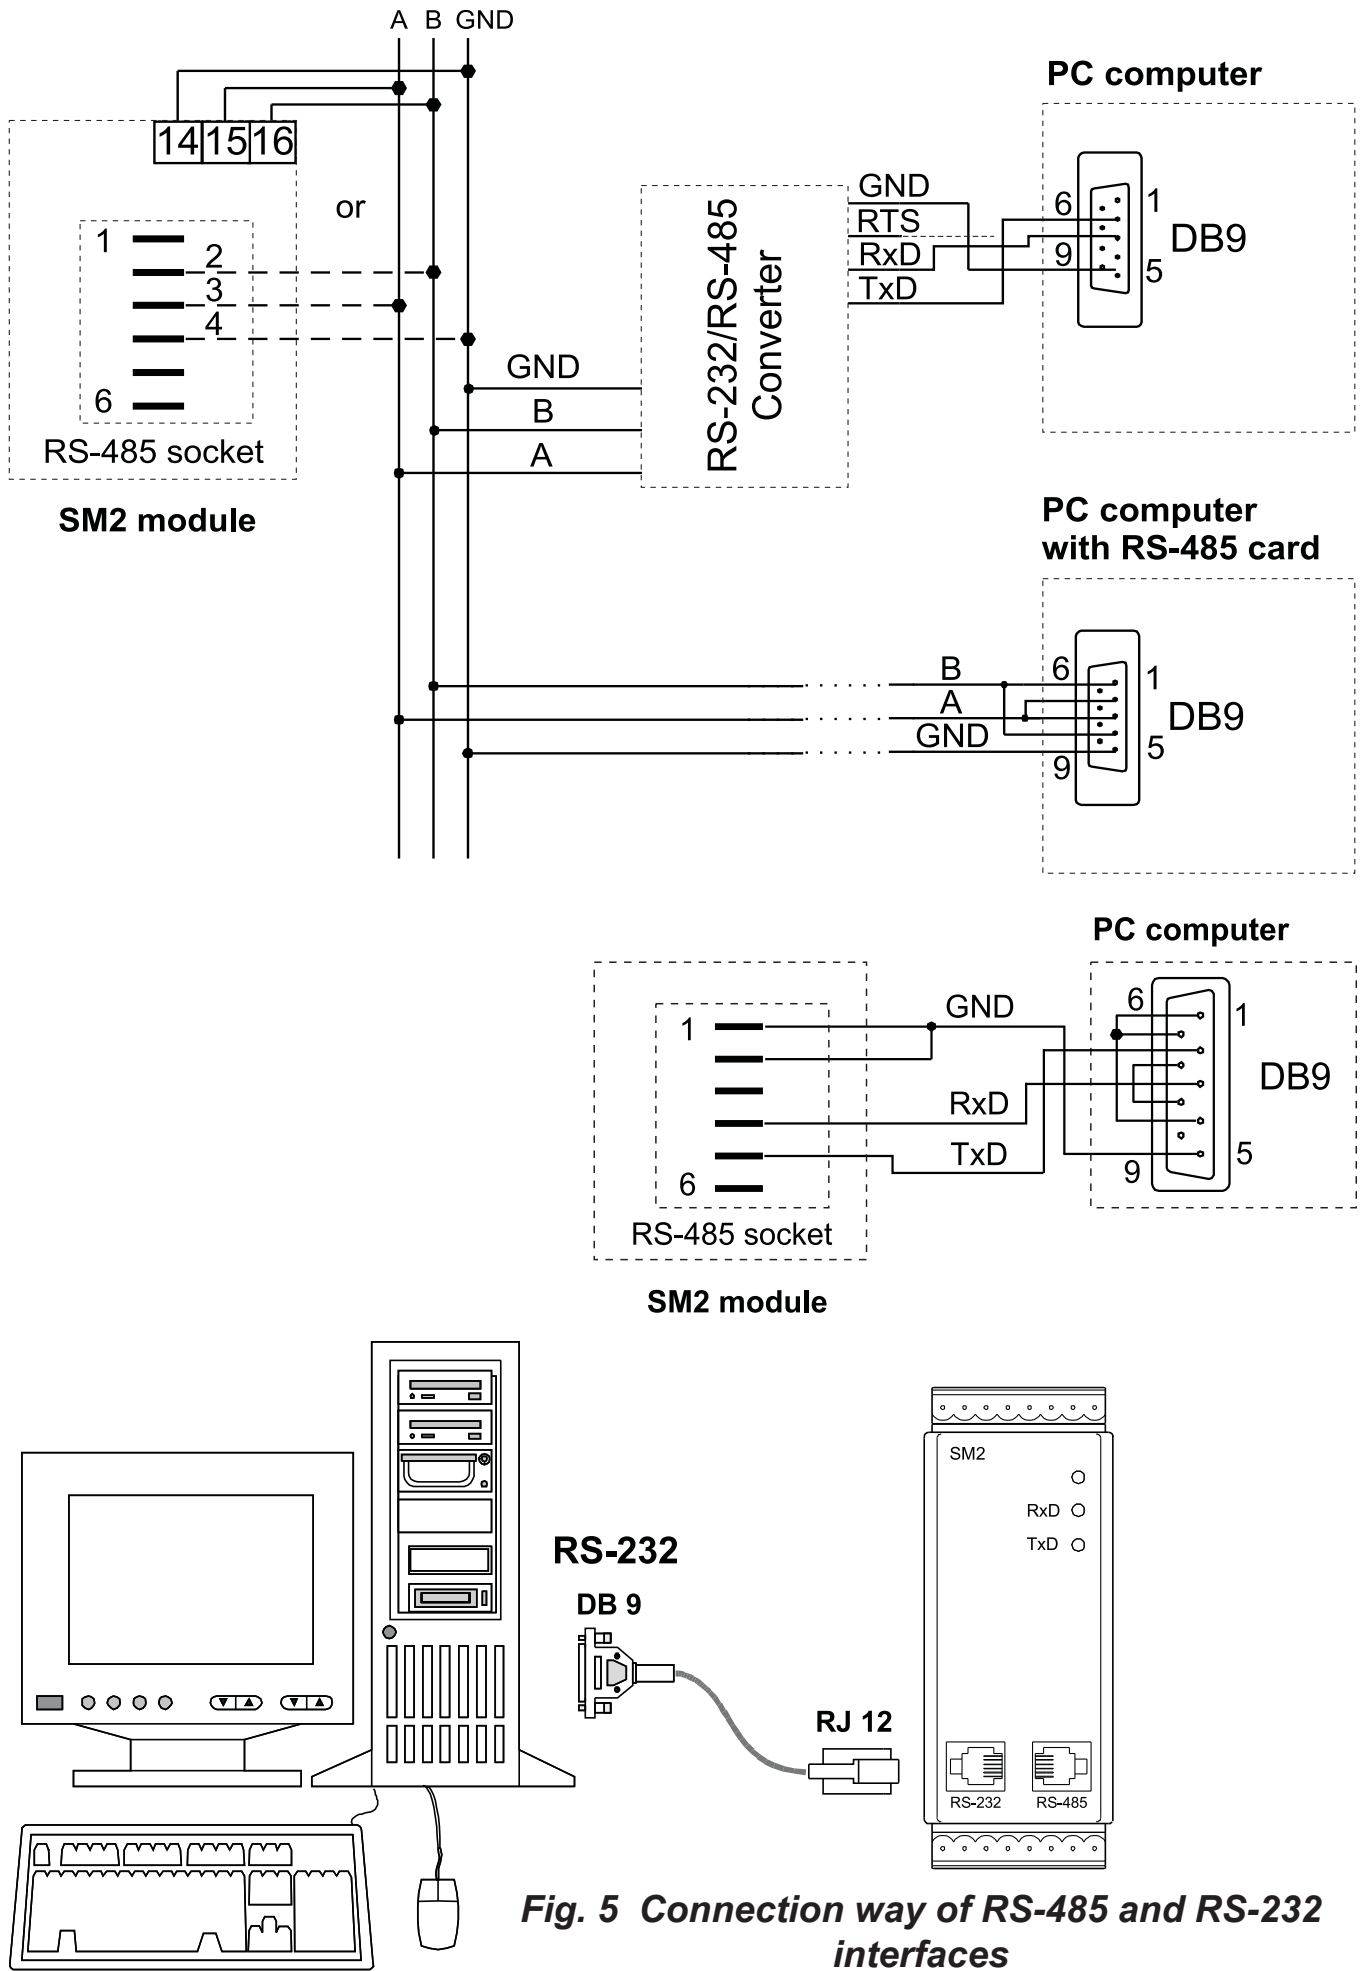


Fig. 5 Connection way of RS-485 and RS-232 interfaces

5. HANDLING

After connecting external signals and switching the supply on, the SM2 module is ready to work.

The lighted green diode signals the module work. The green diode (RxD) signals the module polling, however the yellow diode (TxD) signals the module response. Diodes should ignite in cycles during the data transmission, both through the RS-232 and the RS-485 interface. One can program all module parameters by means of RS-232 or RS-485.

The RS-232 port has constant transmission parameters in accordance with technical data, what enables the connection with the module even when programmed parameters of the RS-485 digital output are unknown (address, mode, rate). The RS-485 standard allows to the direct connection to 32 devices on a single serial link up to 1200 m. To connect a greater number of devices, it is necessary to use additional intermediate-separating systems.

The way of the interface connection is given in the user's manual (fig.5). To obtain the correct transmission, it is necessary to connect **A** and **B** lines in parallel with their counterparts in other devices. The connection must be carried out with a screened wire. The screen must be connect to the protective terminal in a single point. The **GND** line serves to the additional protection of the interface line at long connections. One must connect it to the protective terminal (it is not necessary for the correct interface work). To obtain the connection with the PC computer through the RS-485 port, an RS-232/RS-485 converter (e.g. PD51 of Lumel's production) or an RS-485 interface card is indispensable. The marking of transmission lines for the card in the PC computer depends on the card manufacturer. To obtain the connection through the RS-232 port, the wire added to the module is sufficient. The connection way of both ports (RS-232 and RS-485) is shown on the fig. 5.

The module can be connected to the device of master type only through one interface port. In case of a simultaneous connection of both ports, the module will work through the RS-232 interface.

5.1. Description of MODBUS protocol implementation

The transmission protocol describes ways of the information exchange between devices through serial links.

The MODBUS protocol has been implemented in the module in accordance with the PI-MBUS-300 Rev G specification of the Modicon company.

Set of parameters of the module serial link in the MODBUS protocol:

- Module address - 1... 247
- Baud rate - 2400, 4800, 9600, 19200, 38400, 57600, 115200 bit/s
- Working modes - RTU

- Information unit - RTU: 8N2, 8E1, 8O1, 8N1
- Maximal response time - 100 ms.
- Maximal number of read/written register with one command - 30

The parameter configuration of the serial link is described in the further part of the user's manual. It consists on establishing the baud rate (**Rate parameter**), device address (**Adr parameter**) and the information unit type (Mode parameter).

In case of the module connection with the computer through the RS-232 wire, the module set automatically following transmission parameters:

Baud rate: 9600 bps,

Working mode: RTU 8N1,

Address: 1.

Notice: Each module connected to the communication network must:

- have a unique address, different from addresses of other devices connected to the network,
- identical baud rate and information unit type,
- the message sent with the address „0” is identified as the data transmission mode (transmission to many devices)

Only one module can be connected to the master's RS-232.

5.2. Description of the MODBUS protocol function

Opis funkcji

Code	Signification
03 (03 h)	Readout of n-register
06 (06 h)	Write of a single register
16 (10 h)	Write of n-registers
17 (11 h)	Slave device identification

Following functions of the MODBUS protocol have been implemented in the SM2 module

Readout of n-registers (code 03h)

The function is not accessible in the broadcast mode.

Example: Readout of 2 registers beginning by the register with the 1DBDh

Device address	Function	Register address		Number of registers		Checksum CRC
		Hi	Lo	Hi	Lo	
01	03	1D	BD	00	02	52 43

address (7613)

Device address	Function	Number of bytes	Value from the register 1DBD (7613)				Value from the register 1DBE (7614)				Check-sum CRC
01	03	08	3F	80	00	00	40	00	00	00	42 8B

Demand:

Answer:

Write of values in the register (code 06h)

The function is accessible in the broadcast mode.

Device address	Function	Register address		Value for the register 1DBD (7613)				Checksum CRC
		Hi	Lo					
01	06	1D	BD	3F	80	00	00	85 AD

Answer:

Device address	Function	Register address		Value from the register 1DBD (7613)				Checksum CRC
		Hi	Lo					
01	06	1D	BD	3F	80	00	00	85 AD

Write in n-registers (code 10h)

The function is accessible in broadcast mode.

Example: Write of two registers beginning from the register with 1DBDh (7613) address

Demand:

Device address	Function	Register address		Number of registers		Number of bytes	Value for the register 1DBD (7613)				Value for the register 1DBE (7614)				Checksum CRC
		Hi	Lo	Hi	Lo										
01	10	1D	BD	00	02	08	3F	80	00	00	40	00	00	00	03 09

Answer:

Device address	Function	Register address		Number of registers		Checksum CRC
		Hi	Lo	Hi	Lo	
01	03	1D	BD	00	02	52 43

Report identifying the device (code 11h)

Demand:

Device address	Function	Checksum (CRC)
01	11	C0 2C

Answer:

Device address	Function	Number of bytes	Device identifier	Device version	Checksum
X	11	08	89	„SM2 c0XXX fY.YY -vSTANDARD”	

Device address	- depends on the set value
Function	- function number: 0x11
Number of bytes	- 0x08
Device identifier	- 0x89
Device state	- 0xFF
Field depended of the device	- XXXXXX
Output of OC type	- 0x01 - 2 outputs of OC type, 01 X X X X X
Type of input	- Field depended on the module execution code:
	- 0x00 - four 0...10 V voltage inputs, X 00 X X X X
	- 0x01 - four 0/4...20 mA current inputs, X 01 X X X X
	- 0x02 - two 0...10 V voltage inputs, two 0/4...20 mA current inputs, X 02 X X X X
	- 0x03 - four Pt100 inputs or four resistance inputs up to 400 Ω , X 03 X X X X
Number of the software version	- software version implemented in the module X X _ _ _ _ 4 - byte variable of float
Checksum	- 2 bytes in case of work in RTU mode - 1 byte in case of work in ASCII mode

Example:

Work in **RTU** mode, e.g. **Mode = RTU 8N2** (value 0x02 in case of readout/write through the interface)

The device address is set on **Adr=0x01**

For the SM2 module the answer frame has the following shape:

Device address	Function	Number of bytes	Device identifier	Device state	Field depending on the device type	Check-sum
01	11	08	89	FF	01 01 3F 80 00 00	C3 60

Example: Write the register with 1DBDh (7613) address

Demand:

It is the SM2 module:

- with two OC type outputs
- with four 0/4...20 mA current inputs
- software version: 1.00

5.3 Register map		
Address range	Value type	Description
7000-7200	float (32 bit)	The value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers from the area 7500. The register is for readout only
7200-7400	float (32 bit)	The value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers from the area 7600. Registers can be read out and written.
7500-7600	float (32 bit)	The value is placed in the 32-bit register. The register is for readout only.
7600-7700	float (32 bit)	The value is placed in the 32-bit register. Registers can be read out and written.

5.4. Registers only for readout

The value is located in two successive 16-bit registers. These registers include the same data as 32-bit registers from the area 7500.	The value is placed into 32-bit registers.	Name	Write (w)/Readout (r)	Unit	Quantity name												
7000	7500	Identifier	r	-	Constant identifying the device												
					<table border="1"> <thead> <tr> <th data-bbox="999 757 1086 801">Value</th> <th data-bbox="1086 757 1493 801"></th> </tr> </thead> <tbody> <tr> <td data-bbox="999 801 1086 846">0x89 - - h</td> <td data-bbox="1086 801 1493 846">SM2 identifier</td> </tr> <tr> <td data-bbox="999 846 1086 891">0x - - 00h</td> <td data-bbox="1086 846 1493 891">Four 0...10 V voltage inputs</td> </tr> <tr> <td data-bbox="999 891 1086 936">0x - - 01h</td> <td data-bbox="1086 891 1493 936">Four 0/4...20 mA currents</td> </tr> <tr> <td data-bbox="999 936 1086 1014">0x - - 02h</td> <td data-bbox="1086 936 1493 1014">Two 0...10 V voltage input Two 0/4...20 mA current input</td> </tr> <tr> <td data-bbox="999 1014 1086 1104">0x - - 03h</td> <td data-bbox="1086 1014 1493 1104">Four Pt100 inpus or Four resistance inputs up to 400 Ω</td> </tr> </tbody> </table>	Value		0x89 - - h	SM2 identifier	0x - - 00h	Four 0...10 V voltage inputs	0x - - 01h	Four 0/4...20 mA currents	0x - - 02h	Two 0...10 V voltage input Two 0/4...20 mA current input	0x - - 03h	Four Pt100 inpus or Four resistance inputs up to 400 Ω
Value																	
0x89 - - h	SM2 identifier																
0x - - 00h	Four 0...10 V voltage inputs																
0x - - 01h	Four 0/4...20 mA currents																
0x - - 02h	Two 0...10 V voltage input Two 0/4...20 mA current input																
0x - - 03h	Four Pt100 inpus or Four resistance inputs up to 400 Ω																
7002	7501	Status 1	r	-	Status 1 is the register describing the present module state												
7004	7502	Status 2	r	-	Status 2 is the register describing the present module state												
7006	7503	W1	r	-	Measured value on the input 1												
7008	7504	W2	r	-	Measured value on the input 2												
7010	7505	W3	r	-	Measured value on the input 3												
7012	7506	W4	r	-	Measured value on the input 4												
7014	7507	WF	r	-	Calculated value basing on the function												
7016	7508	Min 1	r	-	Minimum of the measured value on the input 1												
7018	7509	Max 1	r	-	Maximum of the measured value on the input 1												
7020	7510	Min 2	r	-	Minimum of the measured value on the input 2												
7022	7511	Max 2	r	-	Maximum of the measured value on the input 2												
7024	7512	Min 3	r	-	Minimum of the measured value on the input 3												
7026	7513	Max 3	r	-	Maximum of the measured value on the input 3												
7028	7514	Min 4	r	-	Minimum of the measured value on the input 4												
7030	7515	Max 4	r	-	Maximum of the measured value on the input 4												
7032	7516	WF Min	r	-	Minimum of the calculated value												
7034	7517	WF Max	r	-	Maximum of the calculated value												

Description of the Status1 register

					Signalling of the lower input 4 range exceeding	Signalling of the upper input 4 range exceeding	Signalling of the lower input 3 range exceeding	Signalling of the upper input 3 range exceeding	Signalling of the lower input 2 range exceeding	Signalling of the upper input 2 range exceeding	Signalling of the lower input 1 range exceeding	Signalling of the upper input 1 range exceeding	Individual characteristic of the input 4	Individual characteristic of the input 3	Individual characteristic of the input 2	Individual characteristic of the input 1
	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB															LSB

Bit-15...12 Empty

Bit value is always equal 0

Bit-11 Signalling of the lower range exceeding of input 4

0 - normal work

1 - range exceeding

Bit-10 Signalling of the upper range exceeding of input 4

0 - normal work

1 - range exceeding

Bit-9 Signalling of the lower range exceeding of input 3

0 - normal work

1 - range exceeding

Bit-8 Signalling of the upper range exceeding of input 3

0 - normal work

1 - range exceeding

Bit-7 Signalling of the lower range exceeding of input 2

0 - normal work

1 - range exceeding

Bit-6 Signalling of the upper range exceeding of input 2

0 - normal work

1 - range exceeding

Bit-5 Signalling of the lower range exceeding of input 1

- 0 - normal work
- 1 - range exceeding

Bit-4 Signalling of the upper range exceeding of input 1

- 0 - normal work
- 1 - range exceeding

Bit-3 Individual characteristic of the input 4

- 0 - individual characteristic switched on
- 1 - individual characteristic switched off

Bit-2 Individual characteristic of the input 3

- 0 - individual characteristic switched on
- 1 - individual characteristic switched off


Bit-1 Individual characteristic of the input 2

- 0 - individual characteristic switched on
- 1 - individual characteristic switched off

Bit-0 Individual characteristic of the input 1

- 0 - individual characteristic switched on
- 1 - individual characteristic switched off

Description of the Status 2 register

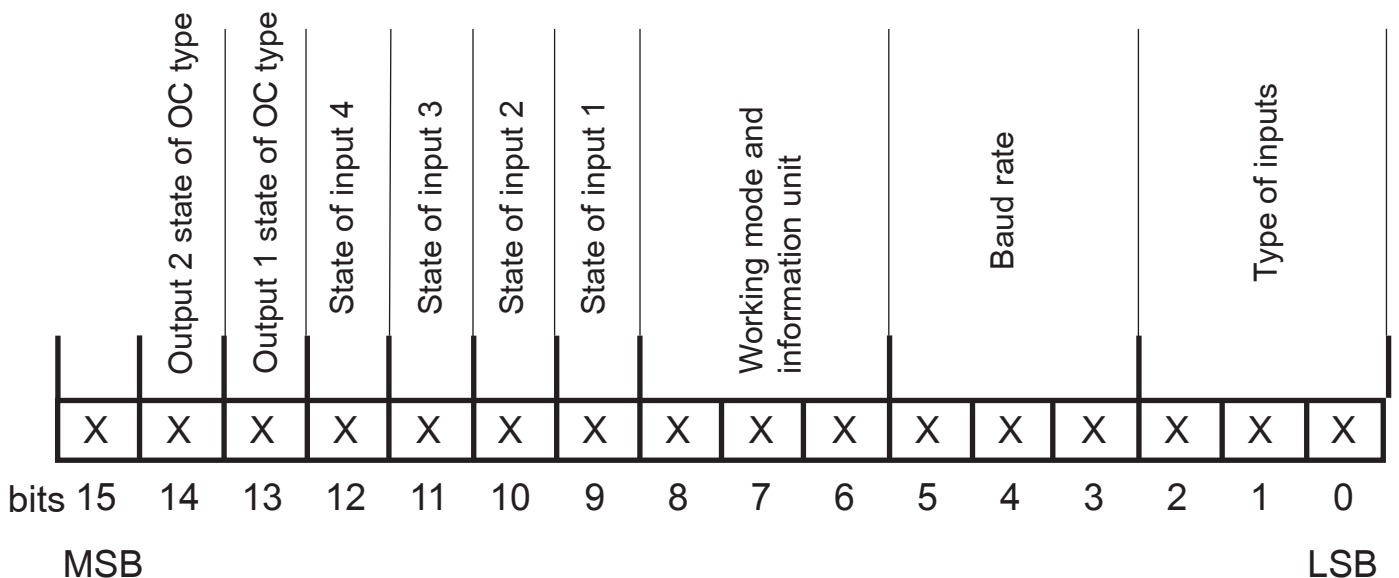

Bit-15 Empty

Bit value is always equal 0

Bit-14 Output 2 state of OC type

- 0 - OC switched off
- 1 - OC switched on

Bit-13 Output 1 state of OC type

- 0 - OC switched off
- 1 - OC switched on

Bit-12 State of measuring input 4

- 0 - input switched off (lack of measurement)
- 1 - input switched on

Bit-11 State of measuring input 3

- 0 - input switched off (lack of measurement)
- 1 - input switched on

Bit-10 State of measuring input 2

- 0 - input switched off (lack of measurement)
- 1 - input switched on

Bit-9 State of measuring input 1

- 0 - input switched off (lack of measurement)
- 1 - input switched on

Bit-8...6 Working mode and information unit

- 100 - 8N2 - RTU
- 101 - 8E1 - RTU
- 110 - 8O1 - RTU
- 111 - 8N1 - RTU

Bit-5...3 Baud rate

- 000 - 2400 bit/s
- 001 - 4800 bit/s
- 010 - 9600 bit/s
- 011 - 19200 bit/s
- 100 - 38400 bit/s
- 101 - 57600 bit/s
- 110 - 115200 bit/s

Bit-2...0 Type of inputs

- 000 - 4 x 0...10 V
- 001 - 4 x 0/4...20 mA
- 010 - 2 x 0...10 V, 2 x 0/4...20 mA
- 011 - 4 x Pt100 resistance thermometer inputs or
4 x resistance inputs up to 400 Ω

5.5. Registers for readout and write

Table 1

The value is placed in two successive 16-bytes registers. These registers include the same data as 32-bit registers from the area 7600.		The value is placed in 32-bit registers.		Symbol	Write (w)/Readout (r)	Range	Description	
7200	7600	Identifier	r	-	Device identifier			
							Value	
							0x89 - - h	SM2 Identifier
							0x - - 00h	Four 0...10 V voltage inputs
							0x - - 01h	Four 0/4...20 mA current inputs
							0x - - 02h	Two 0...10 V voltage input Two 0/4...20 mA current input
							0x - - 03h	Four Pt100 inputs or Four resistance inputs up to 400 Ω
7202	7601	Rate	W/r	0... 6	Baud rate of the RS-485 interface (bit/s)			
							Value	
							0	2400
							1	4800
							2	9600
							3	19 200
							4	38400
							5	57600
							6	115200
7204	7602	Mode	W/r	0... 7	Kind of transmission through the RS-485 interface			
							Value	
							4	RTU 8N2
							5	RTU 8E1
							6	RTU 8O1
							7	RTU 8N1

7206	7603	Adr	W/r	0... 247	Device address
7208	7604	Apply	W/r	0... 1	Acceptation of module transmission parameter changes
					Value
					0 Lack of reaction
					1 Acceptation of changes
7210	7605	Input 1	W/r	0... 1	Switching ON/OFF of the measuring input 1
					Value
					0 Measuring input switched off
					1 Measuring input switched on
					In case of the input off the value 0 is returned
7212	7606	W1 type	W/r	0... 1	Input 1 type
					Range
					0 0...10 V for SM2-00XXX execution 0...10 V for SM2-02XXX execution 0/4...20 mA for SM2-01XXX execution
					0... 1 0 - Pt100 1 - Resistance < 400 Ω
					Notice! The range change of this parameter depends on the execution code
7214	7607	Cnt W1	W/r	0... 30	Filter time constant of the input 1
					Value
					0 Filter is switched off
					0.1...100.0 Time constant in seconds
7216	7608	Ind W1	W/r	0... 1	Individual characteristic of the input 1
					Value
					0 off
					1 on

7218	7609	X1 W1	W/r	-99999...99999	Parameters of the individual characteristic of input 1						
7220	7610	Y1 W1	W/r	-99999...99999	<p>On the base of given co-ordinates of two points by the user the module determines (from the system of equations) coefficients a and b of the individual characteristic.</p> $\begin{cases} Y1W1 = a \cdot X1W1 + b \\ Y2W1 = a \cdot X2W1 + b \end{cases}$ <p>where: X1 W1 and X2 W1 - measured value Y1 W1 and Y2 W1 - Expected value on the digital output.</p> <p>The graphical presentation of the individual characteristic is presented on the fig. 6.</p> <p>At output signal recalculations, at first the module recalculates the value on the base of the individual characteristic and then, this result is transmitted to the arithmetic function,</p>						
7222	7611	X2 W1	W/r	-99999...99999							
7224	7612	Y2 W1	W/r	-99999...99999							
7226	7613	Input 2	W/r	0... 1	Switching ON/OFF of the measuring input 2						
					<table border="1"> <thead> <tr> <th>Value</th> <th></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Measuring input switched off</td> </tr> <tr> <td>1</td> <td>Measuring input switched on</td> </tr> </tbody> </table> <p>In case of the input off the value 0 is returned</p>	Value		0	Measuring input switched off	1	Measuring input switched on
Value											
0	Measuring input switched off										
1	Measuring input switched on										
7228	7614	Typ W2	W/r	0... 1	Input 2 type						
					Range of changes as for the W1 type						
7230	7615	Cnt W2	W/r	0... 6500	Measurement averaging time of the input 2						
					Range of changes as for the Cnt W1 type						
7232	7616	Ind W2	W/r	0... 1	Individual characteristic of the input 2						
					<table border="1"> <thead> <tr> <th>Value</th> <th></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>off</td> </tr> <tr> <td>1</td> <td>on</td> </tr> </tbody> </table>	Value		0	off	1	on
Value											
0	off										
1	on										
7234	7617	X1 W2	W/r	-99999...99999	Parameters of the individual characteristic of input 2						
7236	7618	Y1 W2	W/r	-99999...99999	The range changes as for: X1 W1, Y1 W1, X2 W1, Y2 W1						
7238	7619	X2 W2	W/r	-99999...99999							
7240	7620	Y2 W2	W/r	-99999...99999							

7242	7621	Input 3	W/r	0... 1	Switching ON/OFF of the measuring input 3	
					Value	
					0	Measuring input switched off
					1	Measuring input switched on
					In case of the input off the value 0 is returned	
7244	7622	W3 type	W/r	0... 1	Input 3 type	
					Range	
					0	0...10 V for SM2-00XXX execution 0/4...20 mA for SM2-01XXX execution, for SM2-02XXX execution
					0... 1	0 - Pt100 1 - Resistance < 400 Ω
					Notice! The range change of this parameter depends on the execution code	
7246	7623	Cnt W3	W/r	0... 100	Filter time constant of the input 3	
					Range of changes as for the Cnt W1 type	
7248	7624	Ind W3	W/r	0... 1	Individual characteristic of the input 3	
					Value	
					0	off
					1	on
7250	7625	X1 W3	W/r	-99999...99999	Parameters of the individual characteristic of input 3	
7252	7626	Y1 W3	W/r	-99999...99999	The range changes as for: X1 W1, Y1 W1, X2 W1, Y2 W1	
7254	7627	X2 W3	W/r	-99999...99999		
7256	7628	Y2 W3	W/r	-99999...99999		
7258	7629	Input 4	W/r	0... 1	Switching ON/OFF of the measuring input 4	
					Value	
					0	Measuring input switched off
					1	Measuring input switched on
					In case of the input off the value 0 is returned	


7260	7630	W4 type	W/r	0... 1	Input 4 type	
					Range of changes as for W1 type	
7262	7631	Cnt W4	W/r	0... 6500	Czas uśredniania pomiaru wejścia 4	
					Zakres zmian jak dla Cnt W1	
7264	7632	Ind W4	W/r	0... 1	Individual characteristic of the input 4	
					Value	
					0	off
					1	on
7266	7633	X1 W4	W/r	-99999...99999	Parameters of the individual characteristic of input 4	
7268	7634	Y1 W4	W/r	-99999...99999	The range changes as for: X1 W1, Y1 W1, X2 W1, Y2 W1	
7270	7635	X2 W4	W/r	-99999...99999		
7272	7636	Y2 W4	W/r	-99999...99999		
7274	7637	A	W/r	0... 12	Parameters of the mathematical function	
7276	7638	B	W/r	0... 12	Value	
7278	7639	C	W/r	0... 12	0	Parameter switched off
7280	7640	D	W/r	0... 12	1	Result 1 (input 1) (W1)
					2	Result 2 (input 2) (W2)
					3	Result 3 (input 3) (W3)
					4	Result 4 (input 4) (W4)
					5	Root of the result 1 $\sqrt{W1}$
					6	Root of the result 2 $\sqrt{W2}$
					7	Root of the result 3 $\sqrt{W3}$
					8	Root of the result 4 $\sqrt{W4}$
					9	Result 1 squared (W1 ²)
					10	Result 2 squared (W2 ²)
					11	Result 3 squared (W3 ²)
					12	Result 4 squared (W4 ²)
					Parameters of the mathematical function serves to recalculate the measured input quantity into the output quantity (WF) basing on the function: WF=A<Operator1>B<Operator2>C<Operator3>D When recalculating the input signal the module recalculates at first the value basing on the individual characteristic and then, this result is transmitted to the arithmetical function. Examples of using mathematical functions are presented in the section „Examples of module programming”.	

7282	7641	Operator1	W/r	0... 3	Operators of the mathematical function	
7284	7642	Operator2	W/r	0... 3	Value	
7286	7643	Operator3	W/r	0... 3	0	Addition „+”
					1	Subtraction „-”
					2	Multiplication „*”
					3	Division „/”
					<p>The calculation of the output value is carried out basing on the assumed operator weight i.e.: At first multiplication and division operations are realised and after addition and subtraction operations. „*” and „/” operators and „+” and „-” operators have the same importance weight. Examples of using mathematical functions are presented in the section „Examples of module programming”.</p>	
7288	7644	WF Operator	W/r	0... 3	Mathematical operations on the result of WF function	
					Value	
					0	Operator switched off
					1	Extraction of roots \sqrt{WF}
					2	Squaring WF^2
					3	Inverse $1/WF$
					<p>The module at first calculates the function programmed by the user and then, its result can be submitted to further operations described in this point. In the case of the WF operator switching on the final result is situated in the WF register, however the result from before this operation is not accessible.</p>	
7290	7645	OC1	W/r	0... 4	Input quantity, on which the output 1 of OC type has to operate.	
					Value	
					0	Input 1 (W1)
					1	Input 2 (W2)
					2	Input 3 (W3)
					3	Input 4 (W4)
					4	Result of the function (WF)
					<p>Recalculated results, basing on the individual user’s characteristic (if it is switched on) and basing on programmed mathematical function (if the value 4 has been selected and the function is switched on) are transmitted to the output. In case of choosing the value 4 and switching the mathematical function off, the value 0 is transmitted to the output.</p>	

7292	7646	OC1 type	W/r	0... 4	Output 1 type of OC type	
					Value	
					0	Normal
					1	Schwitched on
					2	Schwitched off
					3	Manually schwitched on
					4	Manually schwitched off
					The graphical imaging of the OC type output operation is presented on the fig. 7.	
7294	7647	PrI OC1	W/r	-99999...99999	Lower threshold of output 1 OC type operation	
7296	7648	Prh OC1	W/r	-99999...99999	Upper threshold of output 1 OC type operation	
7298	7649	Dly OC1	W/r	0... 6500	The operation delay of the output 1 of OC type in seconds. The OC output will be steered up if the alarm active state will be longer than the programmed value.	
7300	7650	OC2	W/r	0... 4	The input quantity on which the output 2 of OC type is to operate.	
					Value	
					0	Result 1 (W1)
					1	Result 2 (W2)
					2	Result 3 (W3)
					3	Result 4 (W4)
					4	Result of (WF) function
					Recalculated results, basing on the individual user's characteristic (if it is switched on) and basing on programmed mathematical function (if the value 4 has been selected and the function is switched on) are transmitted to the output. In case of choosing the value 4 and switching the mathematical function off, the value 0 is transmitted to the output.	
7302	7651	OC2 type	W/r	0... 4	Output 2 type of OC type	
					Value	
					0	Normal
					1	Schwitched on
					2	Schwitched off
					3	Manually schwitched on
					4	Manually schwitched off
					The graphical imaging of the OC type output operation is presented on the fig. 7.	

7304	7652	Prl OC2	W/r	-99999...99999	Lower threshold of output 2 OC type operation						
7306	7653	Prh OC2	W/r	-99999...99999	Upper threshold of output 2 OC type operation						
7308	7654	Dly OC2	W/r	0... 6500	The operation delay of the output 2 of OC type in seconds. The OC output will be steered up if the alarm active state will be longer than the programmed value.						
7310	7655	Del min 1	W/r	0... 1	Erasing of the input 1 minimal value						
7312	7656	Del max 1	W/r	0... 1	Erasing of the input 1 maximal value						
7314	7657	Del min 2	W/r	0... 1	Erasing of the input 2 minimal value						
7316	7658	Del max 2	W/r	0... 1	Erasing of the input 2 maximal value						
7318	7659	Del min 3	W/r	0... 1	Erasing of the input 3 minimal value						
7320	7660	Del max 3	W/r	0... 1	Erasing of the input 2 maximal value						
7322	7661	Del min 4	W/r	0... 1	Erasing of the input 4 minimal value						
7324	7662	Del max 4	W/r	0... 1	Erasing of the input 2 maximal value						
7326	7663	Del min WF	W/r	0... 1	Erasing of the function result minimal value						
7328	7664	Del max WF	W/r	0... 1	Erasing of the function result maximal value						
7330	7665	Del min max	W/r	0... 1	Erasing of minimal and maximal value						
					<table border="1"> <tr> <td>Range</td> <td></td> </tr> <tr> <td>0</td> <td>lack of operation</td> </tr> <tr> <td>1</td> <td>erasing</td> </tr> </table> <p>Caution! After carrying out the erasing operation the value of this register is zero.</p>	Range		0	lack of operation	1	erasing
Range											
0	lack of operation										
1	erasing										
7332	7666	Comp W1	W/r	0... 40	Resistance value of wires connecting the sensor with the module input 1 The register is used only in the execution for the resistance or temperature measurement						
7334	7667	Comp W2	W/r	0... 40	Resistance value of wires connecting the sensor with the module input 2 The register is used only in the execution for the resistance or temperature measurement						

7336	7668	Comp W3	W/r	0... 40	Resistance value of wires connecting the sensor with the module input 1 The register is used only in the execution for the resistance or temperature measurement	
7338	7669	Comp W4	W/r	0... 40	Resistance value of wires connecting the sensor with the module input 1 The register is used only in the execution for the resistance or temperature measurement	
7340	7670	Standard	W/r	0... 1	Restoration of manufacturer's parameters	
					Value	
					0	lack of operation
					1	Write of manufacturer's parameters
					Introduction of the value 1 will cause the write of manufacturer's parameters into the module acc. to the table. 2	

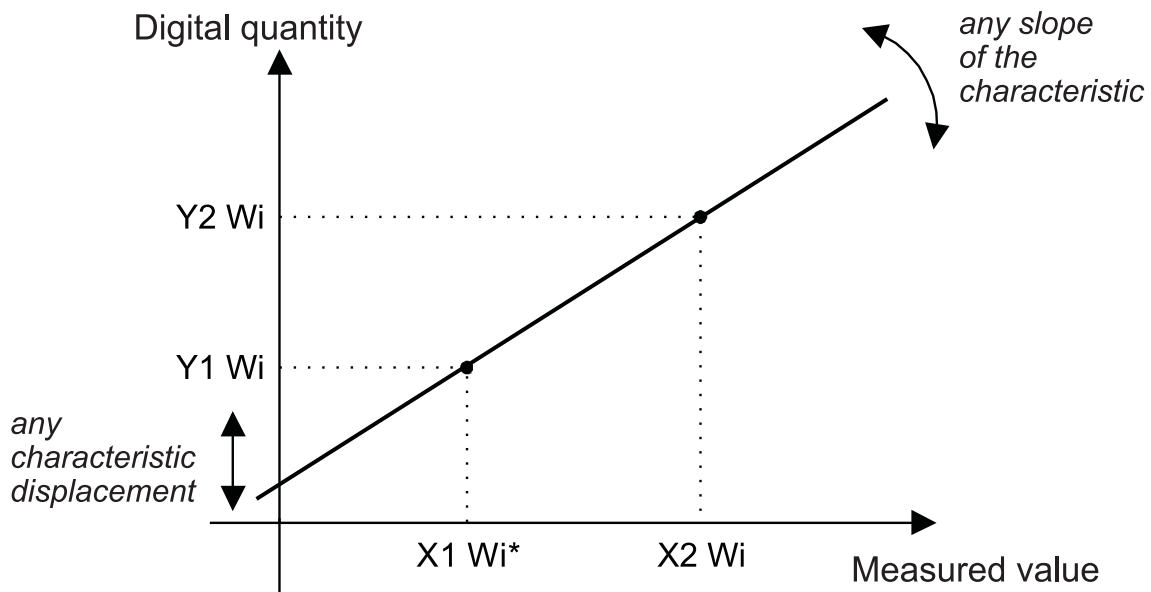

* $i = 1... 4$

X1 Wi value in the module input of systems => Y1 W1 digital value
X2 Wi value in the module input of systems => Y2 W1 digital value
Other points of the characteristic are calculated

Fig. 6. Individual user's characteristic

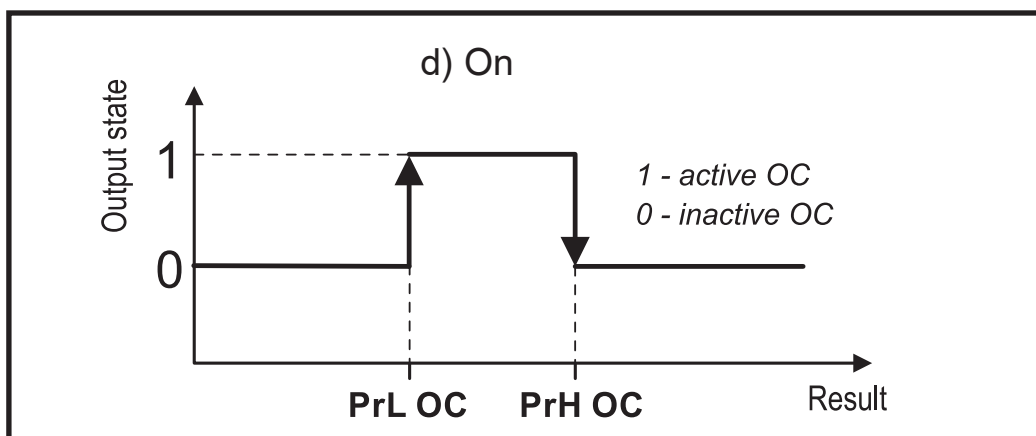
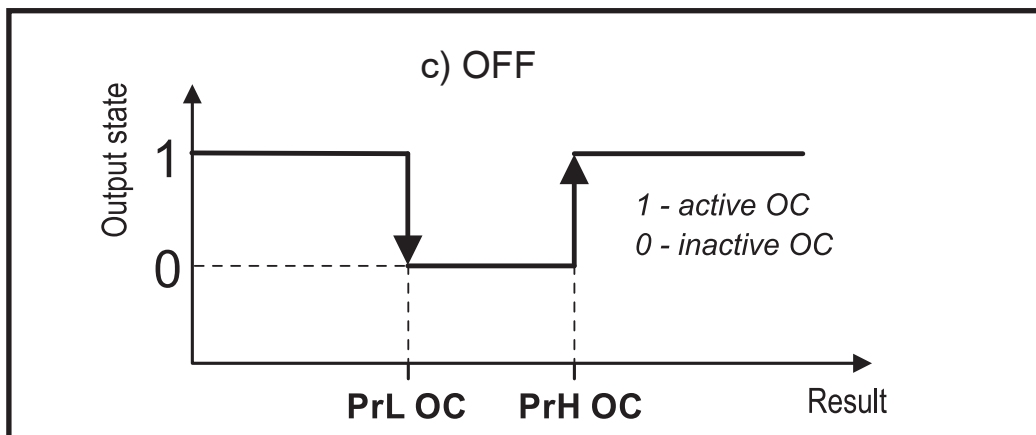
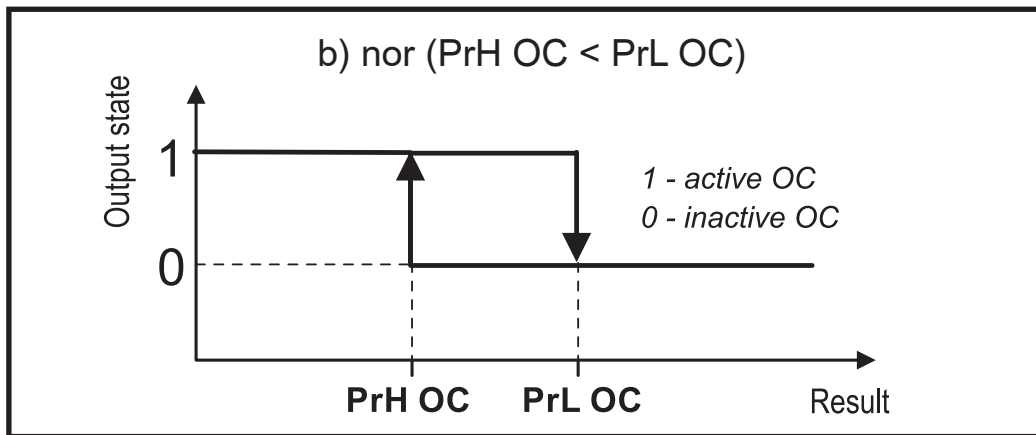
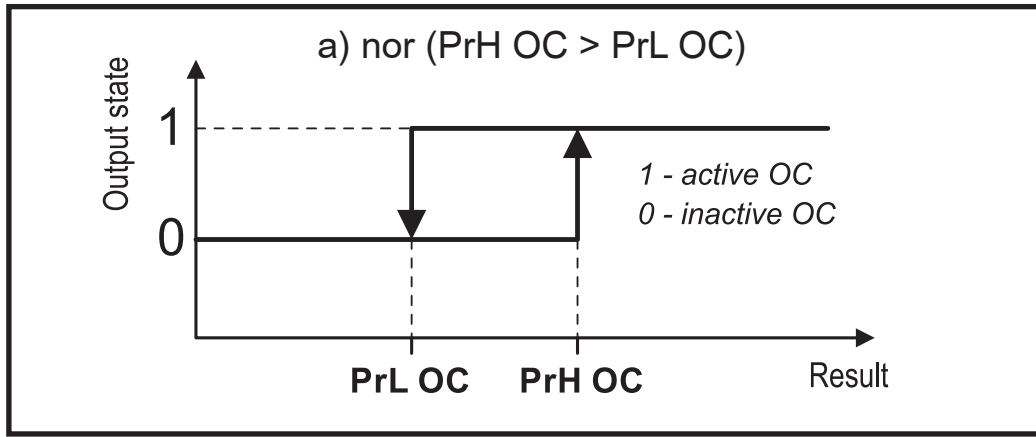


Fig. 7. Types of OC1 and OC2 output

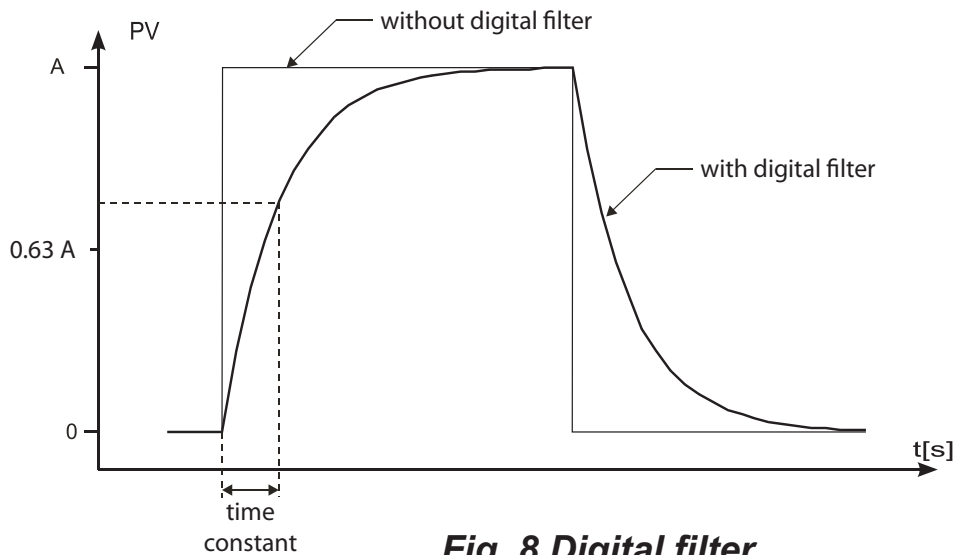


Fig. 8 Digital filter

In the case where the measurement is unstable, you can enable the digital filter with a programmable time constant. You need to set the minimum filter time constant at which the measurement is stable. A high time constant can cause delays in reading the rapid changes in the measurement.



Caution!

- In the execution for the measurement of resistance or temperature (Pt100) only the two-wire method is accessible. The resistance of the wire connecting the sensor with the module must be introduced from the master device (e.g. PC). For this purpose we propose:

- switch the module into the resistance measurement mode,
- short-circuit the ends of wires which the sensor is fixed to,
- read out the numeric value which represents the resistance of both wires,
- introduce the read out value into the Comp WX (X = 1... 2) register of the appropriate input.

Each input has a separate compensation register. The described procedure must be carried out for switched on measuring inputs. The resistance can be also measured by any meter (class < 0.1%) and introduced into registers.

- In case on user's individual characteristic switched on, the measured result is linearly transformed in accordance with introduced **X** and **Y** parameters. Then, the calculated value is found in the result register.
- In case of mathematical operations switching on, the result in the **WF** register is calculated in accordance with the equation introduced to the module. Sequence of calculations: result recalculation basing on the user's individual characteristic (if it is switched on), calculation of the introduced function, carrying out the operation on the function result.
- The module supervises currently the value of the introduced parameter . In case when the introduced value is beyond the range of changes given in the table 1, the module does not make the parameter write.

<i>Symbol</i>	<i>Manufacturer's value</i>
Input 1,2,3,4	1 (switched on)
Cnt W1, Cnt W2, Cnt W3, Cnt W4	1 (1 s)
Ind W1, Ind W2, Ind W3, Ind W4	0 (switched off)
X1 W1, X1 W2, X1 W3, X1 W4	0
Y1 W1, Y1 W2, Y1 W3, Y1 W4	0
X2 W1, X2 W2, X2 W3, X2 W4	0
Y2 W1, Y2 W2, Y2 W3, Y2 W4	0
A,B,C,D	0 (switched off)
Operator 1,2,3	0 („+“)
Operator WF	0 (switched off)
Rate	2 (9600)
Mode	4 (RTU 8N2)
Address	1
OC1	0 (input 1)
Typ OC1	4 (switched off manually)
PrI OC1	0
Prh OC1	0
Dly OC1	0 (lack of delay)
OC2	0 (Input 1)
Typ OC2	4 (switched off manually)
PrI OC2	0
Prh OC2	0
Dly OC2	0 (lack of delay)
Comp W1, Comp W2, Comp W3, Comp W4	0

6. TECHNICAL DATA

INPUTS:

Depending on the execution code for individual channels:

- voltage measurement 0...10 V input resistance > 1 M Ω
- current measurement 0...20 mA input resistance < 10 Ω
- resistance measurement 0... 400 Ω
- Pt100 (- 200... + 850) $^{\circ}$ C

Current flowing through the Pt 100 sensor: < 250 μ A

Resistance of leads connecting the

resistance thermometer with the module: max 20 Ω /wire

Pt100 characteristic acc. to EN 60751+A2

Error detection in measuring circuit:

voltage measurement below -0.5 V and above 10.5 V

current measurement below -1 mA and above 21 mA

Pomiar rezystancji below 420 Ω

Pt100 measuring range exceeding

OUTPUTS:

– open collector (OC)

voltageless of OC type with npn transistor
(maximal load 25 mA)

range of added voltages: 5... 24 V d.c.

– digital

a) RS-485 interface

transmission protocol	MODBUS
RTU	8N2, 8E1, 8O1, 8N1
baud rate	2400...115200 bauds
address	1... 247

b) RS-232 interface

transmission protocol	MODBUS
RTU	8N1
baud rate	9600 bauds
address	1

maximal response time to the query frame: 100 ms¹⁾.

Basic error 0.1% of measuring range

Additional error from ambient temperature changes \pm (0.1% of range/10K)

Measurement time of a single input: 100 ms...400 ms

Rated operation conditions:

- supply voltage depending on the execution code	85... 253 V a.c./d.c. 20... 50 V a.c./d.c.
- supply voltage frequency	40... 440 Hz
- ambient temperature	-10... <u>23</u> ...55°C
- storage temperature	-25...+85°C
- relative humidity	< 95% (condensation inadmissible)
- preheating time	10 min

Sustained overload:

- resistance thermometers	1%
- measurement of voltage, current and resistance	10%

Short-duration overload (3 s):

- voltage input	10 Un
- current input	10 In

Ensured protection grade acc. to EN 60529:

- through the housing	IP 40
- electrical connections	IP 20

Dimensions

45 × 120 × 100 mm

Weight

< 0.3 kg

Fixing

on a 35 mm rail

Power consumption

< 4 VA

Resistance against decays

acc. to EN 50082-2

Electromagnetic compatibility:

- immunity	acc. to EN 50082-2
- emission	acc. to EN 50081-2
- additional error from electromagnetic hazard	< 0.2%

Safety requirements acc. to EN 61010-1 standard:

- installation category	III
- pollution grade	2
- phase-to-earth working voltage:	
- supply	300 V
- input	50 V
- output	50 V



¹⁾ response time for readout

7. BEFORE A FAILURE WILL BE DECLARED

In case of incorrect symptoms please to acquaint with the table below.

SYMPTOMS	PROCEDURE	REMARKS
1. The module diode is not illuminated.	Check the connection of the network cable	
2. The module does not communicate with the device master via the RS-232 port. Lack of transmission signalling on RxD and TxD diodes.	Check if the wire is connected to the appropriate module socket. Check if the device master is set on 9600 baud rate, 8N1 mode and address 1.	(RS-232 has constant transmission parameters)
3. The module does not communicate with the device master via the RS-485 port. Lack of transmission signalling on RxD and TxD diodes.	Check if the wire is connected to the appropriate module terminal. Check if the device master is set on the same transmission parameters as the module (baud rate, mode, address). In case of necessity to change transmission parameters when we cannot communicate through RS-485 one can use the RS-232 port which has constant transmission parameters (in case of further problems, see the section 2). After changing e RS-485 parameters into the required one, one can switch over on RS-485 port.	
4. The module returns the value 0 on the given input.	Check if the input which the value 0 is returned on, is not switched out and if the averaging time is > 0.1 s. Check if the user's individual characteristic with zero parameters is not switched on.	
5. The result in WF register (function result) is inconsistent with our expectations,	Check the correctness of the introduced formula. Check if the operation sequence is correct. The operator weight is essential - at first, multiplication and division are carried out and next, addition and subtraction. Perhaps it is sufficient to reorder results in the formula. See programming examples in the section 8	
6. In result registers the IE20 value is min or max (e.g. in Lumel Energy „***”)	Check the correctness of the input signal connection. The IE20 value is set when the measured signal is beyond the measuring range. The recorded IE20 value in max and min registers remains till the time of its erasing by the user.	
7. The value of the measured resistance or temperature is overstated.	Check if correct values of the wires' resistance have been introduced to Comp W1, Comp W2, Comp W3 and Comp W4 registers. In case of necessity, one must introduce this value. See the user's manual under the description of the Status 2.	Concerns only the module for resistance measurement or for co-operation with a Pt100 sensor.

8. EXAMPLES OF SM2 MODULE PROGRAMMING

Example 1: Switching appropriate measuring inputs and digital filter on
Module operation with two inputs (e.g. 1 and 3). The first input has the filter with time constant of 100 ms (0.1s) and the third input with a 100 s constant time.

One must program the parameter:

- Input 1 = 1
- Input 2 = 0
- Input 3 = 1
- Input 4 = 0
- Cnt W1 = 0.1
- Cnt W3 = 100

The module will carry out the measurement on the input 1 and 3.

In the register corresponding to first input, the result will be refreshed every 100 ms and in the register corresponding to third register, every 10 minutes.

Example 2: Programming the user's individual characteristic

One must program the module in such a way that it measures the water level in a tank with characteristic: 4 mA => 0 m., 20 mA => 3.6 m. in the input 1, whereas on the input 2, the temperature with characteristic: 4 mA => 0°C, 20 mA => 50 °C

One must program the parameter:

- Ind W1 = 1
- X1 W1 = 0
- Y1 W1 = 0
- X2 W1 = 3.6
- Ind W2 = 1
- X1 W2 = 4
- Y1 W2 = 0
- X2 W2 = 20
- Y2 W2 = 50

Example 3: Programming mathematical function

One must program the module in such a way that it measures the current on the input 1, the voltage on the input 2, and calculate the apparent power of the variable signal. The module is working with transducers of variable signal into a standard signal, e.g. P11Z transducer. The measurement of max current = 1200 A (0 => 4 mA; 1200 A => 20 mA), measurement of max voltage = 400 V (0 V => 0 V; 400 V => 10 V).

One must program the parameter:

- Ind W1 = 1
- X1 W1 = 4
- Y1 W1 = 0
- X2 W1 = 20
- Y2 W1 = 1200
- Ind W2 = 1
- X1 W2 = 0
- Y1 W2 = 0
- X2 W2 = 10
- Y2 W2 = 400

one must carry out the following equation: $S = U \cdot I$

- A = 1 (result from input 1)
- B = 2 (result from input 2)
- Operator 1 = 2 (multiplication).

The apparent power 0...480 000 VA will be calculated in the WF register, whereas the 0...1200 A current in the result register 1, and the 0...400 V voltage in the result register 2.

Example 4: Programming mathematical function

The module is working with:

On the input 1 -> a.c. current transducer on standard signal, e.g. P11Z.

Current measurement on the 5 A range (transducer characteristic -> 0 A => 4 mA, 5 A => 20 mA).

On the input 2 -> a.c. voltage transducer on standard signal, e.g. P11Z.

Voltage measurement on the 400 V range (transducer characteristic -> 0 V => 0 V

400 V => 10 V)

On the input 3 -> active on standard signal, e.g. P34P or PP84

Active power measurement on the 2000 W range (transducer characteristic 0 W => 4 mA 2000 W => 20 mA).

Its task is to transmit voltage, current and reactive power values to the system.

One must program the parameter:

- Ind W1 = 1
- X1 W1 = 4
- Y1 W1 = 0
- X2 W1 = 20
- Y2 W1 = 5
- Ind W2 = 1

- X1 W2 = 0
- Y1 W2 = 0
- X2 W2 = 10
- Y2 W2 = 400
- Ind W3 = 1
- X1 W3 = 4
- Y1 W3 = 0
- X2 W3 = 20
- Y2 W3 = 2000

One must carry out the following formula:

$$Q = \sqrt{S^2 - P^2} = \sqrt{(U \cdot I)^2 - P^2} = \sqrt{U^2 \cdot I^2 - P^2}$$

And program as follows:

- A = 10 (squared result from the output 2)
- B = 9 (squared result from the output 1)
- C = 11 (squared result from the output 3)
- Operator 1 = 2 (multiplication)
- Operator 2 = 1 (subtraction)
- Operator WF = 1 (extraction of roots from the function result)

The reactive power 0...2000 var ($Q = \sqrt{S^2 - P^2}$) will be calculated in the WF register, whereas the current 0...5 A in the result 1 register, the voltage 0...400 V in the result 2 register and the active power 0...2000 W in the result 3 register.

Example 5 : Programming mathematical function

The example is based on the example 4, but instead the calculation of the reactive power, one must calculate $\cos\phi$.

- We program individual characteristic parameters acc to the example 4, however the function must be programmed acc. to the formula:

$$\cos\phi = \frac{P}{S} = \frac{P}{U \cdot I}$$

We must program:

- A = 3 (result from the input 3, power)
- B = 2 (result from the input 2, voltage)
- C = 1 (result from the input 3, current)
- Operator1 = 3 (division)
- Operator2 = 3 (division)

We have to pay attention to the weight of mathematical operations. At first, the multiplication and division are carried out, and next, the subtraction and addition.

Since the weight of multiplication and division are the same, the first operation in the formula is carried out.

For this reason, the given formula above must be written as:

$$\cos\varphi = P/U/I \text{ and not as } P/U *I.$$

In the WF register, the phase displacement angle will be calculated:

$$(\cos\varphi = \frac{P}{S} = \frac{P}{U \cdot I}),$$

However, the current 0...5 A in the result 1 register, the voltage 0...400 V in the result 2 register and the active power 0...2000 W in the result 3 register.

Example 6 : Programming the OC type input

One must program the module such a way that the OC1 output could react on the input 1 and the OC2 output on the input 4. The signal on the input 4 is recounted into temperature (4 mA = 0°C ; 20 mA = 100 °C) The OC1 output is to be active in the interval 2...4 V, and the OC2 output is to be active after exceeding 50°C and be deactivated below 20°C.

One must program the parameter:

- Ind W4 = 1
- X1 W4 = 4
- Y1 W4 = 0
- X2 W4 = 20
- Y2 W4 = 100
- OC1 = 0
- Typ OC1 = 1
- Prl OC1 = 2
- Prh OC1 = 4
- OC2 = 3
- Typ OC2 = 0
- Prl OC1 = 20
- Prh OC1 = 50

The OC1 output will operate acc. to the fig. 7a and the OC2 output acc. to the fig. 7d.

9. ORDERING CODES

SM2 Module	XX	X	X
Input signal*:			
4 voltage inputs	0...10 V	00	
4 current inputs	0/4...20 mA.....	01	
2 voltage input + 2 current input	0...10V + 0/4...20 mA.....	02	
4 resistance or Pt100 inputs	Pt100 or resistance < 400 Ω	03	
on order**		XX	
Supply:			
85... 253 V a.c./d.c.....		1	
20... 50 V a.c./d.c.....		2	
on order **		X	
Acceptance tests:			
without a quality inspection certificate		8	
with a quality inspection certificate		7	
acc. customer's agreement**		X	

* Possible version of a cheaper module with a smaller quantity of inputs.
Possibility to mix input kinds (e.g. 1 voltage and 3 current inputs).

** Code numbers must be agreed with the manufacturer.

EXAMPLE OF ORDER

When ordering, please respect successive code numbers.

Code: **SM2 01 1 0** means:

- SM2** - 2-channel module of analog inputs,
- 01** - module with 4 current inputs 0/4...20 mA,
- 1** - supply voltage: 85... 253 V a.c./d.c.
- 8** - without a quality inspection certificate.

10. MAINTENANCE AND WARRANTY

The SM2 module does not require any periodical maintenance.

In case of some incorrect operations:

1. After the dispatch date and within the period stated in the warranty card

One should return the instrument to the Manufacturer's Quality Inspection Dept. If the module has been used in compliance with the instructions, we warrant to repair it free of charge. The disassembling of the housing causes the cancellation of the granted warranty.

2. After the warranty period:

One should send the instrument to repair it in an authorized service workshop. Spare parts are available for the period of five years from the date of purchase.

Our policy is one of continuous improvement and we reserve the right to make changes in design and specifications of any products as engineering advances or necessity requires and revise the above



“LUMEL” S.A.

ul. Słubicka 1

65-127 Zielona Góra - Poland

Tel.: (48-68) 45 75 100 (exchange)

Fax: (48-68) 45 75 508

e-mail: lumel@lumel.com.pl

<http://www.lumel.com.pl>

Export Department:

Tel.: (48-68) 45 75 139 or 305

Fax: (48-68) 325 40 91

e-mail: export@lumel.com.pl